Optronis

OptoAnalyse

Ver. 3.50

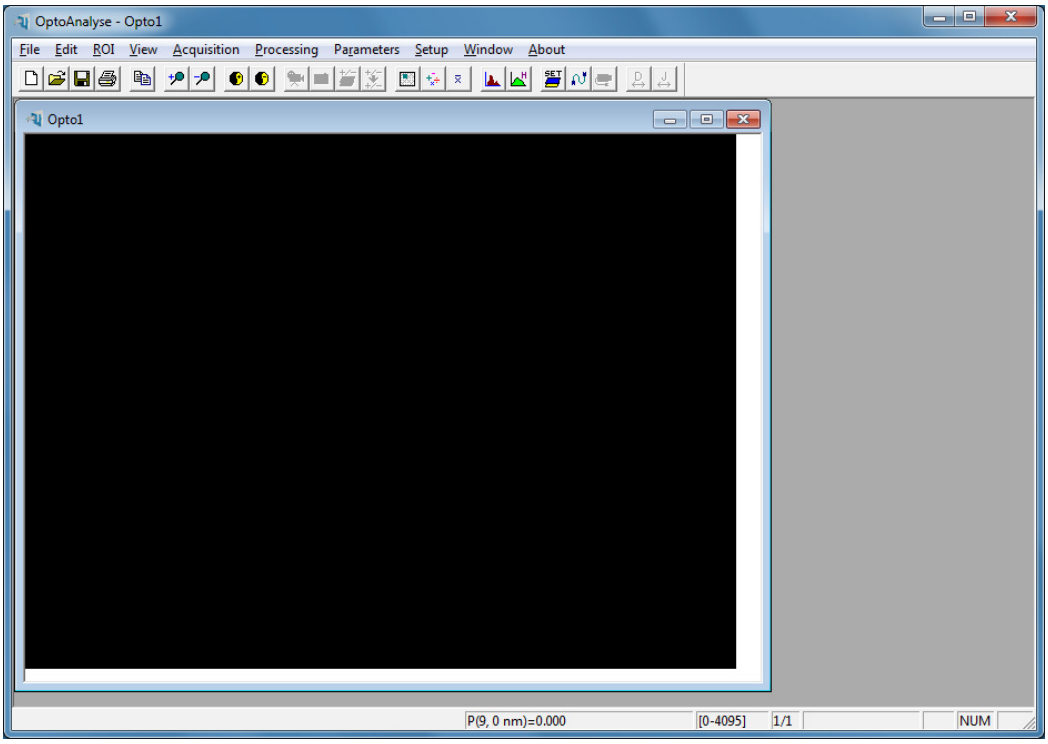

User Manual

Ref.: 3991-SU-01-I

Contents

Introduction **5**
Compatibility 5
Overview 6
Network interface and Password protection 7
Attention 7
Installation **8**
Driver and Frame Grabber Installation 8
ANIMA-PX 8
SCRU-SE-A 8
SRU-ED 9
SRU-BA 9
SI 1000 and SI 1000-4k 9
OptoAnalyse Installation 11
Spectrometer Installation 12
Multi camera control 12
Configuring ANIMA-PX for multi camera applications 14
Setup readout camera 15
Re-Start after modified Streak Camera Configuration 20
Frame Window **20**
Region Of Interest ROI 22
File Menu 23
New 23
Open 23
Close 23
Save 23
Save ROI as … 24
Save As … 24
Export 24
Import 24
Print 25
Print Preview 25
Print Setup 25
Recent Files 25
Exit 25
Edit Menu 25
Copy Image 25
Copy ROI like a Bitmap 25
Copy ROI like an ASCII Text 25
ROI Menu 26
Copy 26
Paste 26
Duplicate 26
Save as Default 26
Apply Default ROI 26
View Menu 26
Zoom 26
Monochrome 27
Gamma Correction 27

Pseudo colors 28
Toolbar 28
Status bar 28
Acquisition Menu 28
Real Time 28
Snapshot 29
Single Acquisition 29
Acquisition 29
Sequence 29
Processing Menu 30
Filter 30
Arithmetic 31
Mean Value 31
Uniformity Correction 32
Geometrical Correction 32
Drift Correction 33
Jitter Correction 33
Horizontal Profile 33
Vertical Profile 33
Parameter Menu 33
Image Comment 33
Setup Menu 34
Acquisition 34
Correction 36
Jitter correction 38
Reference mark validity criterion 39
Sequence 40
Scaling 43
Open 47
Save 47
Photon Detection 47
Geometrical Correction 48
Static Distortion Correction 48
Position 50
Row / Column 50
File 50
Speed Non-Linearity Correction 50
Spectrometer 53
Parameters Configuration 53
Timing Controller 56
Readout Camera 65
Streak Camera 71
Network Setup 74
Window Menu 76
Cascade 76
Tile 76
Arrange Icons 76
Window list 1, 2, 3... 76
About Optoscope 76

Profile Window 77
Range of Interest 78

Vertical Scaling 78
Horizontal Scaling 78
File Menu 78
New 78
Open 79
Close 79
Save 79
Save As 79
Print 79
Print Preview 79
Print Setup 79
Exit 79
Edit Menu 80
Copy like a Bitmap to the Clipboard 80
Copy like a Bitmap to the Clipboard 80
View Menu 80
Zoom In 80
Zoom Out 80
Linear Scale on Axis Y 80
Logarithm Scale on Axis Y 80
Drawing with Dots 80
Drawing with Lines 81
White Background 81
Black Background 81
Measure Menu 81
FWHM 82
COG 82
Max 82
FWHM_Gauss 82
COG_Gauss 82
Max_Gauss 82
Window Menu 82
Cascade 82
Tile 82
Arrange Icons 83
Window list 1, 2, 3... 83
About Menu 83
About Optoscope 83

Annex A: Specifications 84
Main Function 84
Characteristics 84
Photon Counting 85

Annex B: Structure of Optoscope files 86
Frame file with extension .IMD (OptoAnalyse 3.0 and higher) 86
Image Information file with extension .IMI (from OptoAnalyse 3.0) 86
Frame file with extension IMG (up to OptoAnalyse 1.4) 87
Profile files with PRH and PRV extension 88
Histogram file with HIS extension 89

Annex C: List of shortcuts used with the keyboard 90
Shortcuts for all sections 90

Shortcuts for the frame section 90
Shortcuts for the profile section 91

Annex D: Technical data 92

Annex E: Correction Techniques 93
Principal Considerations 93
Acquisition of Dark Signal Frame 93
Acquisition of Uniformity Frames 94
Distortion Correction 96
Principle 96
Distortion Correction with different Display Orientation 97
Distortion Text File 98
Distortion Binary File 99

Trouble Shooting 100
Program Start 100
IP and Mask of Streak Camera unknown 100
IP Conflict 100
Password Unknown 100
Two Ethernet Interfaces on the PC 100
Network Settings Reset 101
Readout Camera not found 101
OptoAnalyse does not show readout images 101
SCRU-SE-A Readout Camera is not working 102
No Realtime display and no Acquisition possible 102
Configuration mismatch in multi camera configurations 102
No Geometrical Correction is processed 103

Introduction

The OptoAnalyse program is used with the Optoscope or Optoscope-SC (SC-xx) streak camera for image acquisition and analysis. The program allows acquiring image data capture with different streak camera readout units. Various acquisition modes and image analysis functions needed to operate streak cameras are available. To control the streak camera functions the OptoControl box is integrated.

Compatibility

The OptoAnalyse software can be used in combination with the following components. Restriction might apply for particular configurations of readout camera and operating system due to hardware driver availability.

Streak Camera System

SC-10
SC-20
SC-51
…
SCMU-ST
SCMU-XR

		Operating System			
		Windows XP		Windows 7	
		32 Bit	64 Bit	32 Bit	64 Bit
Readout Camera	ANIMA-PX	√	-	√	-
	SCRU-SE	√	-	-	-
	SCRU-SE-A	√	-	-	-
	SRU-BA	√	-	√	?
	SI 1000	√	-	√	-
	SRU-ED	√[1)]	-	√[1)]	√

√ = Tested
? = Not tested
- = Not compatible
[1)] Full operation but reduced frame rate

Overview

The software captures frames from the readout camera and can control the OPTOSCOPE streak camera system.

Basic software functions are:

- Real-time video display and profile extraction dedicated to streak camera applications.
- Signal to noise improvement by analogue accumulation or photon counting mode.
- Operation with 32 bit frame memory for fixed-point numbers ranging from $-2.147 \cdot 10^6$ to $+2.147 \cdot 10^6$ with 0.001 precision.
- Acquisition in continuous or single-shot mode
- Gray level / Gamma correction / Pseudo-colour palette display.
- Post-processing (arithmetic operations, digital filter, histogram, profiles, mean value).
- Export in uncompressed format (Bitmap or TIFF).
- Complete reporting of streak camera system setup.
- Multi camera control with ANIMA-PX readout (Version 3.10)
- Automatic trigger delay adjustment with external timing controller (Version 3.40 for DG645-SRS and TDC-Optronis)
- Distortion correction with graphical reference grid editor
- Drift correction
- Jitter correction

Three window classes referred to as windows are available. None, one or more windows can be used the same time.

FRAME window is used to display a frame. This typically shows the current captured frame or a frame loaded from the hard disk.

PROFILE windows are used to display horizontal or vertical profiles based on the entire frame or a region of interest (ROI). The horizontal profile is the pixels sum column by column in a rectangular area and divided by the number of lines. The vertical profile is the pixels sum line by line in a rectangular area and divided by the number of columns.

HISTOGRAM windows are used to display the number of pixels with a same grey level. The processing uses the full frame or a ROI to build the histogram

Network interface and Password protection

The OptoAnalyse software can control the SCMU-ST streak camera via RS-232 interface or the SC-xx streak cameras via Ethernet interface. The SC-xx cameras have a fixed IP address. A password can be but does not need to be defined for the streak camera to protect the device from unauthorized use. The IP address as well as the password of the SC-xx streak camera are saved inside the SC-xx streak camera and can be changed by using the OptoAnalyse software. The factory set IP is 192.254.128.254 and no password is defined.

After installation of the OptoAnalyse software the IP address of the streak camera that need to be controlled has to be programmed. This IP address is saved on the PC and is used to find the streak camera after program start. A password can be but does not need to be defined. This password is also saved on the PC and is verified by the streak camera prior to allow access. The default IP is 192.254.128.254 and no password is defined.

In case the IP address inside the streak camera and the IP saved on the PC are not identical, no communication is possible. As long as no password is defined inside the SC-xx streak camera, the access is not protected independent whether a password is saved on the PC or not. Only if a password is defined inside the streak camera, the password saved on the PC has to be identical to allow access after OptoAnalyse program start. If the access is denied, a dialog box asks the user to enter the correct password.

Attention

Never use the OptoAnalyse program and particularly the OptoControl box if you are not familiar with the operation of the streak camera and the requirements necessary to avoid damages to the camera. Carefully read the operation manual of the streak camera and make sure never to over illuminate the optical input of the camera.

Installation

The OptoAnalyse software can be used with different readout cameras. For the installation of the readout camera on the rear of the streak camera, please refer to the corresponding section of the particular readout camera user manual.

Before installing the OptoAnalyse software the readout camera installation has to be completed. Part of the readout cameras are provided with their associated frame-grabber that has to be installed inside the PC prior to installing the software driver.

Driver and Frame Grabber Installation

This section provides a short description for the installation of frame-grabbers inside the PC as well as the installation of the driver. More details can be found on the documentation provided with the readout camera.

Attention:

The frame-grabber can be damaged by electrostatic discharge. The board is delivered in an anti-static bag and must be handled with care. Manipulate the board only when electrically connected to ground potential. Also connect PC to ground potential during manipulation.

ANIMA-PX

The ANIMA-PX camera uses components of the PixelFly camera from PCO.

- The PC has to be switched off. Install the frame-grabber in the PC
- Connect the ANIMA-PX camera and the frame-grabber using the cable provided. Remark: Camera connector and cable are physically identical to standard network components but must not be connected to any network component.
- Switch on the PC.
- Windows should detect the new device automatically and prompt for the specific driver to be loaded
- Install the PixelFly driver following the instructions described in the PixelFly manual.
- PixelFly CamWare control application can be installed to verify the camera operation but is not required by the OptoAnalyse software.

SCRU-SE-A

The SCRU-SE-A camera uses components of the SensiCam camera from PCO.

- The PC has to be switched off. Install the frame-grabber in the PC
- Connect the SCRU-SE-A camera and the frame-grabber using the coaxial cable or the optical cable

- Connect the power supply of the SCRU-SE-A camera. Switch on the camera.
- Switch on the PC.
- Windows should detect the new device automatically and prompt for the specific driver to be loaded
- Install the SENSICAM driver following the instructions described in the PCO manual.
- SENSICAM control application can be installed to verify the camera operation but is not required by the OptoAnalyse software.

SRU-ED

The SRU-ED camera uses components of the pco.edge camera from PCO and frame grabber from Silicon Software.

- Details for installation are provided with the manual for the SRU-ED

SRU-BA

The SRU-BA camera has a GigE interface and does not use a frame grabber. No hardware installation on the PC is therefore required.

- For driver installation please refer to the SRU-BA user manual.

SI 1000 and SI 1000-4k

The SI 1000 and SI 1000-4K cameras have dedicated interface boards.

- For hardware installation of the camera please refer to the SI 1000 user manual.
- For interface board and driver installation, follow also SI 1000 user manual.

Camera Set-file installation

Each camera is provided with a particular setup file containing individual camera parameters needed for optimized performance of the readout camera. The setup file contains the camera serial number and has the extension .SET. Example: “1000-123.SET”

- Copy the setup file into the OptoAnalyse program folder normally “C:\Program Files\Optronis\OptoAnalyse-SI vX.XX\CFG”. The setup file (*.set) can be found on the Spectral Instruments data medium.

During the first launch of OptoAnalyse no setup file is selected and the software asks to select a valid file. Once the OptoAnalyse software is operating, the Setup/Readout Camera menu allows to define the setup file at any time.

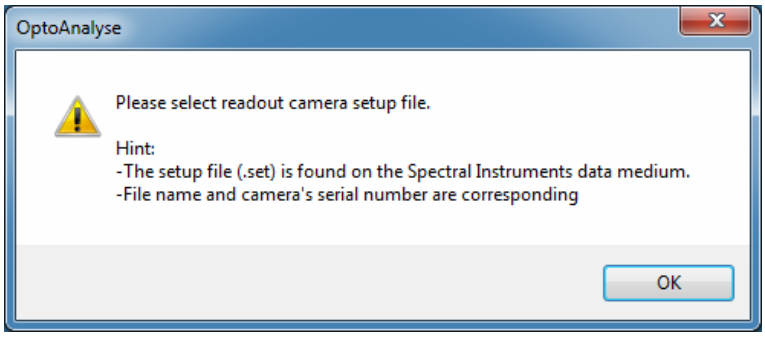
OptoAnalyse
Please select readout camera setup file.
Hint:
-The setup file (.set) is found on the Spectral Instruments data medium.
-File name and camera's serial number are corresponding
OK

Click “OK” and select the file copied previously.

If no setup file is selected, a file with dummy parameters is used and the following message appears after each program start.

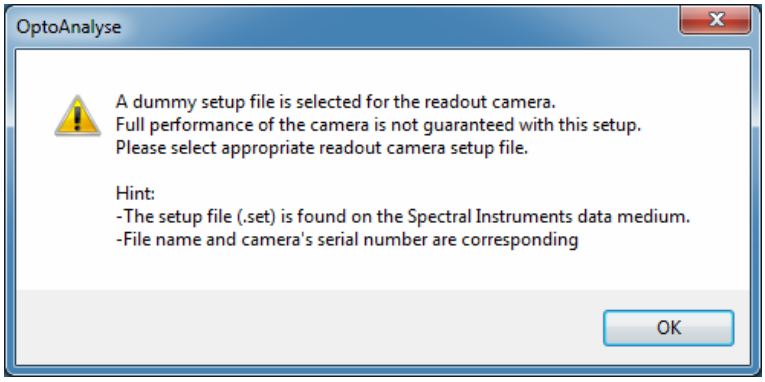
OptoAnalyse
A dummy setup file is selected for the readout camera.
Full performance of the camera is not guaranteed with this setup.
Please select appropriate readout camera setup file.
Hint:
-The setup file (.set) is found on the Spectral Instruments data medium.
-File name and camera's serial number are corresponding
OK

After clicking on “OK” the setup file can be selected again. No particular message appears after the successful selection.

If the setup file selection is cancelled the message below appears.

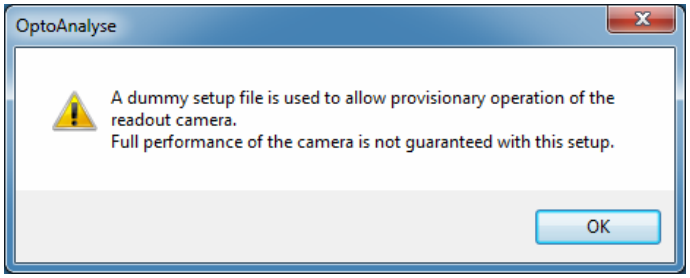
OptoAnalyse
A dummy setup file is used to allow provisionary operation of the readout camera.
Full performance of the camera is not guaranteed with this setup.
OK

Is the specified setup file is not found then OptoAnalyse request again the setup file selection.

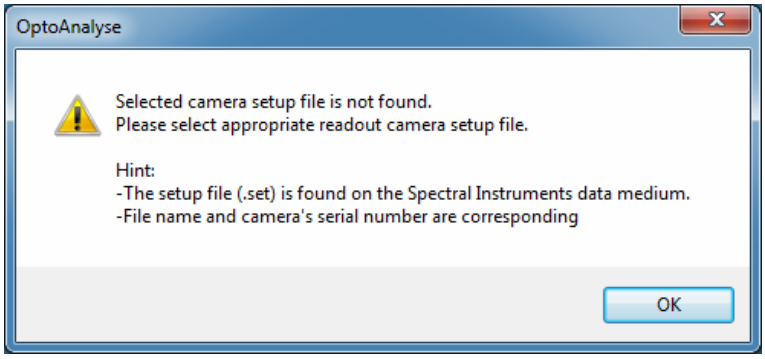
OptoAnalyse
Selected camera setup file is not found.
Please select appropriate readout camera setup file.
Hint:
-The setup file (.set) is found on the Spectral Instruments data medium.
-File name and camera's serial number are corresponding
OK

OptoAnalyse Installation

Prior to proceed with the installation of the OptoAnalyse, the setup of the readout camera driver and eventually the installation of the readout camera frame grabber has to be completed. Administrative rights are required during installation so make sure to logon accordingly. Depending on the readout camera to be used, the OptoAnalyse software is available with different options. Make sure to install the OptoAnalyse with the correct option.

Readout Camera	Option
ANIMA-PX	/PX
SCRU-SE / SCRU-SE-A	/SE
SRU-BA	/BA
SRU-ED	/ED
SI 1000	/SI

Then follow the steps below:

- The software SETUP.EXE is automatically launched and starts the installation of the OptoAnalyse application.
- Follow the instruction given by this installation procedure
- Reboot your system.

The Installation procedure will automatically change the permission for the access to the “OptoAnalyse” directory to “Full Control” on Windows 7 systems. Only in case this change needs to be done manually, follow the instructions below:

- Open the “Windows-Explorer” and navigate to the “Program Files” path:
  Windows 7 – 64 Bit: c:\Program Files (x86)
  Windows 7 – 32 Bit: c:\Program Files
- Right click the folder OptoAnalyse to open the context menu and click “Properties”.
- Select the tab “Security” and press the button “Advanced”.
- Select the tab “Permission” and press the button “Change permissions…”.
- Select the user “User” and press the button “Edit…”.
- Check the field “Allow” in the row “Full Control” and close all dialogs with “OK”.

Spectrometer Installation

OptoAnalyse versions 3.21 and later provide spectrometer control. For hardware installation please refer to the manual of the spectrometer provider and the manual “Coupling Spectrometer User Manual” (Ref. 3818-SU-02). For software control of the spectrometer the corresponding driver needs to be installed. This driver is provided by the spectrometer manufacturer and has to be installed before it can be used by OptoAnalyse. Spectrometer related commands of OptoAnalyse including grating selection, wavelength setup and wavelength calibration are described later on this manual.

Multi camera control

The OptoAnalyse software version 3.10 and higher can be used to control more than one OPTOSCOPE-SC streak camera and more than one ANIMA-PX readout camera. If only one streak camera and one readout camera is used, this section can be skipped and installation continues with the “Setup readout camera” section.

To allow multi camera control the OptoAnalyse software needs to be installed multiple times at different locations. Additionally, minor adaptations on the corresponding INIT.INI files need to be made.

- Install OptoAnalyse software as described above. Make sure the driver for the readout camera is installed before.
- During installation the setup program requests the name of the directory where to save the software. Confirm or modify the proposed location and note this path.
  Example: *C:\Program Files\OptoAnalyse\OptoAnalyseV3.10*
- Rename the directory where the software had been installed.
  Example: *C: \Program Files \OptoAnalyse\OptoAnalyse1*
- Copy the directory or install the software as many times as streak systems need to be controlled. Rename these directories.

After installation the structure should appear similar to this:

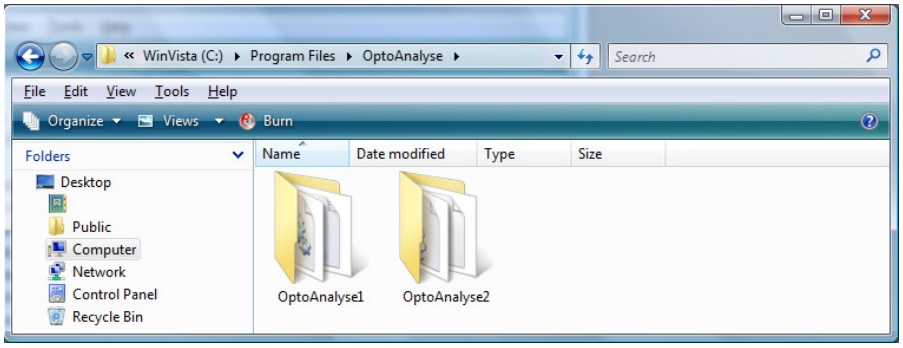

Remark: Directory names where OptoAnalyse software is installed might be named according to the application or configuration of the different streak camera systems. For example *OptoAnalyse_Synchroscan* and *OptoAnalyse_Spectroscopy*.

A shortcut on the desktop might be created for each program installation and named accordingly.

The INIT.INI file of each installation has to be modified in order to configure each OptoAnalyse software for a particular streak camera and readout camera.

- For each streak camera system note the serial number (SN) of the OPTOSCOPE streak camera and the ANIMA-PX readout camera. The SNs are printed on the device and they are written on the memory inside the camera.
  Remark: As the SN of the ANIMA-PX can be user modified it would be possible to use any other name to identify the ANIMA-PX. Nevertheless it is recommended to use the SN.
- Define which software installation (example *C:\...\OptoAnalyse1* or *C:\...\OptoAnalyse2*) should work with the streak camera system and edit the **corresponding** INIT.INI file. The file is found on the corresponding directory and can be edited for example by using Notepad. The parameters “ANIMA-PX_SN” and “OPTOSCOPE_SN” contain the corresponding SNs.

Example:

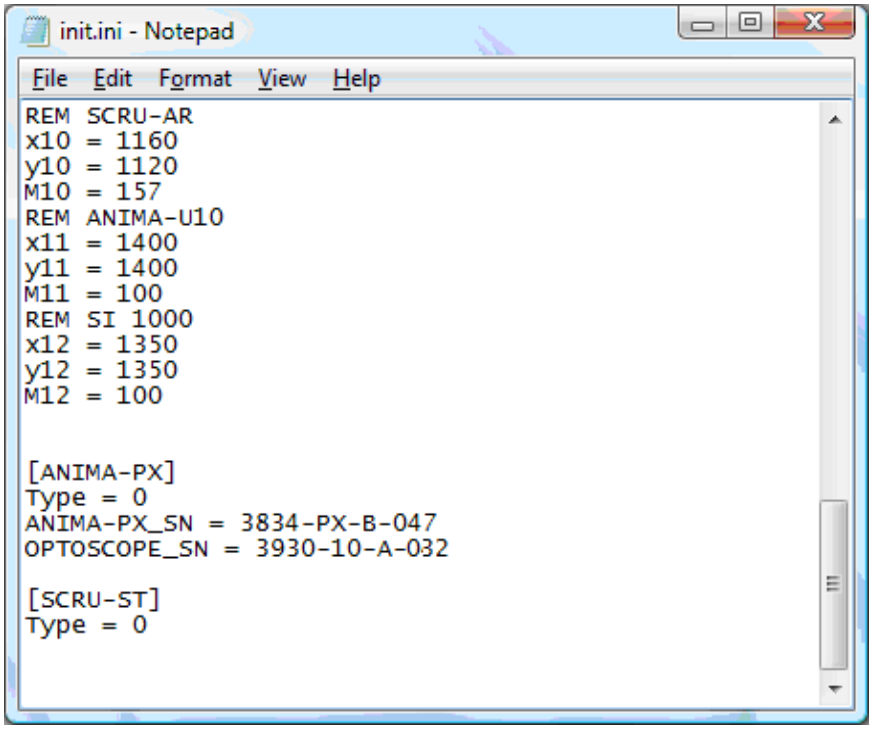

Remark: If a particular serial number is defined in the INIT.INI file only this camera will be controlled by the software. No other camera can be used. In case the serial number of the streak camera or readout camera is not programmed (example “ANIMA-PX_SN = “ or “OPTOSCOPE_SN = “) any camera found would be used.

Configuring ANIMA-PX for multi camera applications

The ANIMA-PX readout camera needs to be configured if more than one camera is used on the same PC. The configuration consists in writing a unique identifier into the camera memory. We recommend using the camera's serial number as unique identifier.

- Connect only **one** ANIMA-PX camera.
- Start the "PX-PROGRAMMER" found on the root directory of the installation disk.

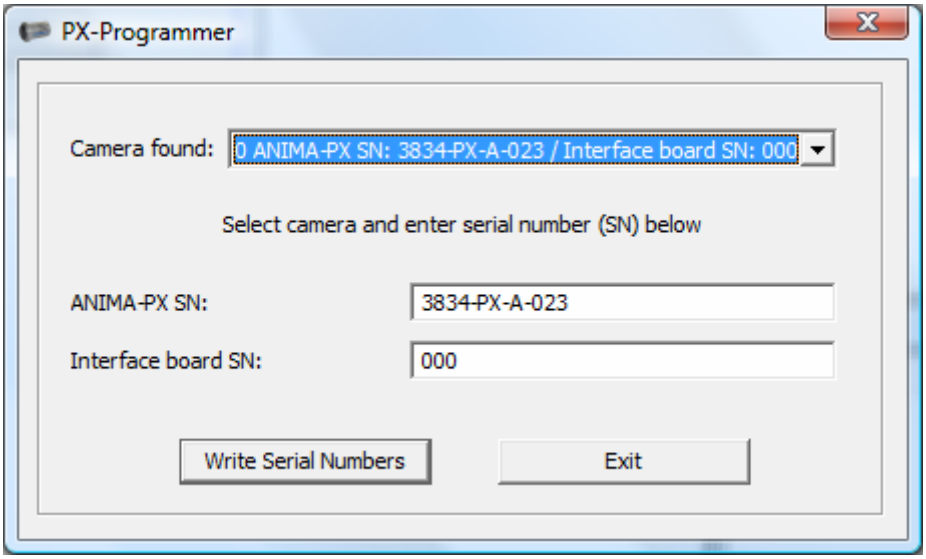

- If more than one camera is connected select the camera that need to be configured.
- Enter the SN on the line named "ANIMA-PX SN:"
- The SN of the interface board might be specified optionally.
- "Write Serial Numbers" and exit.
- In case other readout cameras need to be configured, connect these cameras and repeat the procedure for all cameras.

Setup readout camera

Prior to use the readout system some parameters like pixel size, exposure time and others should be set according to the actual system. This is done on the SETUP/READOUT CAMERA menu. For each readout camera the corresponding setup screen is shown below. Precise parameter values are found on the final tests sheet provided for each readout camera.

Setup screen for ANIMA-PX camera.

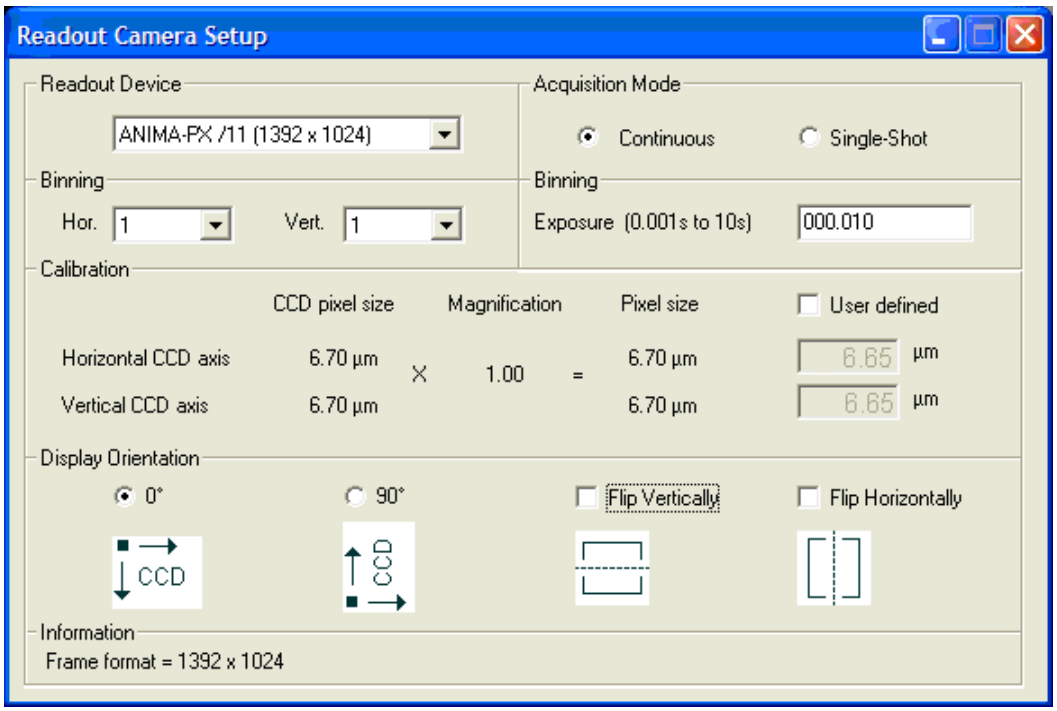

Make sure to select the correct version e.g. ANIMA-PX/11, …/25 or …/40. For precise horizontal and vertical scale calibration the actual size of the pixel size should be copied from the final tests sheet to the *User defined* filed on the setup screen. For most applications exposure time can be set within the range of 10 ms to 100 ms.

Setup screen for SCRU-SE and SCRU-SE-A camera.

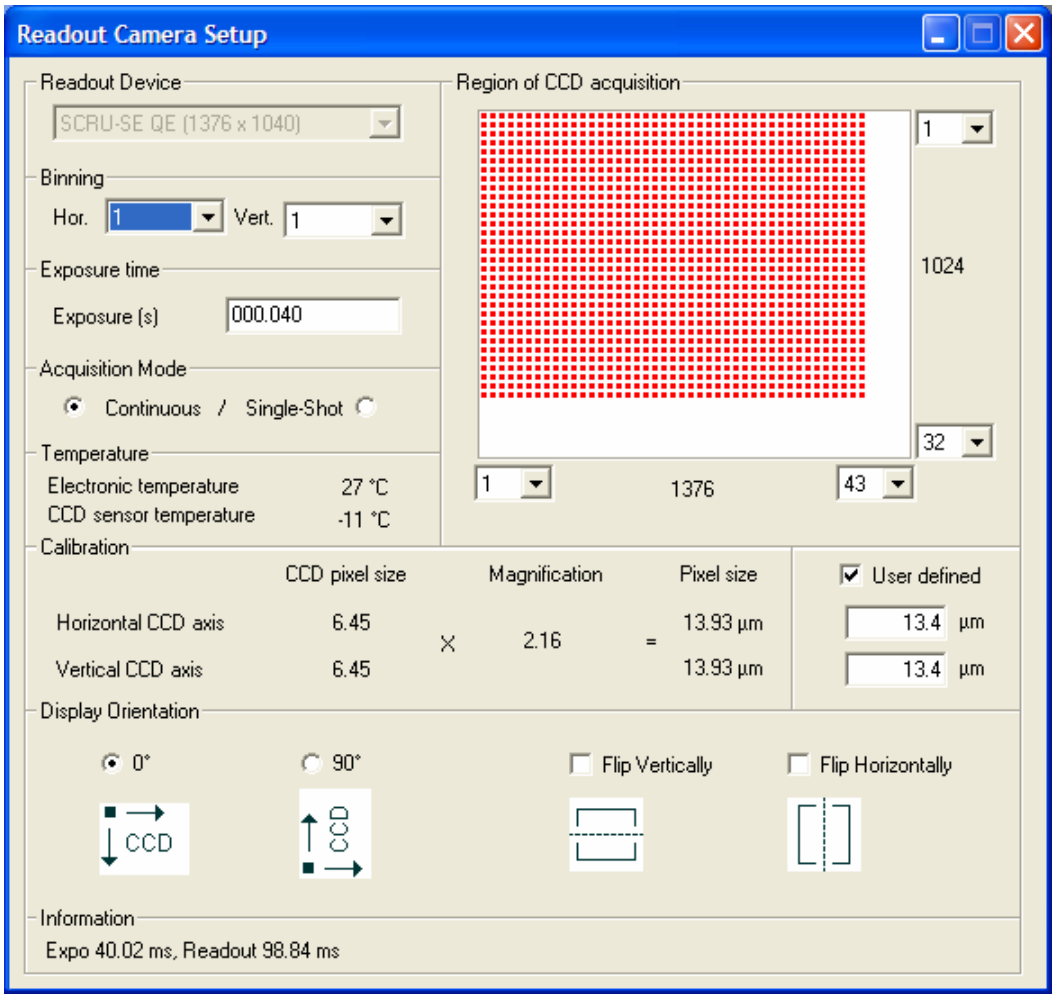

As this readout camera identifies itself to the software a selection is not required and device field remains grey.

For precise horizontal and vertical scale calibration the actual value of the pixel size should be copied from the final tests sheet to the *User defined* filed on the setup screen. For most applications exposure time can be set within the range of 20 ms to 100 ms.

Setup screen for SRU-ED camera.

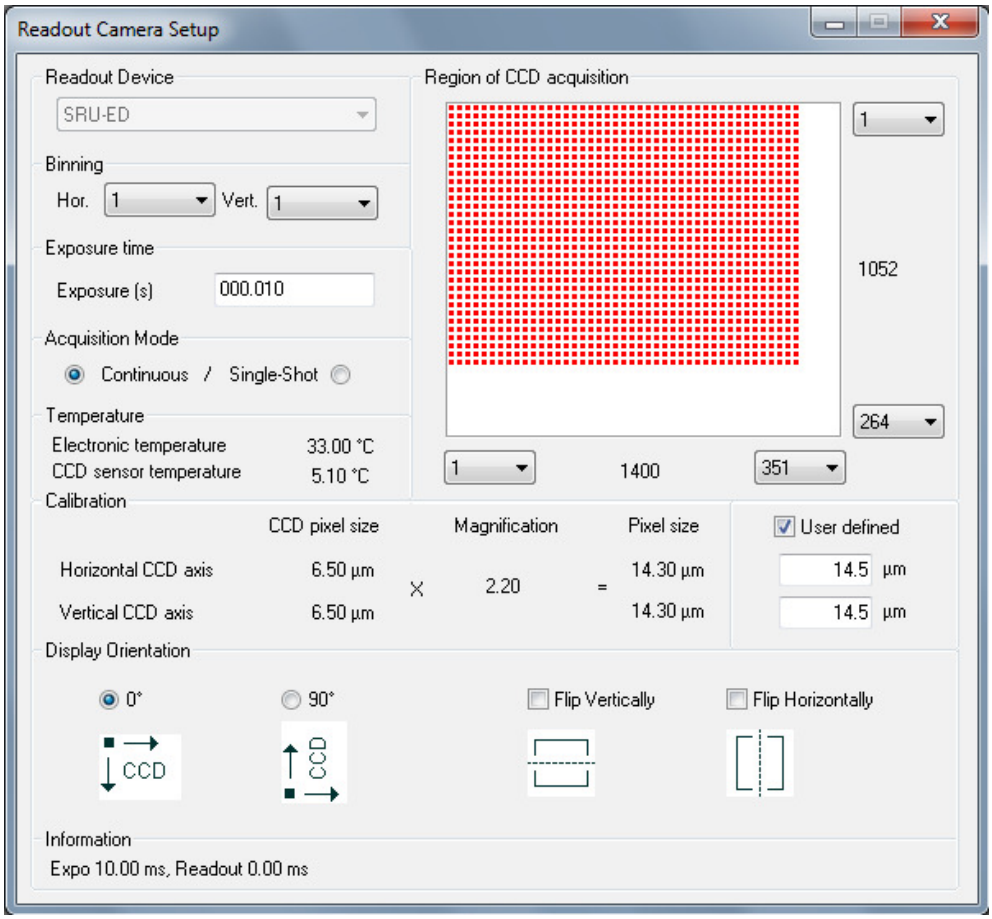

The setup menu above shows typical parameters. For details please refer to the SRU-ED user manual.

Setup screen for SI 1000 camera.

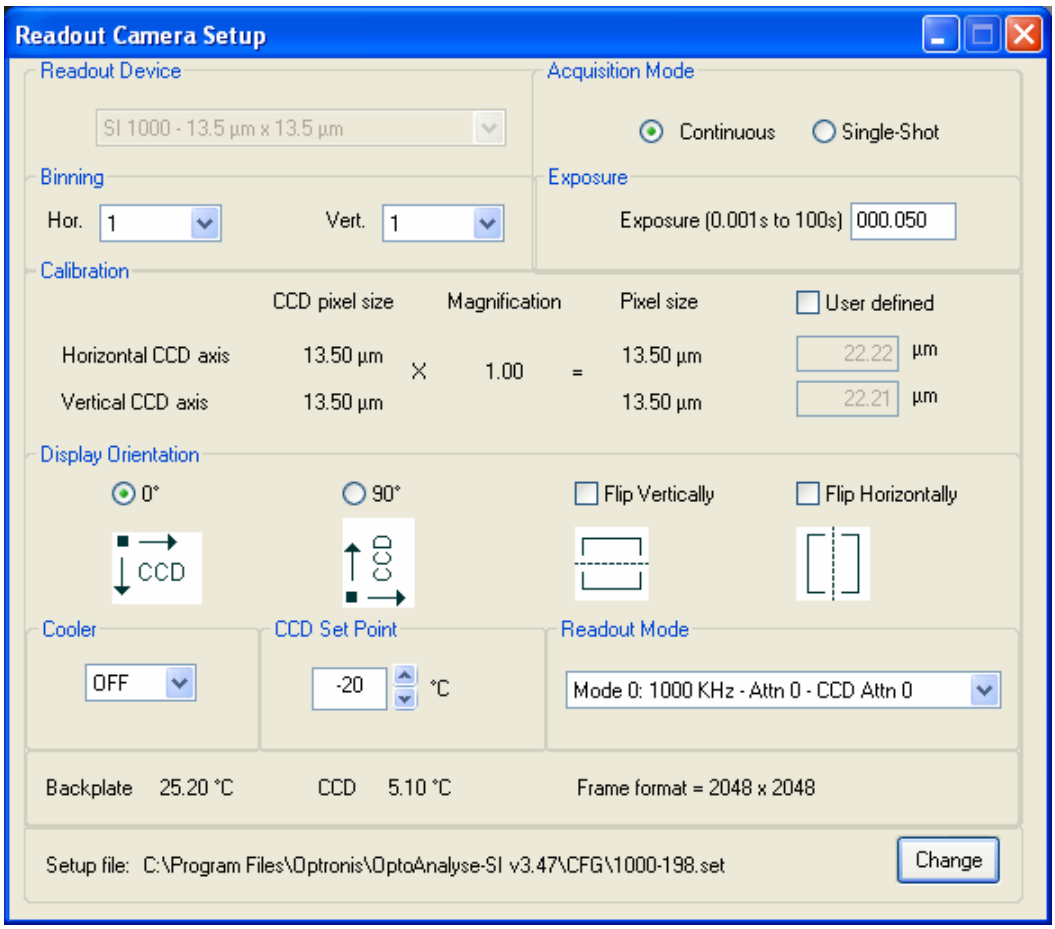

For streak camera related applications of the SI 1000 camera the following parameter might be considered:

Exposure time: 0.2 s

Binning: 1 x 1

SENSOR Set Point: -20 °C

Acquisition Mode: Single-Shot

Make sure the correct setup file is selected.

Depending on actual applications, other setting might be necessary to optimize system performance. Further information can be found on the user manual provided by Optronis and describing the use of the camera within a streak system. Technical details about the camera operation are found on the SI 1000 user manual.

Start of OptoAnalyse

Prior to start the OptoAnalyse software the streak camera system needs to be installed and connected to the PC. The streak camera main unit as well as the readout camera (except ANIMA-PX) need to be switched on.

In case the OptoAnalyse software is started the first time after installation, the pixel size of the readout camera has to be entered. This value is found on the readout camera test sheet provided by Optronis.

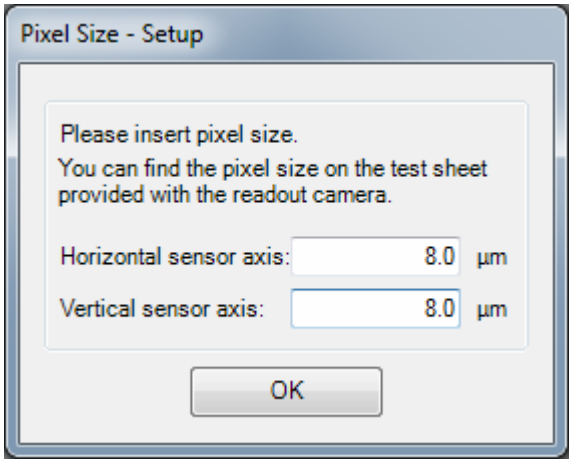

Later, the values can be modified on the Setup/Readout Camera menu.

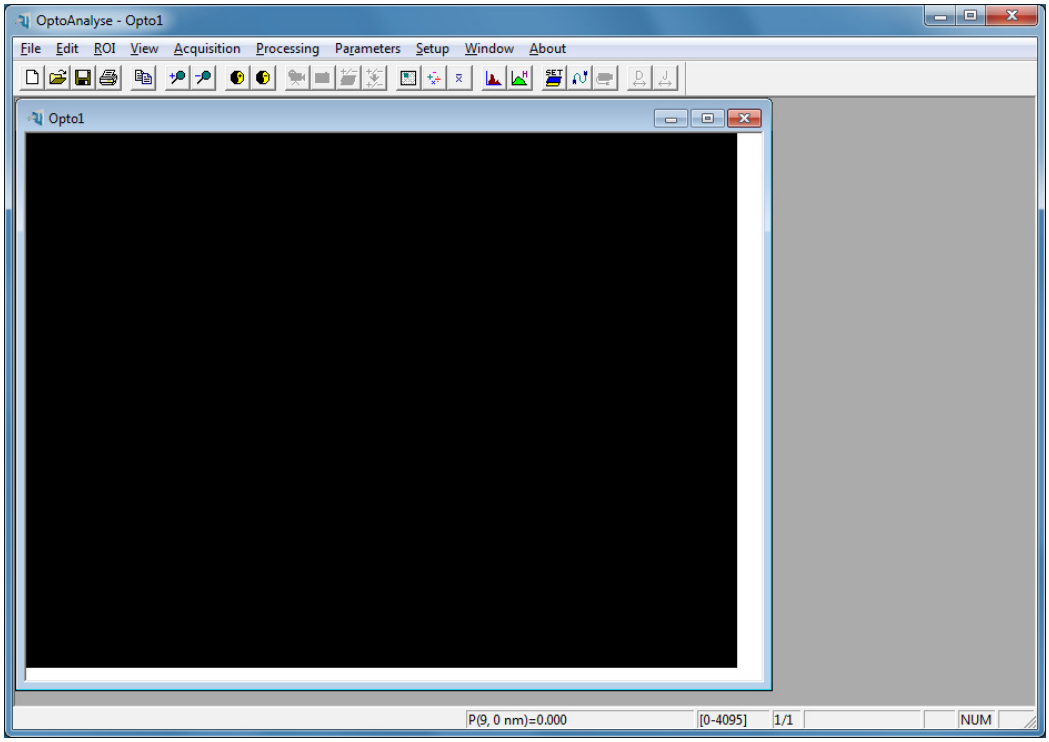

See trouble shooting section for details if this display does not appear.

For multi camera installations where the OptoAnalyse software had been configured to operate with a particular ANIMA-PX readout camera or a particular OPTOSCOPE streak camera the display will appear differently as shown below.

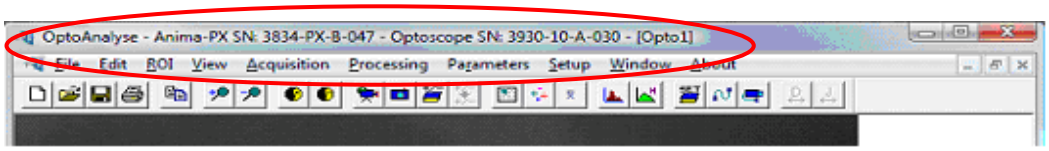
OptoAnalyse - Anima-PX SN: 3834-PX-B-047 - Optoscope SN: 3930-10-A-030 - [Opto1]
File Edit ROI View Acquisition Processing Parameters Setup Window About

The title bar shows the serial number programmed in the INIT.INI file but only if the device is connected to the PC and communicating with the software. This information allows to identify the different programs operating in parallel and to relate them to the corresponding streak systems.

Re-Start after modified Streak Camera Configuration

The OptoAnalyse software needs to be re-started after the streak camera system configuration had been changed. This concerns the exchange of sweep units and is required to make sure the correct calibration data are loaded from the camera. A restart is also required if the communication between PC and streak camera had not been possible before, or in case the communication had been interrupted.

Frame Window

A FRAME window displays a frame. A frame is either the real-time signal from the readout camera, the data after an image acquisition or an image from the disk. If an image file (.IMG or .IMD) is opened from the disk, a new FRAME will appear. Frame and Image are used as synonyms in this document.

After starting the application the first frame can display the real-time signal and therefore can be used for image acquisition. All other FRAMES only display images from the disk. In case the first frame is closed, use the **New** command during another FRAME is active to create a new FRAME allowing real-time display and image acquisition.

During a FRAME window is active, the menu contains all relevant commands available with this window type. The toolbar contains a part of the available commands.



The status bar contains several text fields. From left to right, you can see:

- Text field to show the command executed or status of the ongoing acquisition
- The cursor position with pixel intensity
- The intensity range displayed in the window
- The zoom factor
- Acquisition information
- The keyboard status

For readout cameras with long exposure time settings and long transfer time requirements, progress bars for exposure time and transfer time are displayed.

Region Of Interest ROI

A region of interest (ROI) can be defined in the FRAME window. The ROI appears as a yellow rectangle on the frame. This ROI is used to restrict the commands of the processing menu to the data inside the ROI. The minimum ROI size is 1 per 1 pixel.

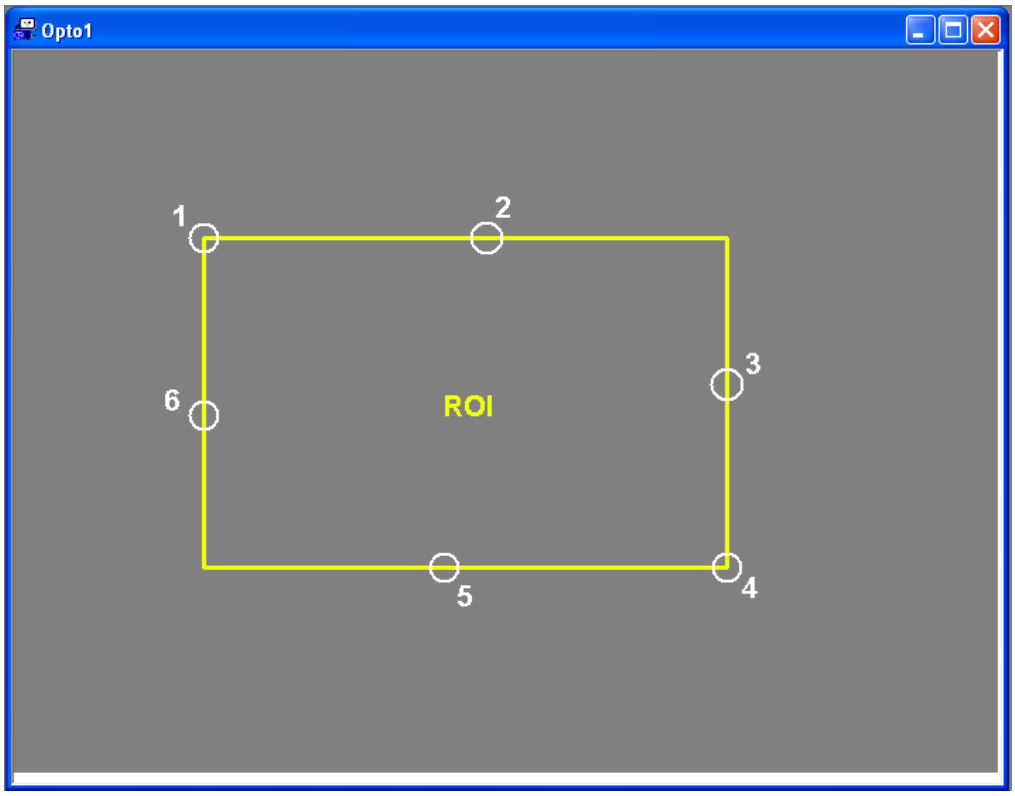

To create a ROI select the upper left point (1) of the ROI by pressing the left mouse button and move the mouse cursor with left button always pressed to the bottom right point (4) of the ROI. Release the left button.

The left text field in the status bar then shows the ROI coordinates. Shape, size and position of the ROI can be changed with the mouse. Therefore the ROI has some action points.

1 → Move the ROI

2 → Change ROI vertical coordinates.

3 → Change ROI right coordinates.

Pressing the Shift key when pointing with the mouse changes the symbol to and allows to change the right and left coordinate of the ROI symmetrically.

4 → Change ROI size.

5 → Change ROI bottom coordinates.

Pressing the Shift key when pointing with the mouse changes the symbol to and allows to change the right and left coordinate of the ROI symmetrically.

6 → Change ROI horizontal coordinates.

To change the ROI, move the mouse cursor to an action point. At the correct position the mouse pointer changes its shape. Press the left mouse button and move the mouse with its left button always pressed. Release the left button when you arrive on the new position.

During the mouse points to the ROI and the left mouse button is pressed, successive pressing the right button allows to set:

→ ROI width is equal to the frame width.

→ ROI height is equal to the frame height.

→ ROI width and height are equal to the initial rectangular area.

File Menu

New

This command creates an empty document and opens the corresponding FRAME window. The window name is Opto follow by a number. A FRAME allowing to display the real-time signal is created if the existing FRAMES only show documents from the disk.

Open

The command opens an existing document previously saved on disk. This command loads a frame file, a histogram file or a profile file. Selecting a file with the extension *.IMG will load a frame document previously saved under OptoAnalyse version 1.40 or before and containing pixel information with 16 bit format. This frame file contains the frame size, frame data in 16 bits per pixel and a comment text area.
Selecting a file with the extension *.IMD will load a frame document previously saved under OptoAnalyse version 3.00 or later. This file contains pixel information with 32 bit format.

Shortcuts: Ctrl + O

Close

An open document is closed. If data contained in the document have been modified, the application asks you if you would like to save the current document.

Save

The command saves the current document as frame file on the disk. If the document hasn't been saved before, the application opens the common WINDOWS dialog box to input the filename. This frame file has the .IMD extension and can be read with the OptoAnalyse software. Details are given in the Annex B. The file contains the frame size and frame data in 32

bits per pixel format. Complementary data like calibration information, a comment text and all available setup information of the system during the acquisition are saved on a text file having the same name but the extension *.IMI.

Shortcuts: Ctrl + S

Save ROI as …

The content of the current ROI is saved as frame file on the disk with a new name. The ROI size has to be at least 10 x 10 pixel. The application opens the common WINDOWS dialog box to input the filename. It adds the .IMI extension. An additional text file with the extension *.IMD is saved and will contain complementary information.

Save As …

The current document is saved as frame file on the disk with a new name. The application opens the common WINDOWS dialog box to input the filename. It adds the .IMG extension.

Export

The command saves the current frame on the disk either in BITMAP, TIFF, Binary (RAW) or ASCII format. The bitmap format has the extension .BMP and the TIFF format has the extension .TIF. Both are standard frame formats under Windows. The grey level adjustment and pseudo colour setup for the actual display on the screen has an impact on the data saved. The value of each pixel is converted into 8 bits to have the same frame representation as actually displayed. See the **View** section to modify the frame display.

The binary file has the extension .RAW. It is a generic format and can be used with most image processing applications. In this format, the system saves the value of each pixel without any header. Each pixel is coded in binary with a size of 16 bit in Intel format (LSB before MSB). The actual display setup does not have an impact on the data saved.

The ASCII file has the extension .ASC. In this format, the system saves the value of each pixel without any header. Intensity information of each pixel is coded in ASCII with decimal separator “.” and 3 decimal digits. The tabulation character is used to separate values.

Example: pixel value = 102.1 → “1” “0” “2” “.” “1” “0” “0” tab.

Import

The command allows reading of files that do not have the standard .IMI format. Files in ASCII format with the extension .ASC are accepted. First intensity value is considered to correspond to the upper left pixel. Subsequent values have to be separated by the tabulator code (tab) and are considered to for the first horizontal image line ending with the LF CR sequence. Image size is therefore defined by the ASCII file structure. Each pixel value has to fit within the range of $-2.147 \cdot 10^6$ to $+2.147 \cdot 10^6$ with

0.001 precision. Decimal separator “.” is used. The example below shows a 3 x 2 image.

“3” “5” “2” tab “3” “6” “9” “.” “2” tab “3” “6” “4” “.” “2” “8” “3” CR LF
“2” “8” “9” “.” “3” “6” tab “3” “4” “0” “.” “7” “7” “0” tab “3” “6” “4” “.” “2” “8” CR LF

and the pixel intensities are converted to:

352	369.2	364.283
289.36	340.770	364.28

Print

The Print command opens the standard dialog box to print under WINDOWS. The grey levels of the printing frame are fitted to the displayed grey scale

Shortcuts: Ctrl + P

Print Preview

The command opens a window showing the screen preview of the printing page.

Print Setup

The opens the WINDOWS dialog box to setup the printer.

Recent Files

This list shows the last files opened or saved by the application.

Exit

The command closes the application.

Edit Menu

Copy Image

The command converts the entire image as it is displayed on the screen in Bitmap format and copies it to the clipboard.

Shortcuts: Ctrl + C

Copy ROI like a Bitmap

The view delimited by the ROI is converted to a Bitmap and is copied to the clipboard.

Copy ROI like an ASCII Text

The view delimited by the ROI is converted to an ASCII file and is copied to the clipboard.

ROI Menu

The ROI menu contains commands to manipulate the position and size of the ROI.

Copy

The command stores the coordinates of the current ROI temporally.

Paste

The Paste command reads the coordinates temporally stored with the Copy command and applies it to the current ROI.

Duplicate

This command reads the coordinates of the current ROI and applies them to all other open FRAME windows.

Shortcuts: Ctrl + D

Save as Default

The command stores the coordinates of the current ROI as default coordinates. The default coordinates are saved on the disk when the application is closed.

Apply Default ROI

Reads the default coordinates and applies them to the current ROI.

View Menu

These commands allow modifying the way how frames are displayed. Memory data remain unchanged.

Zoom

The command changes the frame magnification factor for display.

Zoom 4/1 Displays frame with zoom = 4

Zoom 2/1 Displays frame with zoom = 2

Zoom 1/1 Displays frame with zoom = 1 (one frame pixel -> one display pixel)

Zoom 1/2 Displays frame with zoom = 1/2

Zoom 1/4 Displays frame with zoom = 1/4

Shortcuts: Page Up → Zoom In
Page down → Zoom Out

Monochrome

Loads a linear grey palette to display a monochrome frame with grey levels. The system displays 256 grey colours and uses a software barrel shifter to show 8 contiguous bits from the 16 bits intensity value of each pixel.

Shortcuts: activate → Alt + M
lower levels +
higher levels -

Gamma Correction

Opens a dialog box named Set Gamma Correction. This dialog box sets the grey palette using a gamma correction law for the display.

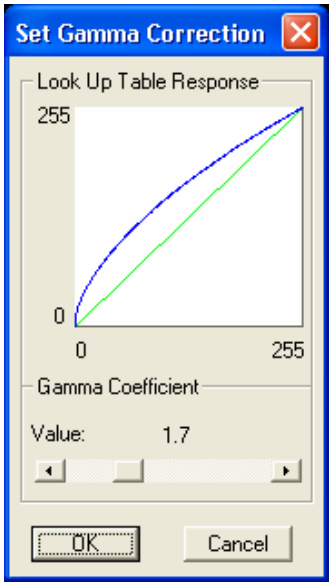

The dialog box shows the look-up table. The green line shows the linear law and the blue line shows the gamma corrected response. With a gamma coefficient greater than 1.0, the low levels are more amplified than the higher levels. A gamma coefficient of 1.0 corresponds to the linear response. With a gamma coefficient of less than 1.0, the higher levels are more amplified than the lower levels. The horizontal scrolling bar changes the value used for gamma correction. The gamma coefficient can be set between the values 0.5 to 5.0.

Shortcuts: Alt + G

Pseudo colors

Opens a dialog box named Set Pseudo Colour Palette. This allows setting the correspondence between the intensity values and the colour display. The dialog box shows the histogram of the active frame with coloured intensities values. The horizontal axis represents the intensity levels between the minimal and maximal intensities corresponding to the actual display setting. The vertical axis represents the occurrence of the corresponding intensity levels. Checking the box named **Display the histogram with a logarithm Scale** changes the vertical scale.

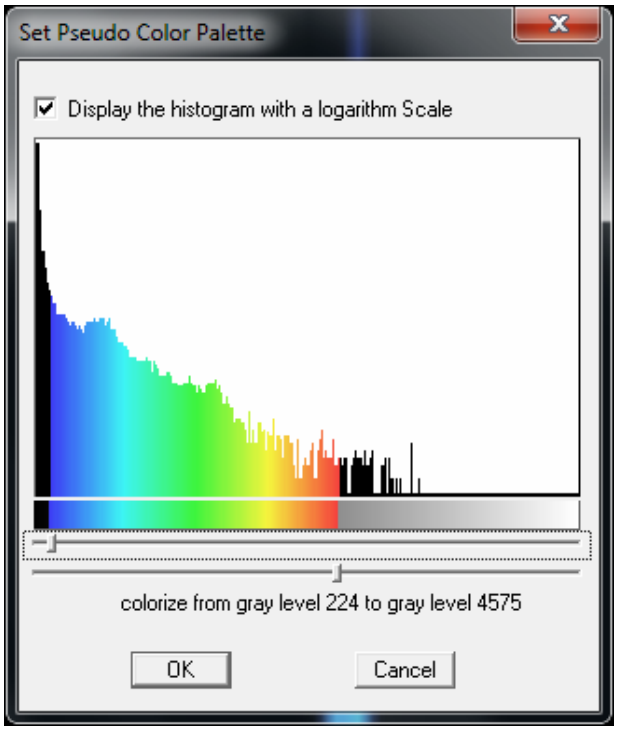
Set Pseudo Color Palette
Display the histogram with a logarithm Scale
colorize from gray level 224 to gray level 4575
OK
Cancel

The colour palette is displayed on the bottom side of the histogram. Two horizontal scrolling bars select the first and the last levels affected by the coding.

Shortcuts: Alt + C

Toolbar

The Toolbar command shows or hides the toolbar

Status bar

The command shows or hides status bar.

Acquisition Menu

Real Time

The command enables real-time display. The menu text becomes checked to inform you that a new click stops the real-time display. If the real-time is stopped, the frame on the screen shows last real-time frame. The real time command is not available if a FRAME window showing the frame from the

disk is active or if no readout camera is available. Use the File -> New command or connect the readout camera to allow real time display.

Shortcuts: Alt + R

Snapshot

This command grabs one frame.

Shortcuts: Alt + S

Single Acquisition

The command executes the acquisition of one single frame using the parameters set in the Setup/Acquisition menu. Corrections as defined in this menu are applied.

Shortcuts: Ctrl + Alt + S

Acquisition

The command executes a frame acquisition using the parameters set in the Setup -> Acquisition menu. The maximum rate depends on the readout camera setup, the acquisition mode setup and the available performance of the PC. The more pixel need to be processed and the more correction features are activated the lower the frame rate. Increasing the integration time of the readout camera might be helpful to avoid the loss of image date. To get a frame rate measurement, the Sequence command can be used. Please refer to the sequence command for details.

When the accumulation starts, the system reduces the zoom factor to 1/1 if it was higher in order to optimize the frame rate. The frame display is always refreshed after 5 frames. During accumulation the + and – keys still allow to setup the display intensity.

Shortcuts: Start → Alt + A
Cancel → Esc

Sequence

The command executes multiple frame acquisitions using the timing and data parameters set in the Setup -> Acquisition Sequence menu. The same process as described with the Acquisition command is executed. The status bar indicates the progress of the sequence acquisition.

Shortcuts: Start → Alt + Q
Cancel → Esc

Processing Menu

Filter

The command opens a dialog box named Filter Manager used to select the a filter, to run a specific filter, to add filters with a size of 3x3 to 15x15, to delete a filter or to modify a filter. To select one of these filters, just click on it and select the filter dimensions.

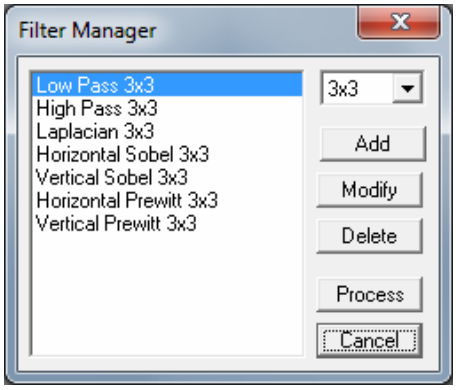

Shortcut: Shift + F

To apply a filter to the image or the ROI, the filter needs to be selected and the **Process** bottom has to be activated. The shortcut will apply the last filter selected again.

Shortcut: Alt + F

A new filter can be added or the selected filter can be modified by using the **Add** and **Modify** commands. If the 3x3 filter dimension is selected, the dialog box below appears. It allows to edit the filter parameters. After the filter operation the Scale Factor is used to divide the resulted value. The Name of the filter as it will be listed can be defined.

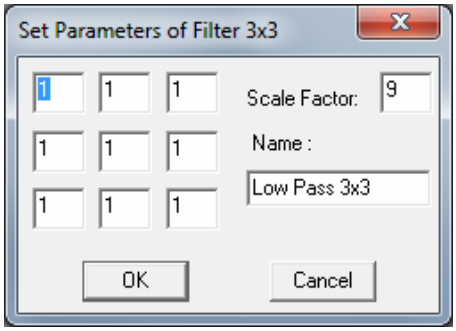

Arithmetic

This command opens the dialog box below. The current frame is called destination frame and will contain the resulting data. The software performs first the arithmetic operation between Source1 and Source2, and then the result is combined with Source3. The operations are executed pixel by pixel.

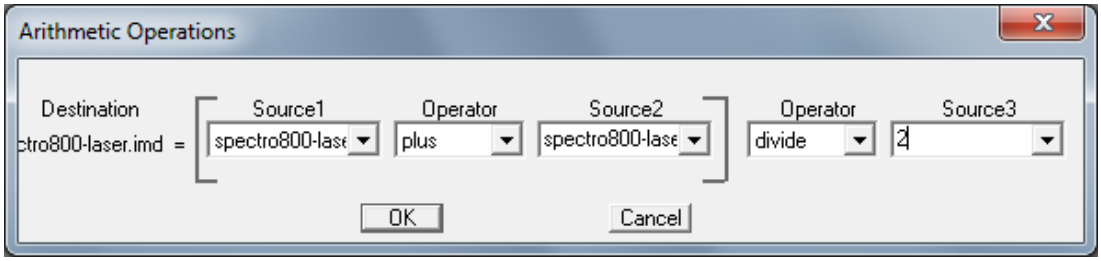

Operators used between two sources A and B are:

plus	Source1 **+** Source2
minus	Source1 **-** Source2
multiply	Source1 **×** by Source2
divide	Source1 / Source2
min is	**Minimum** of Source1 and Source2
max is	**Maximum** of Source1 and Source2

Source1 allows the selection of the first operand and **Source2** allows the selection of the second operand. The lists show the names of frames actually open within the OptoAnalyse software. A numerical constant can be entered as Source2.

Source3 allows the selection of the third operand. The same possibilities as described with Source2 are available. If only two operands are needed, the third operand can be set 0 and the operation plus should be activated.

Shortcut: Shift + O

Mean Value

The command processes pixels intensities to calculate the mean value and standard deviation of all pixels inside the ROI. If no ROI is defined the whole active frame is processed. The results are displayed on the left text field in the status bar.

Shortcut: Shift + M

Uniformity Correction

The uniformity correction can be used to correct frames opened from the disk or after their acquisition. The correction is a pixel to pixel operation dividing the current frame by the uniformity correction frame and multiplying by the mean value of the uniformity frame. The total image brightness remains constant.

$$CorrecteFrame(x,y) = \frac{CurrentFrame(x,y)}{UniformityFrame(x,y)} \cdot \overline{UniformityFrame(x,y)}$$

The Uniformity Correction command opens a dialog box below.

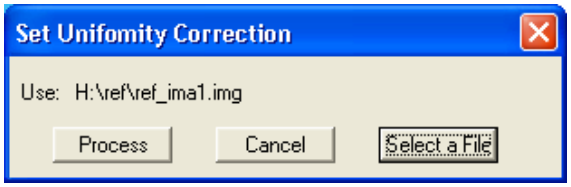

Shortcuts: Shift + U

The text line **Use** shows the current file used for uniformity correction. The **Process** button executes the correction of the current frame. The **Select a File** button allows selecting the name of the uniformity frame for the correction. The **Process** button executes the correction of the current frame.

Remark: The corresponding feature in the acquisition setup box can be used alternatively if the correction has to be done during or immediately after the acquisition.

Geometrical Correction

Different corrections explained and defined in the Setup/Geometrical Correction menu are executed.
This correction can be used to process images that had been acquired without the corresponding correction. This is the case when no geometrical correction had been defined at the time the acquisition took place. Once the correction is done, it will not be executed a second time.

Please note that only images where information about sweep unit and selected sweep speed are available in the .IMI file can be corrected. These information are saved automatically when the image is saved EXCEPT in case the steak camera had not been connected to the PC and controlled by the OptoAnaylse software to the during acquisition.

Shortcuts: Shift + Q

Drift Correction

The command activates the drift correction with the setup defined in the Setup/Correction/Drift dialog box. Drift correction is only available when the readout camera is coupled to the OPTOSCOPE streak camera and a synchroscan sweep unit (FSSUx, or SSUxx-xx) is installed. For more information see drift correction setup in the corresponding menu.

Shortcuts: Shift + D

Jitter Correction

The command activates the jitter correction with the setup defined in the Setup->Correction->Jitter dialog box. For more information see drift correction setup in the corresponding menu.

Shortcuts: Shift + J

Horizontal Profile

The command opens a PROFILE window. The profile along the horizontal axis is displayed. If a ROI is defined in the current frame, the histogram is limited to the ROI. For more information, see *Profile Window* chapter.

Shortcuts: Shift + H

Vertical Profile

The command opens a PROFILE window. The profile along the vertical axis is displayed. If a ROI is defined in the current frame, the histogram is limited to the ROI. For more information, see *Profile Window* chapter.

Shortcuts: Shift + V

Parameter Menu

Image Comment

Frame Comment command opens a dialog box below and allows to enter a comment related to the current image. The comment is saved in the Optronis frame file (.IMI). This text appears when a frame or profile is printed.

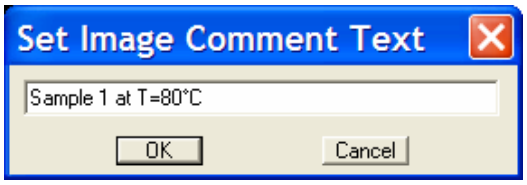

Shortcuts: Shift + I

Setup Menu

Acquisition

The command is used to set the acquisition parameters shown in the dialog box. This includes correction procedures, the photon counting mode and the number of frames to be accumulated. Together with the setup of the readout camera all parameters required to capture the readout of the streak camera are defined.

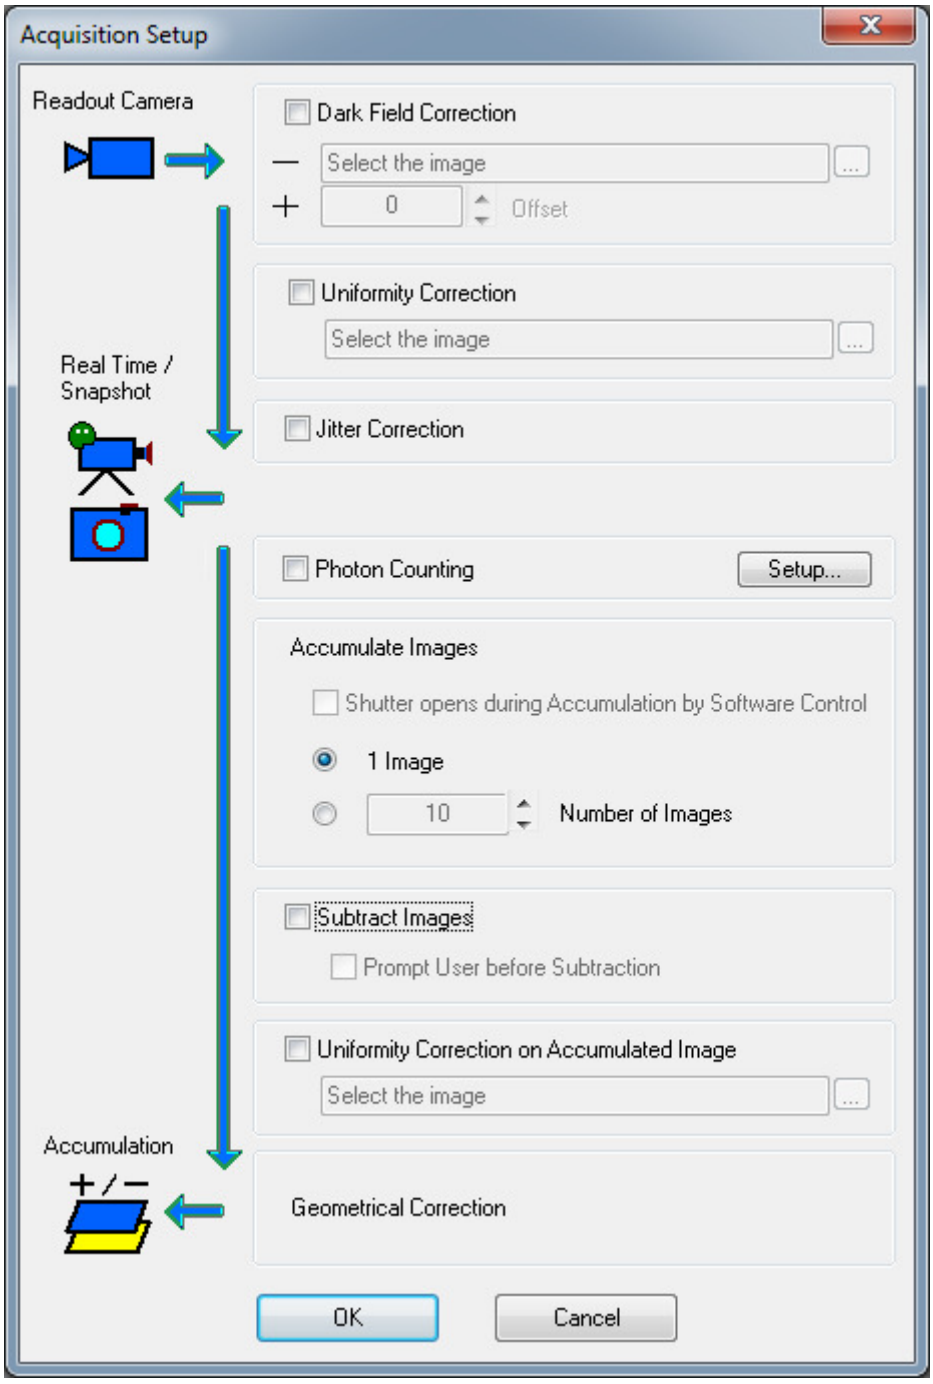

The data of the readout camera are processed in a specific order before the resulting frame is displayed and ready for storage. This order is represented in the dialog box.

Remark: The processing speed depends upon the number of selected processing steps. For a first evaluation of the maximum frame rate, the test feature in the Setup/Sequence box can be used.

For real Time and Snapshot acquisition mode, dark field correction, uniformity correction and jitter correction can be applied before an image is displayed.

The **Dark Filed Correction** button selects the dark filed correction of each frame acquired by the camera. The intensity value of each pixel of the selected file is subtracted from the acquired frame. For particular applications a constant value can be added but would typically not be needed.

The **Uniformity Correction** button activates a uniformity correction for each frame. The operation below is executed prior to any further processing of the frame. This option needs to be activated if a uniformity correction has to be performed prior to the Jitter Correction.

The **Jitter Correction** button activates the jitter correction and is identical to the activation as described in the Jitter Correction setup box.

The **Photon Counting** button selects the acquisition in the photon counting mode. In this mode, there is a processing of each frame before adding it to the accumulated frame. See the **Photon Detection** command to have a detailed description of the photon counting mode.

The **Accumulation** filed defines the number of frames to be added. Additionally the reset of the frame memory and the activation of the internal electro-mechanical shutter can be controlled.

The **Reset Memory before Accumulation** sets the memory value for each pixel to 0 before any frame acquisition starts. This option should be active for all typical acquisitions. Only for special conditions it might be necessary to keep the previous memory content and to add the new frames without memory reset.

The **Shutter opens during Accumulation by Software Control** checkbox indicates that the internal shutter is activated under software control. The shutter is opened 20 ms before the accumulation or the photon counting acquisition. The shutter is closed at the end of the accumulation and at least 20 ms before the subtraction phase (if activated). If this box is not active, the OptoAnalyse software does not change the shutter status. To allow the shutter control, the PC has to be connected to the streak camera. If this connection is not available, the checkbox can not be activated and the shutter is not controlled by software.

The Accumulation can be stopped in different ways:

- By selecting **1 Image** if only a single frame has to be acquired. This mode is identical to the Single Acquisition in the Acquisition menu.
- By defining a fixed **Number of Images**

The **Subtract Images** box allows subtracting the same number of frames. For photon counting acquisition modes, this option can not be selected. In case the jitter correction had been activated during the accumulation, each dark frame is shifted accordingly to the corresponding frame during accumulation. Details about this processing are described in the jitter correction section.

If **Prompt User before Subtract** is activated, the application waits between the accumulation and the subtraction phase until the user acknowledges to continue. If it is not checked, the application does not ask for user confirmation between the accumulation and the subtraction phase.

The **Uniformity Correction on Accumulated Image** button activates a uniformity correction after the acquisition has been completed. The operation below is executed. This option can not be selected if already an individual uniformity correction is activated.

$$CorrecteFrame(x,y) = \frac{CurrentFrame(x,y)}{UniformityFrame(x,y)} \cdot \overline{UniformityFrame(x,y)}$$

Shortcuts: Shift + A

The **Geometrical Correction** is a set of different correction processes including distortion correction, sweep speed linearity correction and transit time distortion correction. Details of these corrections are described in the Setup/Geometrical Correction menu.

Correction

The **Correction** command opens a dialog box named Correction Setup used to set the drift and jitter correction parameters.

Shortcuts: Shift + E

Drift correction

Principe of Operation: The Drift Correction is a software regulation process that compensates for long term drift of the laser system and the streak camera when a synchroscan sweep unit (FSSUx or SSUxx-xx) is used. A RS-232 link and a mark (laser pulse, streak trace) giving a reference are required. For ease of use, Optronis provides a specific input optics with marker input.

When starting an acquisition (realtime or accumulation mode), the first captured frame is used to determine the center of gravity (COG) of the mark inside a predefined ROI. That COG is used as the reference COG. Every 500ms, the application calculates the new center of gravity (COG) of the mark inside that ROI and adjusts the synchroscan unit phase delay to stabilize the reference mark to the reference COG.

The first sub dialog box named ‘Drift’ allows to set the parameters for the Drift Correction. This menu is only available if the readout camera is coupled to the OPTOSCOPE streak camera and the RS-232 link is active.

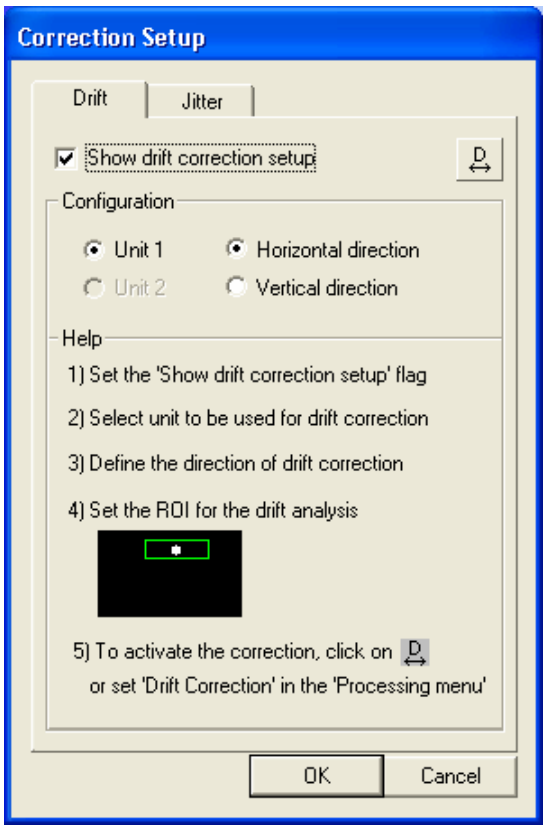

First Step: Activate the ‘Show drift correction setup’ box. A green ROI will appear in the frame display (the drift and jitter correction use the same ROI).

Second Step: Select the unit (unit 1 or 2) and the direction (horizontal or vertical) for the drift correction. The software automatically detects the synchroscan unit(s) connected to the streak camera.

Third Step: Position the green ROI to the reference mark. All the mark analysis and COG calculation are made inside that ROI. To place the ROI, take care of the **reference mark validity criterion**.

Fourth Step: Activate the drift correction by pushing the ‘D’ button in the dialog box or in the OptoAnalyse toolbar.

Fifth Step: This step starts with the activation of the drift correction in real time mode or with the start of the acquisition. In a first phase the acquired frames are used to determine the center of gravity (COG) of the mark inside the green ROI. This COG is used as the reference COG. The application then achieves an analysis of the reference mark (width, signal to noise ratio measurement, distance to ROI borders, ...). If the reference mark complies with the **reference mark validity criterion** shown below, sixth phase begins. If not, drift correction is aborted.

Sixth Step: Acquisition starts. Every 500ms, the application analyzes the reference mark in the green ROI and calculates the new COG. If the mark complies with the **reference mark validity criterion**, the application adjusts the synchroscan unit phase delay to shift the reference mark at the

reference COG. If not, drift correction is not stopped but paused until the reference mark complies again with the criterion.

Jitter correction

Principe of Operation: The Jitter Correction is a software process that compensates for the jitter of the streak camera deflection from frame to frame. A mark (laser pulse, streak trace) giving a reference is required for that regulation.

When starting an acquisition (realtime or accumulation mode), the first captured frame is used to determine the center of gravity (COG) of the reference mark inside a predefined ROI. That COG is used as the reference COG. For new frames, the COG of the mark inside that ROI is calculated. Prior to each memory accumulation, each frame is shifted in order to obtain a frame with the same COG as the reference COG. The horizontal and vertical shift is written into a log file.

If the **subtraction option** is activated, the individual dark frames are shifted corresponding to the shift data in the log file before they are subtracted. If for example the first frame is shifted by 2 pixels to the right and the second frame is shifted 1 pixel to the left, then the first dark frame will be shifted 2 pixels to the right before its subtraction and the second frame will be shifted 1 pixel to the left before subtraction.

The second sub dialog box named ‘Jitter’ allows to set the parameters for the Jitter Correction.

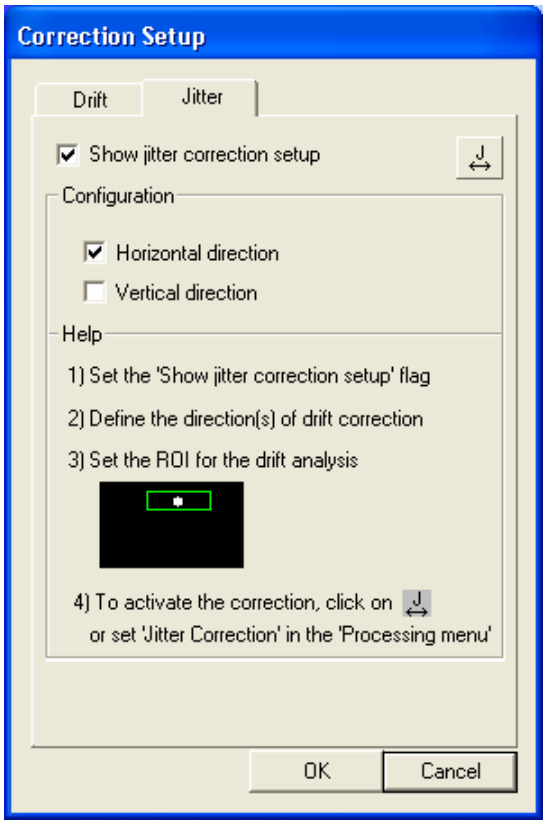

First Step: Activate the ‘Show jitter correction setup’ box. A green ROI will appear in the frame display (the drift and jitter correction use the same ROI).

Second Step: Select the directions (horizontal and/or vertical) for the jitter correction. Jitter correction can be made in horizontal, vertical or both directions.

Third Step: Adjust the green ROI around the reference mark. All the mark analysis is made inside that ROI. To place the ROI, take care of the **reference mark validity criterion** shown below.

Fourth Step: Activate the jitter correction by pushing the ‘J’ button in the dialog box or in the OptoAnalyse toolbar.

Fifth Step: This step starts with the activation of the jitter correction in real time mode or with the start of the acquisition. First the captured frame is used to determine the center of gravity (COG) of the mark inside the green ROI. That COG is used as the reference COG. Then the application analyses the reference mark behaviour (width, signal to noise ratio measurement, distance to ROI borders, ...). If the reference mark complies with the **reference mark validity criterion** shown below, the sixth step can start.. If not, jitter correction is aborted.

Sixth Step: Acquisition starts. For each frame, the application analyzes the reference mark in the green ROI and calculates its COG. If the mark complies with the **reference mark validity criterion**, the application shifts the frame in order to shift the actual reference mark to the position of the reference COG. If not, jitter correction is not stopped but paused until the reference mark complies again with the criterion.

Reference mark validity criterion

The reference mark must present a good signal to noise ratio to allow a reliable drift and/or jitter correction. With pour signal quality, the correction process is disactivated. The validity criterion whether the correction is activ or not is described below. Inside the green ROI, a profile (horizontal or vertical, depending on the correction setup) is calculated. The green lines represent the green ROI borders.

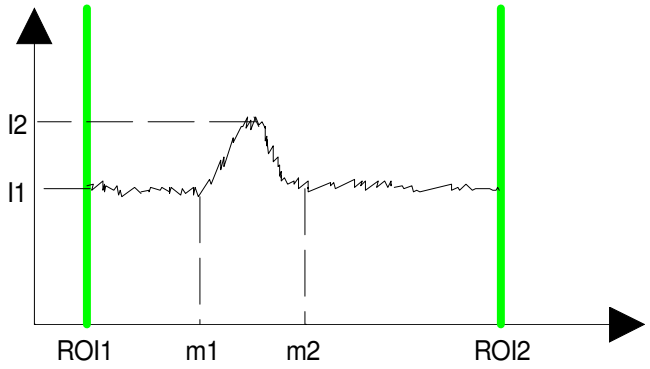

The application calculates the values m1, m2, I1, I2 and the standard deviation s1 (from ROI1 to m1) and s2 (from m2 to ROI2). If (I2-I1) is less than 10 times (s1+s2)/2, the mark is not considered as a reference mark. The reference mark must not be too close to the ROI border. The conditions below should be met.

m1-ROI1 > m2-m1

ROI2-m2 > m2-m1

For drift correction only, the synchroscan phase delay must stay between 1% and 99%. If all these points are verified, the reference mark is considered as complied.

Sequence

The command is used to repeat acquisitions at fixed time periods. This command opens the dialog box named Set Repeated Acquisition.

Shortcuts: Shift + S

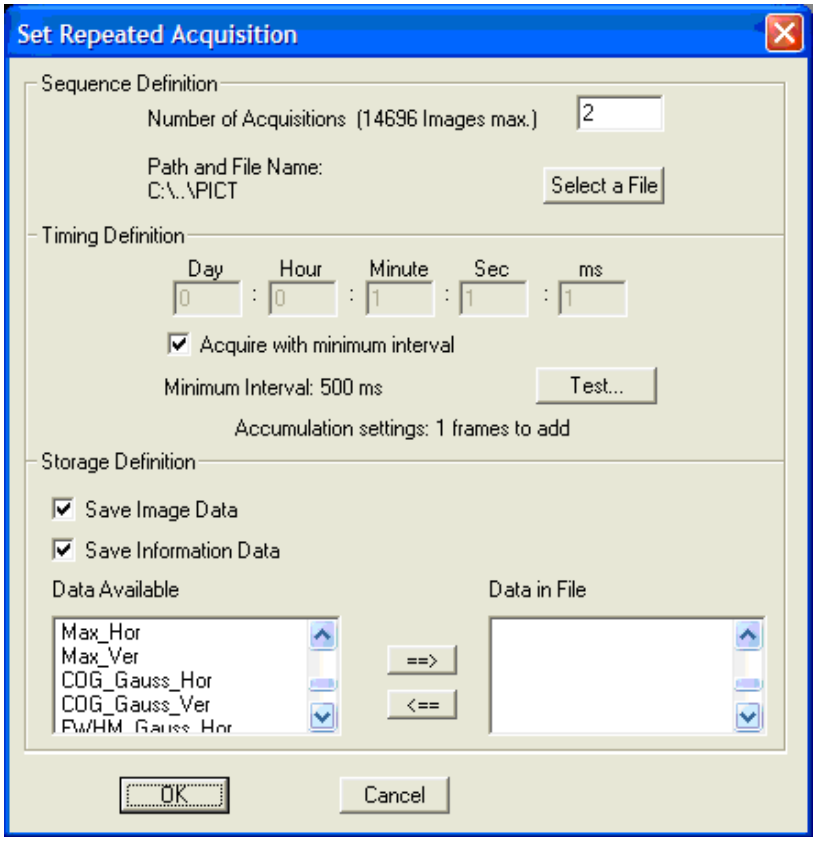

The **Number of Acquisitions** defines the number of repeated acquisitions for each sequence. The system indicates the maximum number of frames that could be saved on the current disk.

The **Select a File** command is used to select the path and the base name of the sequence. The base name is limited to four characters. This command opens the common dialog box to select a file. The text below the **Path and File Name** shows the current path name of the sequence.

The **Day**, **Hour, Minute, Sec** and **ms values** define the delay for the start of the next acquisition. Selecting **Acquired with minimum interval** automatically starts the next acquisition at the end of the proceeding acquisition.

If the **Test** button is pressed, the software performs the acquisition as defined in the setup and saves the files temporally in order to determine

the time needed for this process. The calculated value can be considered as a first evaluation but not as guaranteed value.

The **Save Image Data** needs to be activated if the acquired image has to be saved.

The **Save Information Data** can be activated if particular data calculated from the acquired image have to be written to a report file. The values are calculated based on the entire image. In case a ROI is defined only the partial image defined by the ROI is considered.

The list in the **Data Available** box shows the functions available. Pointing with the mouse allows to select the function. The => button moves them to the **Data in file** box and the <= button removes them. The description below is based on a image with a number of *i* horizontal pixels and *j* vertical pixels. The intensity of each pixel is $I_{i,j}$.

Date	Date when the frame is acquired
Time	Time when the frame is acquired
Interval	Interval in ms since the last acquisition started.
Image Name	Name of the acquired image
Intensity_Mean	Calculates the mean of all intensity values. $$Intensity\_Mean = \frac{\sum I_{x,y}}{\frac{x=0..i-1, y=0..j-1}{i \cdot j}}$$
Intensity_Sigma	Calculates the sigma (rms) of all intensity values. $$Intensity\_Sigma = \left[\frac{1}{i \cdot j} \cdot \sum_{x=0..i-1, y=0..j-1} (I_{x,y} - Intensity\_Mean)^2 \right]^{\frac{1}{2}}$$
Intensity_Min	Determines the minimum intensity value. $$Intensity\_Min = Minimum(I_{x,y})$$
Intensity_Max	Determines the maximum intensity value $$Intensity\_Max = Maximum(I_{x,y})$$
COG_Hor	Calculates the centre of gravity (COG) along the horizontal axis for a profile $$PH_x = \sum_{y=0..j-1} I_{x,y}$$ (horizontal profile) $$COG\_Hor = \frac{\sum x \cdot PH_x}{\sum_{x=0..i-1} PH_x}$$
COG_Ver	Calculates the centre of gravity (COG) along the vertical axis for a portion

$$PV_y = \sum_{x=0..i-1} I_{x,y} \qquad \text{(vertical profile)}$$

$$COG\_Ver = \frac{\sum_{y=0..j-1} y \cdot PV_y}{\sum_{y=0..j-1} PV_y}$$

FWHM_Hor Calculates the full width at half maximum (FWHM) of a horizontal profile. See 'Measure Menu' for details of FWHM algorithm.

FWHM_Ver Calculates the full width at half maximum (FWHM) of a vertical profile. See 'Measure Menu' for details of FWHM algorithm.

Max_Hor Calculates the maximum intensity value of a horizontal profile.

$$Max\_Hor = Maximum\left(\sum_{y=0..j-1} I_{x,y}\right)$$

Max_Ver Calculates the maximum intensity value of a vertical profile.

$$Max\_Ver = Maximum\left(\sum_{x=0..i-1} I_{x,y}\right)$$

COG_Gauss_Hor The horizontal profile is fitted by a Gaussian function. The COG of this fitting function is calculated.

COG_Gauss_Ver The vertical profile is fitted by a Gaussian function. The COG of this fitting function is calculated.

FWHM_Gauss_Hor The horizontal profile is fitted by a Gaussian function. The FWHM of this fitting function is calculated.

FWHM_Gauss_Ver The vertical profile is fitted by a Gaussian function. The FWHM of this fitting function is calculated.

Max_Gauss_Hor The horizontal profile is fitted by a Gaussian function. The maximum value of the gauss function is calculated.

Max_Gauss_Ver The vertical profile is fitted by a Gaussian function. The maximum value of the Gaussian function is calculated.

Scaling

Scaling describes the conversion process from pixel coordinates to measurement values. So each pixel position in horizontal or vertical dimension can be related to a measurement value.
Shortcut: Alt + T

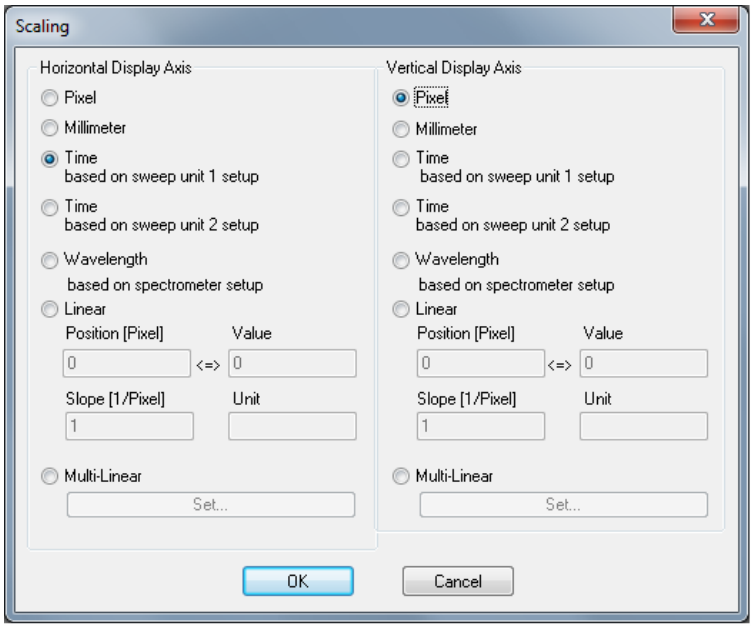

Pixel

In order to display pixel coordinates this option needs to be activated.

Millimeter

Dimensions referred to the readout camera object plane are shown. This plane is identical to the output of the streak camera. Dimensions are calculated by multiplying the pixel number by the pixel size adjusted on the readout camera setup box.

Time - based sweep unit 1 setup

This feature is available if the PC is connected to the OPTOSCOPE streak camera and the software has access camera parameters. The actual sweep speed is read and combined with the pixel size of the readout camera to calculate the correct time scale.

Relation between display axis and sweep units can be selected individually. This depends upon physical readout camera orientation and software readout display setup (SETUP/READOUT CAMERA menu) for image rotation and image flip. Optronis generally proposes to install the readout camera with physical 90° rotation and 0° software rotation without image flips. The resulting correspondence is:

Horizontal Display Axis ⇔ Time - based on sweep unit 1 setup

The **Vertical Display Axis** might be used for timing information in case a second sweep unit (example TSU21-10 or TSU22-10) is used. Second sweep unit:

Vertical Display Axis ⇔ Time - based on sweep unit 2 setup

The Pixel Size value indicated with the setup of the readout camera is used to convert the pixel number to the dimension in mm.

Remark: The reading of the sweep speed is executed each time an acquisition starts or when real-time display is started. Therefore, the real-time needs to be stopped and started again in case the sweep speed had been changed.

Wavelength based on spectrometer setup

If a spectrometer is installed in front of the streak camera it is possible to calculate wavelength. For typical configurations the vertical display axis is related to wavelength information.

Vertical Display Axis ⇔ Wavelength based on spectrometer setup

If the spectrometer is controlled by the PC the actual spectrometer setting is used. In case the spectrometer is not controlled by the PC for example because it is controlled by a particular software or it has no PC compatible interface, the parameters set on the *Setup/Spectrometer* box are used.

Remark:

Whether the *Horizontal Display Axis* or the *Vertical Display Axis* can be used for wavelength calibration depends on the *Wavelength Axis* definition on the *Parameters Configuration* box in the SETUP/SPECTROMETER menu.

Linear

Any linear relation between pixel position and calibrated value can be defined. First the position on the readout camera where a known value can be specified has to be entered. So the position [pixel] with its value has to be defined. The slope parameter allows entering the gradient of the calibrated value where the unit parameter defined the displayed unit.

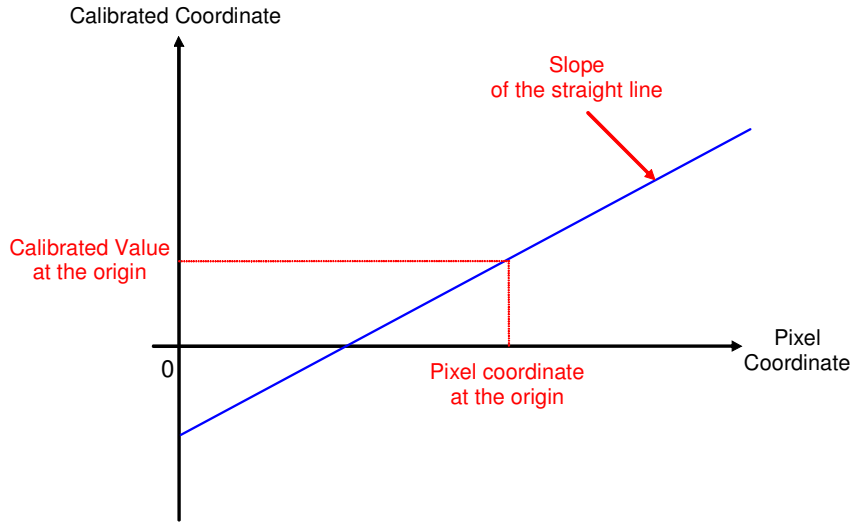

Example: At screen position 240 pixel the time should be zero and the total horizontal screen having 1392 pixel corresponds to a time base of 13.92ns. Consequently these parameters have to be entered:

Position [Pixel]	=	240	Value	=	0
Slope [1/Pixel]	=	0.01	Unit	=	ns

Multi-Linear

The Multi-Linear feature allows separating the screen into different segments having different slopes. Each segment is defined by two pixel coordinates. To calculate a calibrated value, the system determines the segment containing the pixel value and calculates the calibrated value by linear interpolation. Linear extrapolation is applied for pixel values outside the defined segments. With *Set* the following dialog box opens.

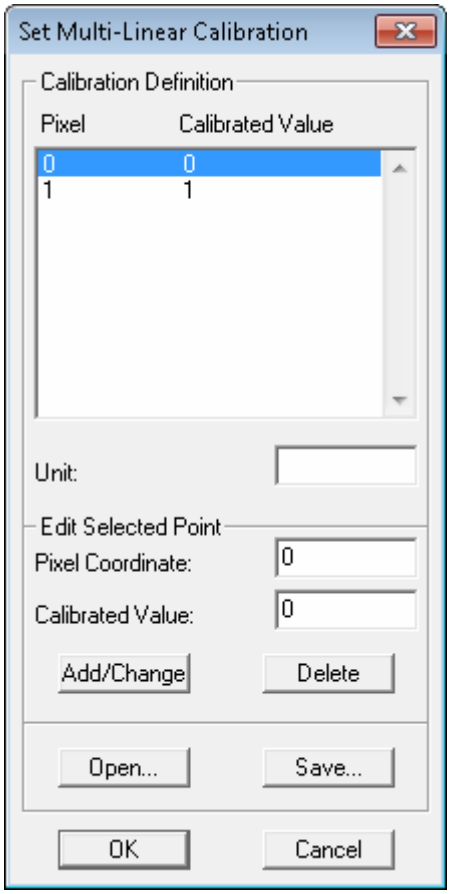

The dialog box contains a list box where **Pixel** values and the corresponding **Calibrated** values are shown. To add a new pair of points or replace an older one, a **Pixel Coordinate** and a **Calibrated Value** has to be entered and the **Add/Change** button has to be activated. To delete a pair of points, the pair has to be selected and then the **Delete** button has to be activated. The edit box named **Unit** is used to enter a string of characters. This string is displayed after the value of the calibrated coordinate.

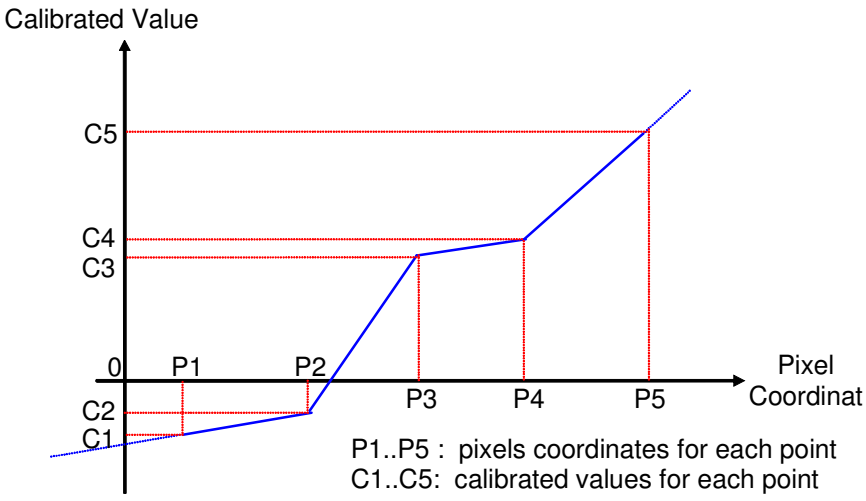

Open

The command loads an existing calibration. The calibration is available as disk file with the .SCL extension. This command opens the common windows dialog box to select a file.

Save

The command saves the current calibration for the horizontal or vertical axis to the disk. If the document has not been saved before, the application opens the common windows dialog box to input the filename. The Calibration file has the .SCL extension.

Photon Detection

This mode is useful when working at low light level. In this mode, only a limited number of photons are detected at each frame. If the photons can be seen as single events, it is possible to count them individually instead of accumulating them in an analogue frame. Therefore only frame areas with intensities higher than a detection level fixed by the user are processed. The centre of gravity in this area represents the coordinates of a single photon impact. In the resulting frame, the pixel at the same coordinates is increased by one. This method allows the reduction of the readout noise of the readout camera and also the photo-cathode noise of the frame intensities if the system is used with the OPTOSCOPE streak camera.

Photon Counting Threshold command opens a dialog box named Photon Detection Setup to change the detection level used in photon counting mode.

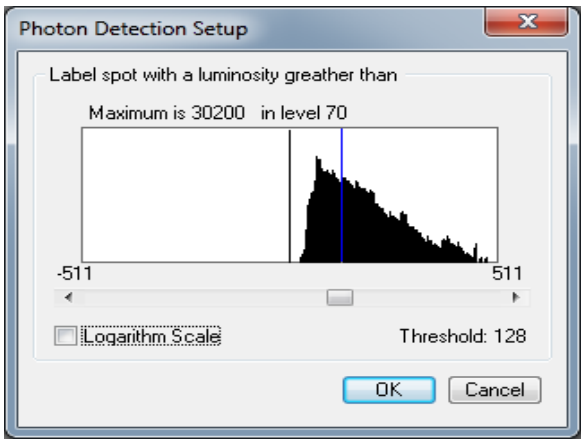

The Graphic area in the dialog box displays the luminosity histogram of all pixels. The threshold level is displayed using a vertical blue line.

The check box named **Logarithm Scale** controls the display of the histogram with a logarithmic scale when checked or a linear scale otherwise.

The detection level setup has to consider the readout noise of the camera and the detection efficiency of the system. The detection level should be set at the readout camera offset level plus 3 to 5 times the rms readout noise. If for example a frame is analyzed with the mean value command,

the mean value might be 70 and the standard deviation 11. Then the detection level should be set to at least 103 to 125.

Hint: In case the dark image of the readout camera is not perfect flat, a dark image can be acquired as reference and subtracted from the actual image prior to proceed with photon counting. The detection level has to be modified accordingly.

Geometrical Correction

A set of different correction processes can be defined in order to correct the image for geometrical errors caused by image distortion, sweep speed non-linearity or transit time distortion. Each type of error has its own menu. The corrections are executed automatically after each acquisition or if the command Geometrical Correction is activated on the Processing menu. During real time operation or snap-shot acquisition, no correction is made.

The order of corrections is:

Static Distortion Correction

Speed Non-Linearity Correction

Transit Time Variation

Static Distortion Correction

This correction can typically be used to correct barrel or cushion distortion caused by the streak tube or readout camera. System distortion characterization is required prior to their correction. Typically an image showing a grid of points that should ideally be aligned on strait lines needs to be captured. Realistically, the grid points are not aligned on straight lines but more likely on bended lines due to distortion. A distortion text file contains a set of points that are forming a grid. Details about principles of distortion correction with methods how to characterize the system and the distortion text file are given in the annex. The menu below will assist in creating the distortion text file.

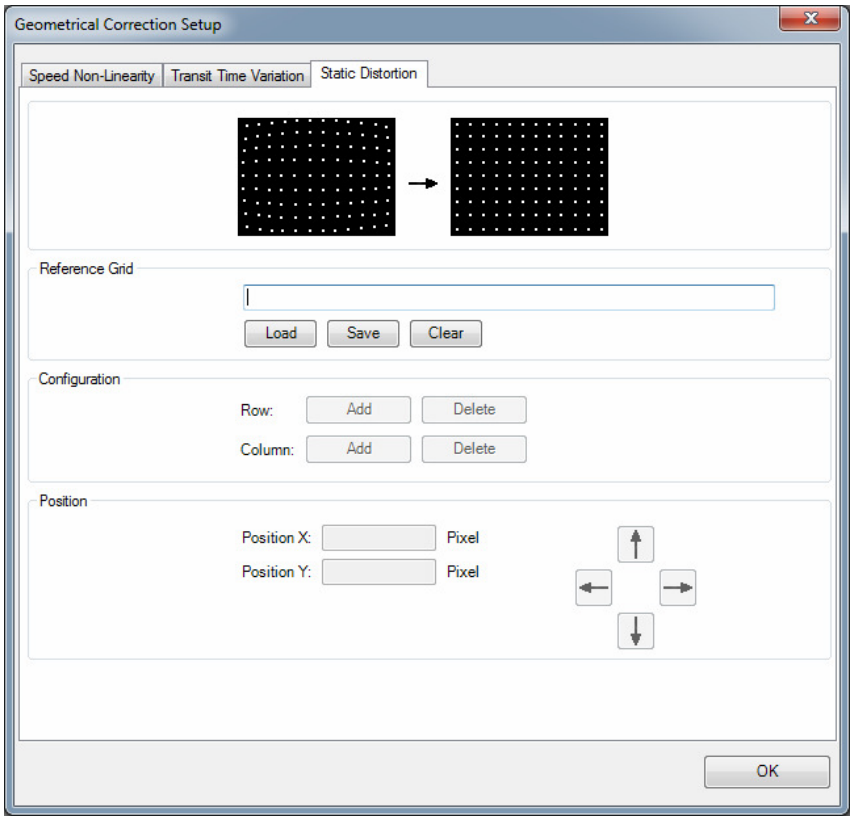

The distortion correction setup provides a convenient possibility to generate the distortion text file by using the distortion gird editor. The text file might be edited also manually. Before the distortion grid editor is started, an image showing distortion should be loaded and the scaling should be removed, e.g. pixel coordinate should be shown.

Entering the menu will show a grid with minimum 5 horizontal and 5 vertical lines.

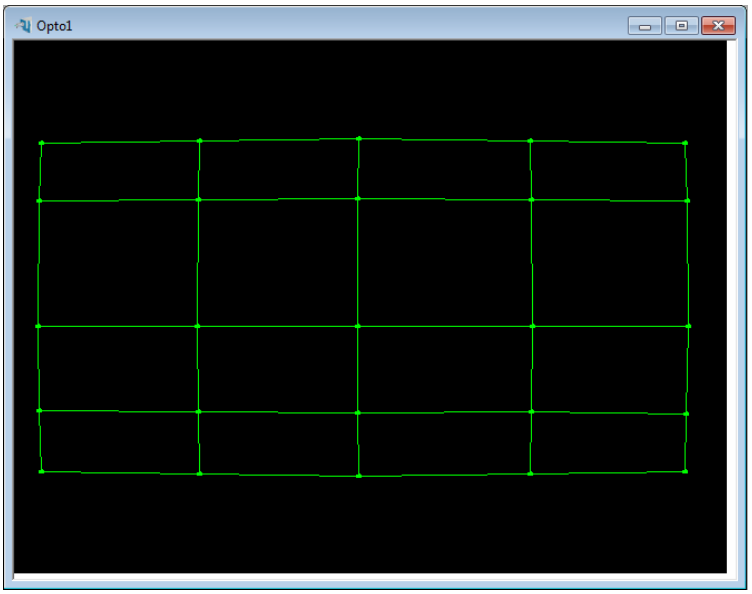

Click to one of the intersecting lines. The intersection point will become read and the pixel coordinates are shown on the **Position** box.

Position

Using the mouse pointer allows to move the point and to align it to the feature on the background image. Pressing the “Shift” key limits the movement to horizontal direction and pressing the “Crtl” key allows moving the point only in vertical direction. Alternatively, the arrow buttons or arrows keys (←, →, ↓, ↑) can be used. Non-integer point coordinates might also be entered directly. Those coordinates might be resulting from centre of gravity (COG) calculation by using horizontal or vertical profiles.

Once all points are defined use **Save** button to write the distortion text file to disk.

Row / Column

The number of lines should be increased by ROW/ADD if the image is showing more significant features with apparent distortion. COLUMN/ADD can be used if more vertical lines are needed. Removing lines is possible until the minimum of 5 horizontal or vertical lines is reached.

File

Distortion text file is saved on disk by using this file name. The load command allows reading of the point definition from the file.

Speed Non-Linearity Correction

Typically sweep speed linearity and absolute sweep speed value are both well within an error range of ±5% for the OptoScope streak system. In case measurements with higher precision are needed this correction process can be used.

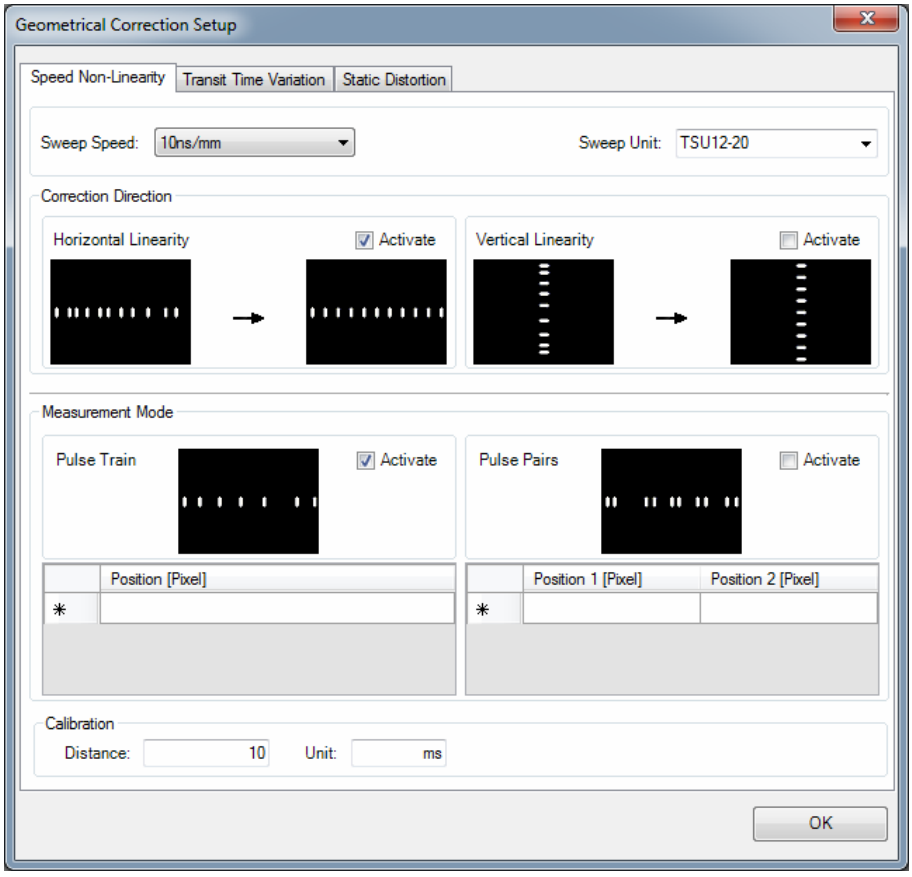

Prior to correct sweep speed non-linearity, the speed needs to be characterized. This can be done by two different methods: Pulse Train and Pulse Pairs.

Sweep Speed and Sweep Unit

For each sweep unit and sweep speed a set of characterization data can be saved. The sweep unit is defined by its unique identifier whereas only the type of the sweep unit is shown. In case different sweep units of the same type are available, the type can be changed. The sweep speed can be characterized for all available sweep speeds but this is not a requirement. Only for sweep speeds that contain valid characterization date, the non-linearity correction will be done.

Correction Direction

The direction on witch the correction will be executed needs to be defined. Make sure the display direction is also related to the sweep unit selected above.

Pulse Train

A train of temporally equidistant pulses is used. In case their distance is know, the value can be entered on the **Distance** box. The pulse train method needs to be activated on the corresponding check box.

For each pulse its centre of gravity should be entered. Similar to the distortion correction the active image will show green lines for assistance. Activating the line will high-light the corresponding position. The centre of gravity can either be entered by moving the lines with the mouse pointer or by directly entering the pixel coordinate.

Pulse Pairs

Contrary to the pulse train method only 2 pulses with constant temporal distance are needed. Typically the measurement is made by capturing different images while the absolute position of the pulse pair (not their temporal distance) is changed from image to image. In case the temporal distance of the pulses is known, the value can be entered on the **Distance** box. The pulse pairs method needs to be activated on the corresponding check box.

For each pair of pulse their centre of gravity has to be entered. Similar to the distortion correction the active image will show green lines for assistance. Activating the line will high-light the corresponding position. The centre of gravity can either be entered by moving the lines with the mouse pointer or by directly entering the pixel coordinate.

Please note that this correction can be used in an effective way only if the streak camera is controlled by the OptoAnalyse software. This allows relating an image to a particular sweep unit and sweep speed.

Transit Time Variation

Transit time variation is caused by the streak tube and becomes visible at very fast sweep speed typically above 100ps/mm. The effect is due to

different transit times of photoelectrons when they are emitted on the tube axis or apart of it.

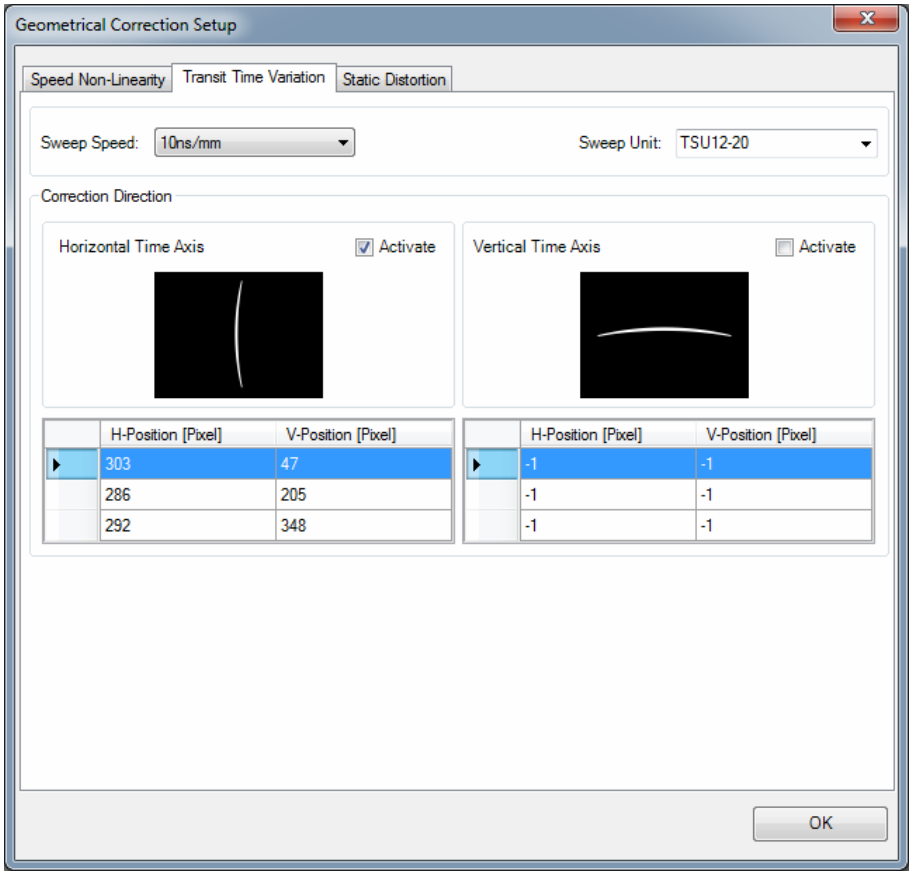

Prior to correct transit time variation, it has to be characterized.

As very short time differences are measured, the measurement setup has to be adequate. Any difference in path length from the light source to the centre of the slit and from the or light source to edge of the slit will be corrected also. This correction might not be intentional.

Please also make sure that sweep direction is the same for the image that characterises the transit time variation and the image to be corrected. This is a requirement to be respected for synchroscan sweep units (SSU11-10)

Sweep Speed and Sweep Unit

For each sweep unit and sweep speed a set of characterization data can be saved. The sweep unit is defined by its unique identifier whereas only the type of the sweep unit is shown. In case different sweep units of the same type are available, the type can be changed for example SSU11-10-A and SSU11-10-B. The transit time variation can be characterized for all available sweep speeds but typically only for the fastest ones this is needed. Only for sweep speeds that contain valid characterization date, the transit time variation correction will be done.

Correction Direction

The direction on witch the correction will be executed needs to be defined. Make sure the display direction is also related to the sweep unit selected above.

Please note that this correction can be used in an effective way only if the streak camera is controlled by the OptoAnalyse software. This allows relating an image to a particular sweep unit and sweep speed.

Method

The transit time variation is characterized by capturing a single pulse at high sweep speed. The pulse should appear as strait line but is bended due to the transit time variation. Now 3 points along the bend line have to be defined. The software will fit a 2nd order function and show this function on the image as green line for assistance. The defined points are also shown. The green fitting line should be well aligned to the bended pulse.

Spectrometer

The setup of the spectrometer as well the parameters to obtain an automatic wavelength calibration can be defined with this dialog box.

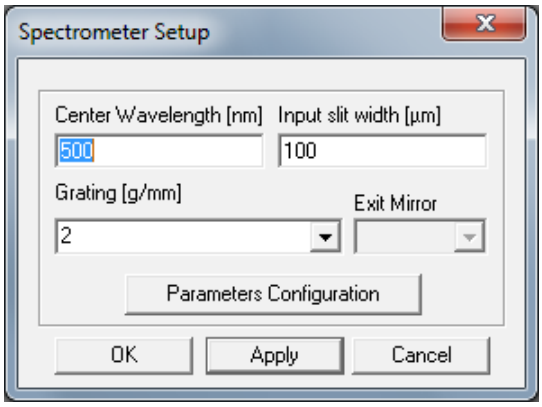

Shortcut: Shift + P

Key parameters of the spectrometer like Center Wavelength, Input Slit Width, Grating and selection of the Exit Mirror (if available) can be controlled, provided the spectrometer is connected to the PC and the corresponding driver is installed. The spectrometer will be set to the defined value if either the “OK” or the “Apply” button is pressed.

In case the spectrometer can not be controlled by the PC, center wavelength and grating should be entered anyway. These parameters are used to calculate the actual wavelength axis calibration.

Input Slit Width can be controlled if a motorized input slit is available on the spectrometer. The Exit Mirror can also be controlled if two spectrometer outputs and a motorized mirror are available.

Parameters Configuration

For applications using a spectrometer installed in front of the streak camera the corresponding axis on the streak image can be wavelength calibrated. The calibration of the wavelength axis depends on spectrometer type, mechanical alignment to streak camera as well as on the spectrometer setup. The *Parameters Configurations* box allows defining spectrometer type and characteristics related to the mechanical alignment.

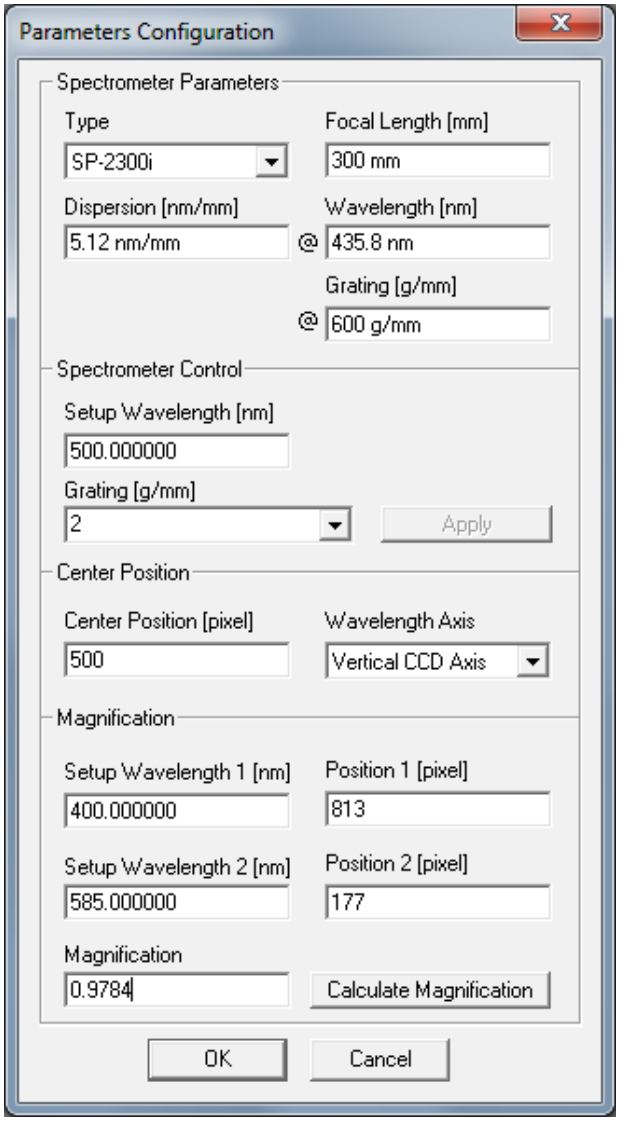

Spectrometer Parameters

This set of parameters is related to the spectrometer. A number of spectrometers are pre-defined with its important parameters. In case the actual spectrometer is listed, its parameters will appear automatically. These parameters might be modified and saved for particular applications mainly in case the actual spectrometer is not listed.

For a set of manually entered parameters it is important that they are consistent. So focal length and dispersion have to be entered correctly. The dispersion parameter is typically given by the spectrometer manufacturer at a particular wavelength and with a particular grating setting. It is not relevant whether the grating is actually selected or available.

Spectrometer Control

The wavelength of the spectrometer and grating selection can be controlled directly. This simplifies setup for the magnification measurement later as the *Parameters Configuration* box can remain open.

Remark: Set *None* on the *Scaling* box for the wavelength axis prior to continue the center position measurement and magnification measurement.

Center Position

This is the pixel position where the center wavelength set on the spectrometer will appear on the image. Any change in optical alignment between spectrometer and streak camera should be followed by a verification of the center position. Two alternative methods A or B are possible.

A. Setup by using a light source with precisely known wavelength:
Set the spectrometer to the wavelength of the source used. Direct the light on the spectrometer input slit. The pixel position along the wavelength axis where the signal appears has to be entered. The measurement can be done with any grating available. In case a different grating is used for later measurements, any calibration error from the spectrometer has to be considered.

B. Setup by using zero wavelength setup.
Set the spectrometer to zero wavelength and direct some light onto the input slit. The pixel position along the wavelength axis where the signal appears has to be entered.

The *Setup Wavelength* field of the *Spectrometer Control* section above can be used.

The definition of the wavelength axis has to be done here. Wavelength axis has to be along slit length. Depending on the selection of the wavelength axis, the corresponding pixel size given with the setup of the readout camera will be used. Any change of pixel size should be succeeded by recalibrating the magnification parameter.

Magnification

Defined *Spectrometer Parameters* together with the actual wavelength and grating selection allows calculating the wavelength calibration. Only the electro-optical magnification between spectrometer output and readout camera input has to be considered. Either a theoretical value (method A) or a measured value (method B) can be used.

A. The combined magnification of input optics and streak tube magnification can be used. For SC-10 systems there parameters are 0.5 for the input optics (IOV-10 or IOU-10) and 2 for the streak tube. Magnification = 1.
Depending whether the spectrometer is operated in order 1 or order -1 made, magnification might be -1 also. Just modify center wavelength and check whether calibrated wavelength values are consistent. Do not press “Calculate Magnification” as this will overwrite the entered value.

B. The magnification of input optics and streak tube can be determined by following the procedure below.

1. Illuminate the spectrometer input slit with light having a well known wavelength.
2. Set spectrometer to wavelength 1 by entering this wavelength in field *Setup Wavelength* or by controlling the spectrometer by other means. This wavelength should result in a signal appearing out of the center position.
3. Enter the wavelength in field *Setup Wavelength 1* and enter also the corresponding pixel *Position 1*.
4. Set spectrometer to wavelength 2 similar to step 2 but with a signal appearing on the opposite of the center position compared to step 2.
5. Enter the wavelength in field *Setup Wavelength 2* and enter also the corresponding pixel *Position 2*. Pay attention that both positions are separated by about 50% of the wavelength axis length.
6. Press “Calculate Magnification”

After the parameter setup, the wavelength calibration can be activated.

Timing Controller

Timing controller means a device controlling the timing of the trigger or synchronization signal used by a sweep unit. Examples below show systems where sweep unit 1 is used with different timing controllers. Example three shows the synchroscan sweep unit SSU11-10 with an internal phase shifter as timing control device.

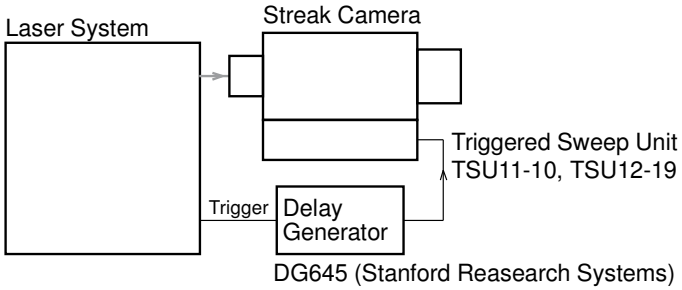

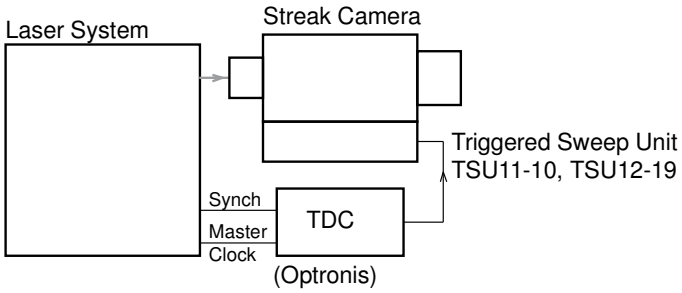

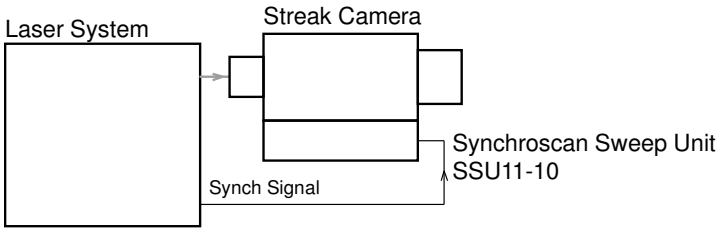

Key feature is to control the sweep unit timing in order to compensate trigger delay changes when sweep speed is modified. So the optical signal still appears within the visible time base window. This simplifies system operation as the setup of the timing controller does not need to be changed manually for each sweep speed change.

Using the timing control requires a connection between the timing controller and the PC as well as a connection between the streak camera and the PC. Timing controller setup is saved for each sweep speed and together with sweep unit information. Each sweep unit will thus have its own set of timing parameters. If the streak camera is connected to the PC, the timing controller menu can be opened and might appear as follows. The example shows

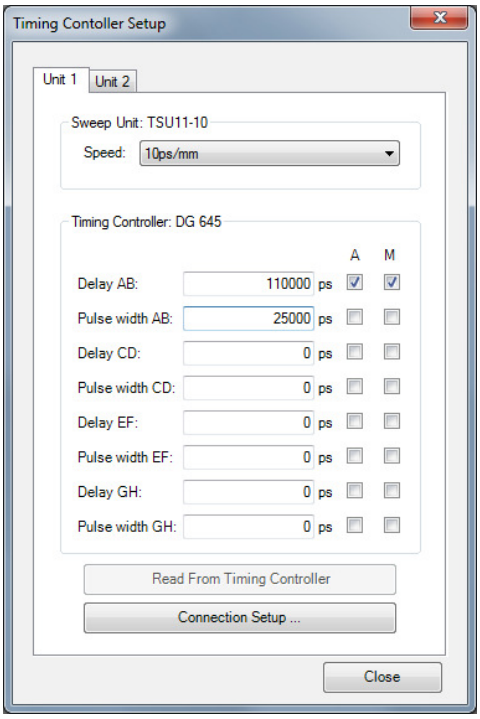

Prior to delay time settings, the type of timing controller providing a trigger signal for unit 1 or eventually unit 2 has to be defined. Additionally connection parameters need to be set.

Connection Setup

The connection setup menu has to be opened from the timing controller setup.

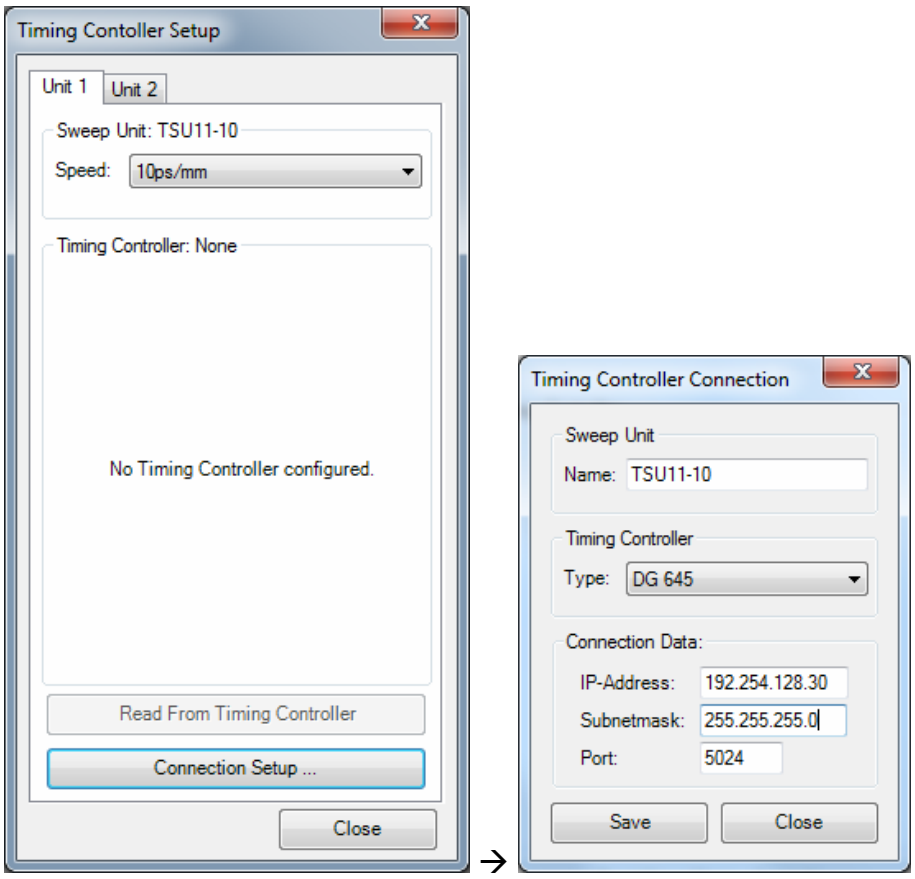

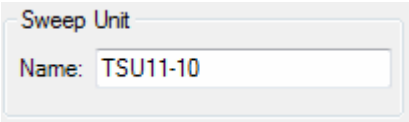

The name of sweep unit might be completed or modified in order to relate it to customer specific requirements.

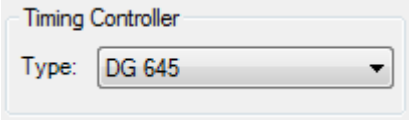

The type of timing controller has to be defined. This relates a particular sweep unit to the timing controller settings. Actually 3 controller types are possible:

TDC - Time and Delay Controller, Optronis GmbH

DG645 - Digital Delay Generator, Stanford Research Systems Inc.

Internal - This defines the phase shifting device integrated in the synchroscan sweep unit SSU11-10.

Triggered sweep units like TSU11-10 or TSU12-10 are used with DG645 or TDC whereas synchroscan sweep units like SSU11-10 only use „Internal“ as timing controller.

Connection Data for DG645

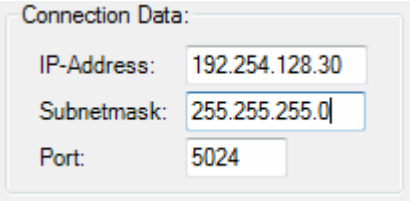

The DG645 has to be connected to the PC via a standard Ethernet connection. Depending on network structure and interface setup of the PC different configurations are possible. For a standard setup the IP-Address with Subnet Mask and Port number as shown above are used.

To make sure the DG645 is configured accordingly. To modify the DG645 configuration a short description is provided. Please refer to the DG645 user manual for further details.

Reading DG645 IP-Address: press “Shift” key

press “6 (Status)” key

use arrow up and down keys until “TCP IP Status” is displayed

press “6 (Status)” 3 times to get the IP-Address defined by DHCP.

Connection Data for TDC

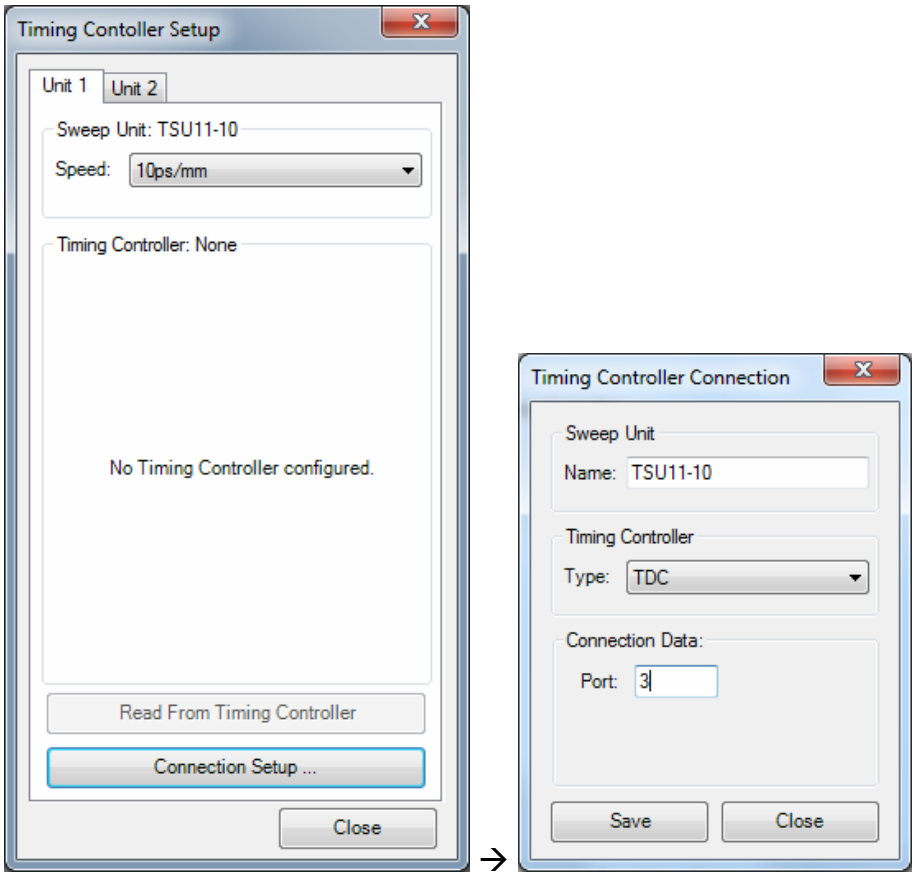

The TDC is connected via USB interface. Port number just defines the number of the USB port where the TDC is connected. If no number is defined or if no communication is possible OptoAnalyse will try to find the TCD on the first 20 USB ports.

Connection Data for “Internal”

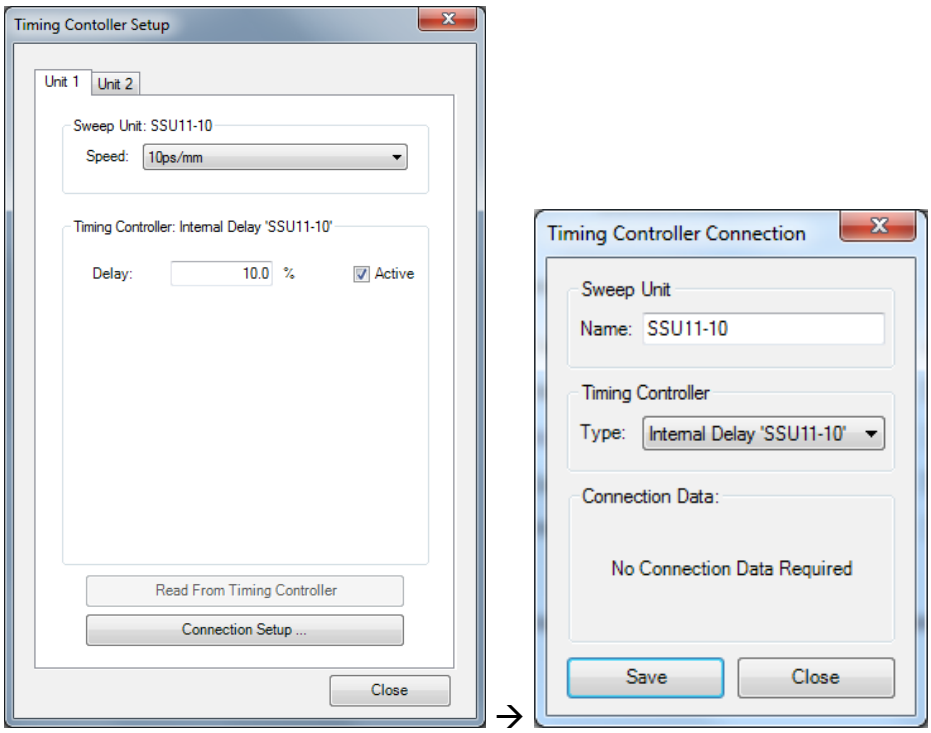

For this setup the selected sweep unit 1 or unit 2 needs to be a synchroscan sweep SSU11-10 or a synchronous blanking unit SBU21-10. No particular connection setting is needed.

How to use the Timing Controller setup menu

The menu shows the delay time adjustments for sweep speed 10 ps/mm and a DG6454 timing controller. OptoAnalyse will only control timing parameters. Other parameters like pulse amplitude or operation mode need to be set manually.

Typically delay values for the output used to trigger the streak camera sweep unit need be modified. Other outputs to trigger laser or other devices might remain with unchanged delay times. Reading from the DG645 will update all delay values. Only if the "A" box A ☑ is activated, the corresponding time is written to the DG645.

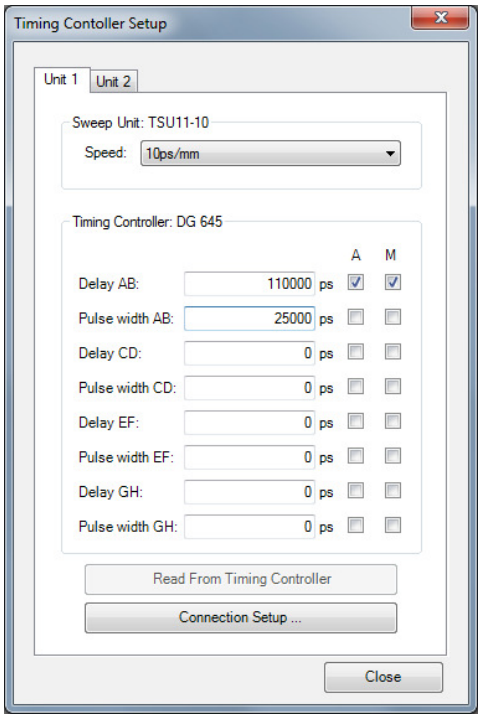

The examples below for the delay of AB output will show how the timing parameters can be modified.

1. The delay value might be entered directly by typing the number.

The "A" box A ☑ need to be marked and the "Return" button has to be pressed to send the number to the timing controller.

2. A particular digit might be selected and using the arrow up and arrow down key will increment or decrement this digit.



The "A" box A ☑ need to be marked to obtain a simultaneous update of the timing controller setup.

3. The parameter might also be modified on the DG645 directly. This might require configuring the DG645 for local control by pressing "Shift" key followed by "3" key.

Using the “Read From Timing Controller” will update all parameters on the OptoAnalyse software.

Individual delay time need to be programmed for each sweep speed. Selecting a sweep speed on the timing controller box will switch the streak camera to this speed and display the corresponding set up delay values. The values where “A” box is checked are updated simultaneously.

For each parameter the update on the timing controller can be set to “Active”. So with the “A” box activated, the timing controller will be updated from the OptoAnalyse software. Typically, the parameter related to the output of the DG645 that triggers the sweep unit will be set to “Active”. This can be done for each sweep speed individually. The activation is saved.

The box named “Modify” can be activated for each parameter but will be active or inactive for all sweep speeds simultaneously. With the “M” box activated, incrementing or decrementing is done simultaneously for ALL other sweep speeds.

Once the timing controller is set correctly for all sweep speeds, any change in cable length or other laser settings might require recalibration delay time for each sweep speed. This task can be simplified with the “M” box. Activating the “M” box is not saved.

Similar to the modification of timing parameters with the DG645 controller, the TDC controller is used. There is one particularity when using the TDC.

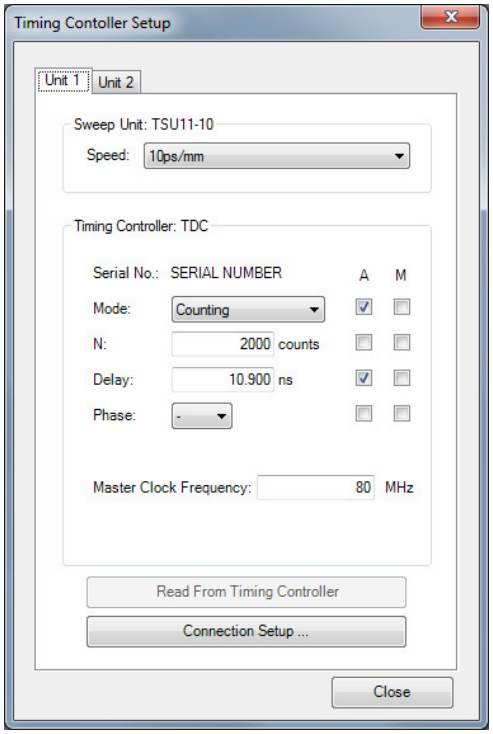

In case the delay value is incremented or decremented beyond the possible delay range, the count value N is incremented and the new delay value is corrected accordingly. This requires precise information of the master clock frequency. For example 80 MHz is entered.

Assuming the minimum delay value is 10.9 ns.



The ns digit is marked.



If the delay value is decremented by pressing the down key ↓ the counts number N is decremented

2000 counts – 1 = 1999 counts

and a new delay is calculated by:

10.9 ns – 1 ns + 1/80 MHz = 22.4 ns

resulting in:

In case the “M” box is activated, the same rule is applied for the delay value and counts number for all other sweep speeds. With the “A” box activated the parameter modifications will be send to the TDC.

All timing control parameters are saved on the .INI file located in the same directory as the OptoAnalyse software.

Readout Camera

The **Readout Camera** command opens a dialog box named Readout Camera Setup to select the acquisition parameters of the readout camera. The content of that dialog box depends on the readout camera (ANIMA-PX, SCRU-SE-A, SCRU-ST or SCRU-AR). The different dialog boxes are described below.

Shortcut: Shift + G

Remark: The readout camera can be installed with different orientations on the streak camera. Additionally, the image captured by the readout camera can be rotated before it is displayed. Therefore 3 different orientations need to be separated.

Streak Orientation: This refers to the physical orientation of the slit and sweep direction seen on the screen of the streak camera. Typically the slit is oriented horizontally and appears horizontal on the screen. The first (fast) sweep direction is perpendicular and therefore vertical from bottom to top.

Sensor Orientation: This refers to the sensor chip. The pixels of one line of the sensor are oriented horizontally. This is typically the long side of the chip and corresponds to the sweep of the first (fast) sweep unit. In most cases the camera is installed with 90° rotation so the horizontal sensor direction is fixed vertically on the streak camera.

Display Orientation: This refers to the orientation on the display. The setup dialog box allows rotating the image before it is displayed. As the sensor is already installed with 90° rotation on the streak camera, 0° display orientation needs to be selected to obtain a horizontal (fast) time axis on the display although the sweep direction on the streak camera is vertical.

Using the ANIMA-PX readout camera

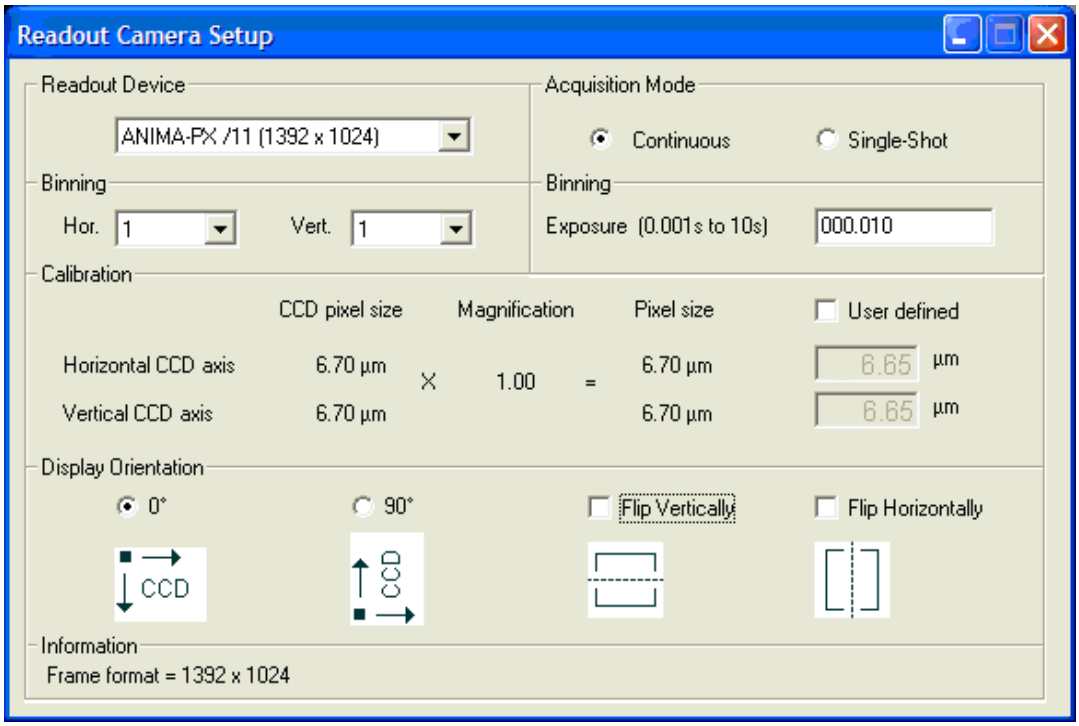

The **Readout Device** text shows the type of ANIMA-PX camera connected to the frame-grabber.

The **Binning** frame sets the binning along the horizontal axis or the vertical axis. A binning is a hardware operation to accumulate intensity charge of contiguous pixels. Just select the number of contiguous pixels along the horizontal axis and the vertical axis. This operation creates a super pixel with more sensibility but it decreases the resolution of the sensor. The horizontal and vertical orientation refers to the sensor chip and not to the display orientation.

The **Exposure Time** edit box is used to adjust the exposure time from 1 ms to 10s by step of 1 ms.

In the **Acquisition Mode** frame, the radio buttons **Continuous** and **Single-Shot** selects the operating mode of the acquisition system.

In **Continuous** mode, the camera emits always a video frame and the system is able to acquire frames in continuous mode. In **Single-Shot** mode, the system needs to arm the camera and when a trigger is applied to the intensifier or the frame-grabber of the camera, a frame is emitted and captured by the acquisition board.

The **Calibration** frame displays the pixel size in µm referred to the streak camera screen. This size is given on the test sheet of the readout camera. Typically these values can be used:

Please note that this value is used to calculate scaling of the image. Any change in value will have a linear impact on temporal or special axis calibration.

The **Orientation** allows selecting the orientation of the readout image on the display. As the physical installation of the sensor on the streak camera

can be changed this parameter allows to rotate the image in order to obtain a positive time axis in horizontal direction on the display.

The **Information frame** shows the current frame format.

Using the SCRU-SE-A Readout Camera

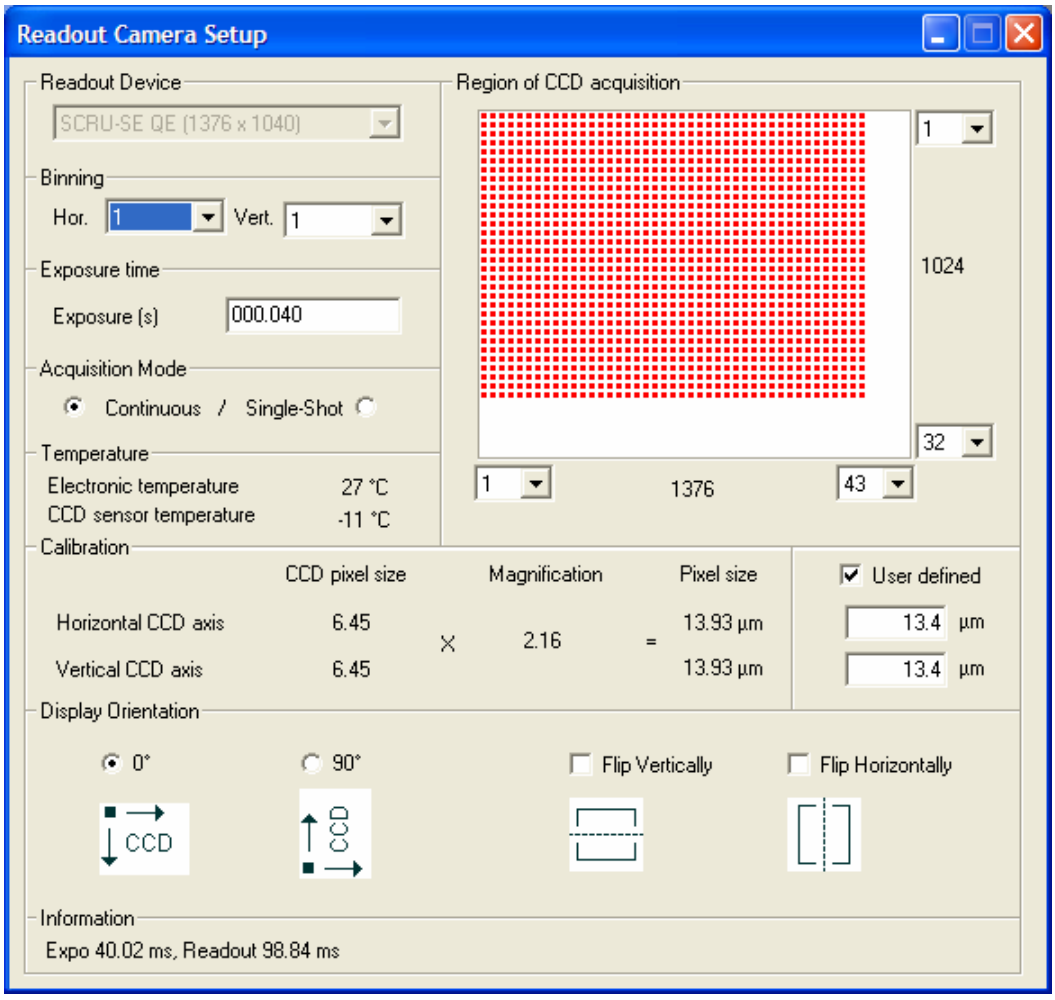

The **Readout Device** text shows the type of SCRU-SE-A camera connected to the frame-grabber. Commonly the cameras are SCRU-SE-A VGA (640x480), SCRU-SE-A SVGA (1280 x 1024) or SCRU-SE-A QE (1376 x 1040).

The **Binning** frame sets the binning along the horizontal axis or the vertical axis. A binning is a hardware operation to accumulate intensity charge of contiguous pixels. Just select the number of contiguous pixels along the horizontal axis and the vertical axis. This operation creates a super pixel with more sensibility but it decreases the resolution of the sensor. The horizontal and vertical orientation refers to the sensor chip and not to the display orientation.

The **Exposure Time** edit box is used to adjust the exposure time from 1 ms to 1000 s by steps of 1 ms. Shorter times than 5 ms are not recommended as the decay of most phosphor screens are in this order of magnitude. Typically 40 ms or more are recommended.

The **Acquisition Mode** allows to select between **Continuous** and **Single-Shot** acquisition. In **Continuous** mode, the camera acquires frames at the maximum rate possible. The acquisition process is not synchronized. In **Single-Shot** mode, the camera is armed and an external trigger starts the integration and readout process of the camera. Typically the trigger is provided by the streak camera and synchronous with the trigger of the image intensifier. The SCRU-SE-A camera requires an additional trigger cable between the trigger source (streak camera) and the acquisition board.

The **Temperature** frame displays the temperature in °C of the SCRU-SE-A electronics and the sensor chip. Typically the sensor has a temperature of –11 °C.

The **Calibration** frame displays the pixel size in µm referred to the streak camera screen. This size is given on the test sheet of the readout camera. Typically these values can be used:

Please note that this value is used to calculate scaling of the image. Any change in value will have a linear impact on temporal or special axis calibration.

The **Region of Sensor Acquisition** allows to select the part of the sensor to be read. The size is selected by steps of 32 pixels along the horizontal axis and the vertical axis. The area is defined by the mouse or by four numerical values to select the left, the right, the top and the bottom coordinates of the area. The orientation refers to the sensor chip. If the orientation is selected not to be 0°, it does not correspond to the display orientation.

When using the mouse, the pointer has to be placed on the upper left corner of the area to be selected. Moving the cursor and keeping the left mouse button pressed when moving to the lower left corner defined the region of sensor acquisition. If the mouse cursor quits the sensor area, the current selection is aborted. Reducing the acquisition region allows to increases the readout rate.

Attention: Only reduce the acquisition region if needed and make sure not to over-illuminate the region that is not captured.

The **Orientation** allows to select the orientation of the readout image on the display. As the physical installation of the sensor on the streak camera can be changed this parameter allows image rotation to specific requirements. Typically orientation is selected to obtain a positive time axis in horizontal direction on the display.

The **Information frame** shows the current exposure time, readout time and the rate.

Using the SI 1000 and SI 1000-4k readout camera

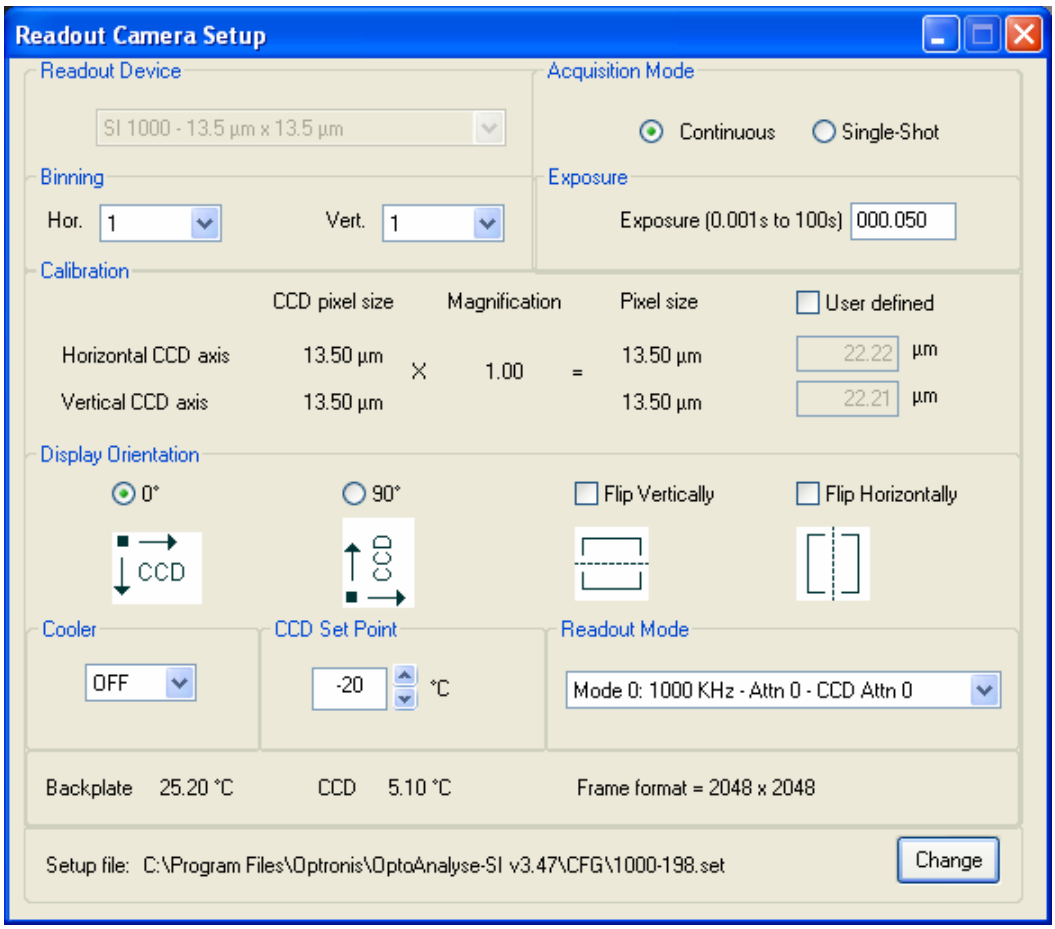

The **Readout Device** text shows the type of readout camera.

The **Binning** frame sets the binning along the horizontal axis or the vertical axis. A binning is a hardware operation to accumulate intensity charge of contiguous pixels. Just select the number of contiguous pixels along the horizontal axis and the vertical axis. This operation creates a super pixel with more sensibility but it decreases the resolution of the sensor. The horizontal and vertical orientation refers to the sensor chip and not to the display orientation.

The **Acquisition Mode** allows selecting between **Continuous** and **Single-Shot** acquisition. In **Continuous** mode, the camera acquires frames at the maximum rate possible. The acquisition process is not synchronized. It is recommended to operate the SI 1000 camera in **Single-Shot** mode to allow synchronization of exposure time and illumination of sensor chip. In **Single-Shot** mode the camera is armed and an external trigger starts the integration and readout process of the camera. Typically the trigger is provided by the streak camera and synchronous with the trigger of the image intensifier. A separate trigger cable between the trigger source (typically Trig. Out. of streak camera) and the camera I/O is needed.

The **Calibration** frame displays the pixel size in µm referred to the streak camera screen. This size is given on the test sheet of the readout camera. Typically these values can be used:

SI 1000: Horizontal Sensor Axis = 13.5 µm
Vertical Sensor Axis = 13.5 µm

SI 1000-4k: Horizontal Sensor Axis = 9.0 µm
Vertical Sensor Axis = 9.0 µm

Please note that this value is used to calculate scaling of the image. Any change in value will have a linear impact on temporal or special axis calibration.

The **Exposure Time** edit box is used to adjust the exposure time from 1 ms to 1000 s by steps of 1 ms. Shorter times than 5 ms are not recommended as the decay of most phosphor screens are in this order of magnitude. Typically 200 ms or more are recommended.

The **Orientation** allows selecting the orientation of the readout image on the display. As the physical installation of the readout camera on the streak camera can be changed this parameter allows image rotation to specific requirements. Typically orientation is selected to obtain a positive time axis in horizontal direction on the display.

The **Cooling** frame displays the cooler control status with Sensor Set Point and sensor temperature both in °C. Typical values are shown. Please refer to the user manual of the SI 1000 for more information and detailed recommendations.

Streak Camera

The program to control the streak camera is called OptoControl and is also available as independent application. The appearance of the box might be different to the Figure below. If there is no communication with the streak camera only the *Network Setup* can be accessed. Depending on the actual system configuration of the streak camera the number of control elements and their appearance might be modified. Example: If no second sweep unit is installed, the control elements of *Sweep Unit 2* are disabled. Additionally the appearance of the box depends on whether the camera is operating in *Standby* or *On* mode.

Shortcut: Shift + C

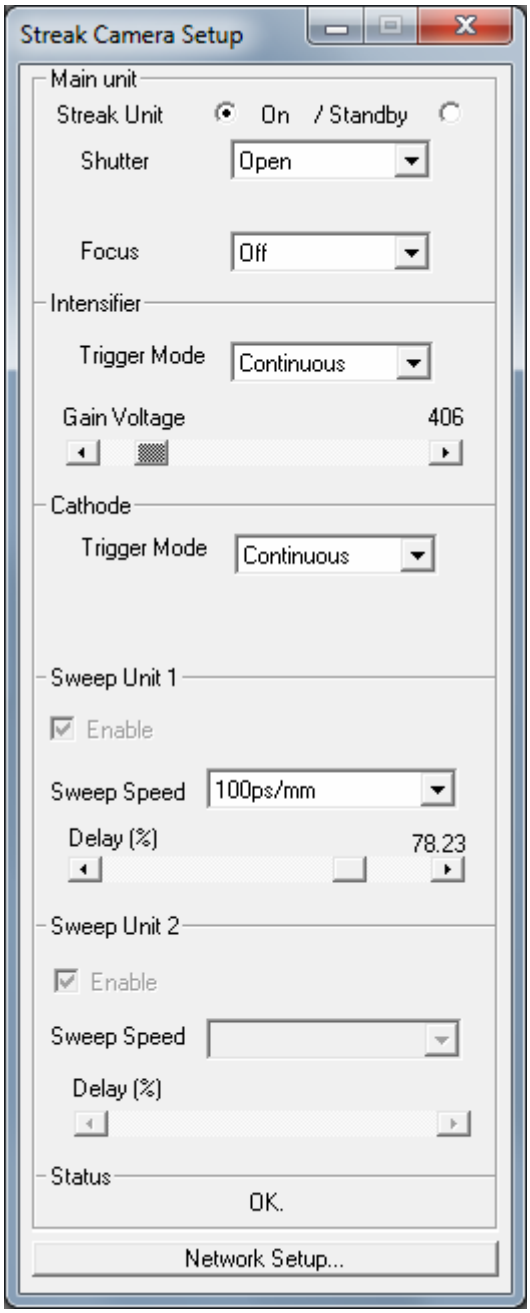

Control Elements



The buttons **Run** and **Standby** set the operating mode of the camera. If **Run** is selected, the camera is switched on and can be used for measurements. If **Standby** is selected, all high voltages are switched off and the camera is not available for measurements.

The **Shutter** box is used to select the shutter status. The shutter is opened, if **Open** is selected. The shutter is closed if **Closed** is selected. If **External** is selected, an external pulse applied on the shutter input opens the shutter. The text below of this box shows the real state of the shutter.

The **Focus** box is used to select the focus mode. If **Off** is selected, the focus mode is disabled and the camera is operating in deflection or sweep mode. If **On** is selected, the camera is set to focus mode.

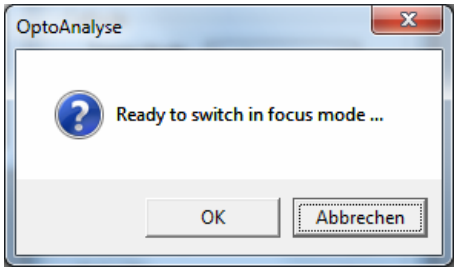

Switching to focus on, the message box appears to make sure this operation is intended by the user and to avoid unintended mode changes.

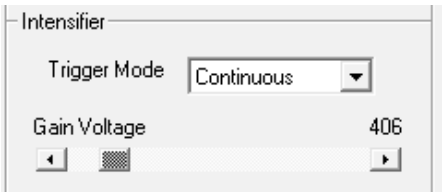

The Intensifier box allows to control the intensifier gain and to select the trigger mode. The **Gain Voltage** scrollbar controls the gain voltage of the intensifier. The selection of the intensifier **Trigger Mode** is possible according to the list below.

Continuous The intensifier is continuously open.

External The external trigger input of the streak camera main unit is used to trigger the image intensifier.

Unit 1 The sweep unit 1 triggers the image intensifier.

Unit 2 The sweep unit 2 triggers the image intensifier.

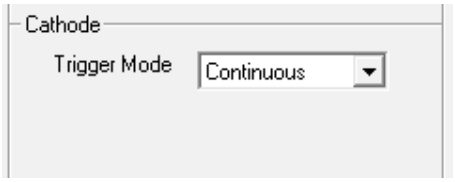

The operation mode of the streak tube photocathode is controlled by the Cathode box. The availability of trigger mode and cathode voltage adjustments depends upon the streak camera configuration. Gain adjustment is not shown above.

The selection of the streak tube photocathode **Trigger Mode** can be selected as shown below.

Continuous The intensifier is continuously open.

External The external trigger input of the streak camera main unit is used to trigger the photocathode gating.

Unit 1 The sweep unit 1 triggers the photocathode gating.

Unit 2 The sweep unit 2 triggers the photocathode gating.

The **Cathode Voltage** is only available for the X-Ray type streak camera. The voltage allows to modify the gain of the X-ray detection.

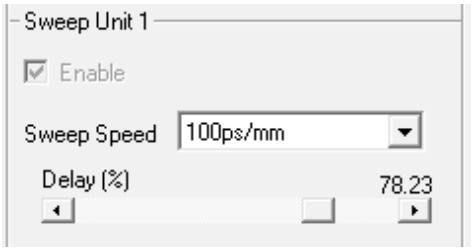

The **Sweep Unit 1** box is used to control the sweep speed and the delay for the temporal sweep. The list of sweep speeds is loaded from the camera. A click on the specific line selects the corresponding sweep speed. The delay can be set with the scrollbar if the sweep unit provides an adjustable delay setting. The ‘Enable’ flag permits to enable or disable the sweep unit 1. This control is available if two sweep units are installed. Otherwise the “Enable” flag only informs about the operation according to the focus mode setting. If the streak camera is set to Focus mode the sweep units do not need to be disabled individually.

The ‘Delayed Backtrace’ button allows to activate this feature on the sweep unit. In case the unit does not provide a delayed backtrace feature this control box is not available.

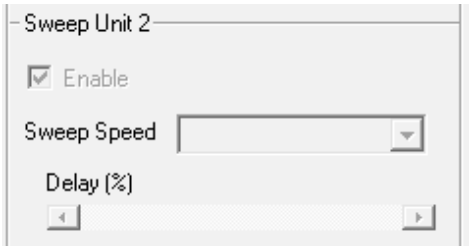

The **Sweep Unit 2** elements are used to control the sweep speed and the delay of the sweep perpendicular to the temporal sweep. The elements are active if a second sweep unit is installed. The list of sweep speeds is loaded from the camera. A click on the specific line selects the corresponding sweep speed. The delay can be set with the scrollbar if the sweep unit provides an adjustable delay setting. The 'Enable' flag permits to enable or disable the sweep unit 2. If the streak camera is set to Focus mode the sweep units do not need to be disabled individually.

The 'Delayed Backtrace' button (not shown above) allows to activate this feature on the sweep unit. In case the unit does not provide a delayed backtrace feature this control box is not available.



The **Status** text shows the current state of the camera. In particular, this status text informs whether any unexpected states had been detected on the intensifier, the unit 1 or the unit 2. The status information also informs whether the communication with the camera had been established.

Network Setup

The software controls the Optoscope SCMU streak camera by using an RS-232 connection and it controls the Optoscope-SC camera family by Ethernet connection between the control PC and the streak camera. The RS-232 connection type does not require any network setup.

The following description is based on an Ethernet interface on the PC that is already installed correctly. Please refer to the installation manual of the hardware or the help tools of the operating system for more details related to the Ethernet interface on the PC. The settings related to the program are available by pressing *Network Setup*.

Attention: Modifications of network settings might stop communication between PC and streak camera. Save all data prior to enter the Network Setup.

The following control box opens. The *OptoControl* settings on the left hand side are related to the control software of the PC. The *Camera* settings on the right hand side are parameters of the streak camera.

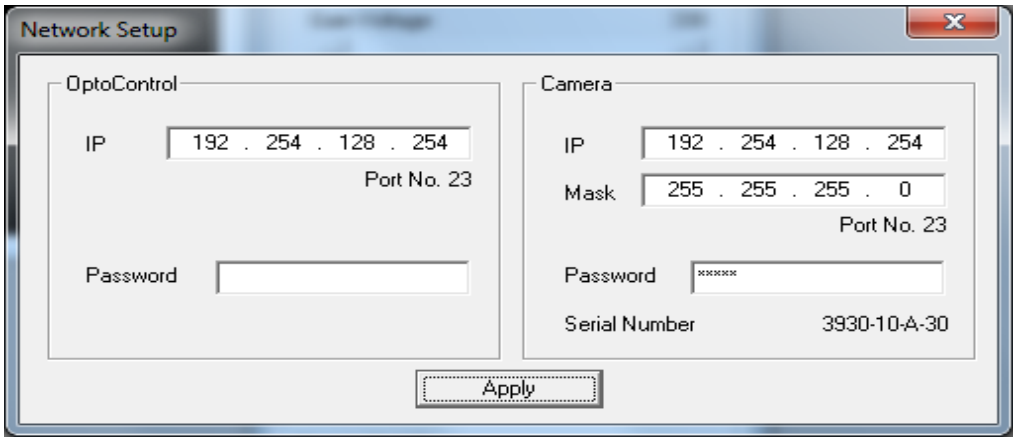

The **Port No. 23** is a fixed parameter that can not be changed. **Serial Number** is read from the streak camera. After modifying the settings, press **Apply** to make them active. Attention: The program needs to be restarted after any change of the settings.

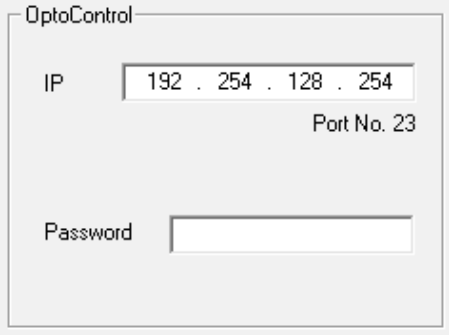

The **IP** address displayed is used by the OptoControl program to communicate with streak camera. This IP can be modified. To modify just the new number has to be entered.

The **Password** can be used to prevent unauthorized users from operating the streak camera. Before the streak camera can be controlled the password is verified. In case no valid password is sent to the streak camera, no control by Ethernet is possible. If the streak camera is configured with a password, the same password can be entered in the OptoControl section of the control box to simplify program start. If no password is entered in the OptoControl section, the correct password has to be typed after each program start.

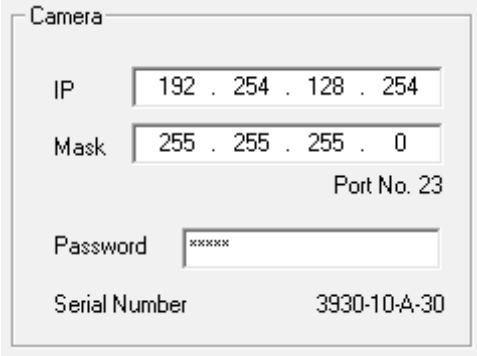

The **IP** and **Mask** of the camera related to the Ethernet communication are saved in the streak camera and can be modified by the control box. Before any modification of IP or Mask consult the network administrator to make sure not to create any conflicts on the network. Note the modified IP and Mask on the label of the streak camera main unit.

The **Password** is verified prior the streak camera can be controlled. To enter a new password it has to be typed and activated by **Apply**. The password should be noted on a save place but not on the camera itself. The password is case sensitive and must not be longer than 15 characters. Independent of its length always 5 “*” are displayed. To enter no password just delete the old password and press **Apply**. If no password is set only the IP of the camera needs to be know for system control.

Factory Settings

IP 192.254.128.254

Mask 255.255.255.0

Password -none-

The IP address and mask can be reset to this factory settings. Details are given with the user manual of the main unit. In case the password had been lost, please contact Optronis GmbH.

Window Menu

Cascade

Cascade command arranges all windows in a progression from upper left to lower right of working area.

Tile

Tile command re-sizes all windows to fit within the working area.

Arrange Icons

Arrange Icons command aligns icons on the working area.

Window list 1, 2, 3...

List of opened windows on the working area. Selection of a window in the list focuses this window.

About Optoscope

About Optoscope command displays the version of the application.

Profile Window

A profile window shows the mean value of the intensity distribution of an image along the horizontal or vertical direction. It is based on the selected ROI. If no ROI is defined, the entire image is used to calculate the profile. Assuming a ROI with horizontal size of *j* pixel and vertical size of *i* pixel the profile PH_x in horizontal direction is calculated by:

$$PH_x = \frac{1}{j} \cdot \sum_{y=0}^{j-1} I_{x,y}$$

A profile in vertical direction PV_y is calculated correspondingly by:

$$PV_y = \frac{1}{i} \cdot \sum_{x=0}^{i-1} I_{x,y}$$

Pixel intensity *I* at position *x, y* is referred as $I_{x,y}$. Each profile value is within $-2.147 \cdot 10^6$ to $+2.147 \cdot 10^6$ with 0.001 precision. The horizontal profile function is selected with *Processing* / Profile */ Horizontal* when a frame window is active. To select a vertical profile *Processing / Profile / Vertical*. is used.

The profile is **automatically refreshed** when the ROI on the frame window is modified or in case the frame window displays a real time image.

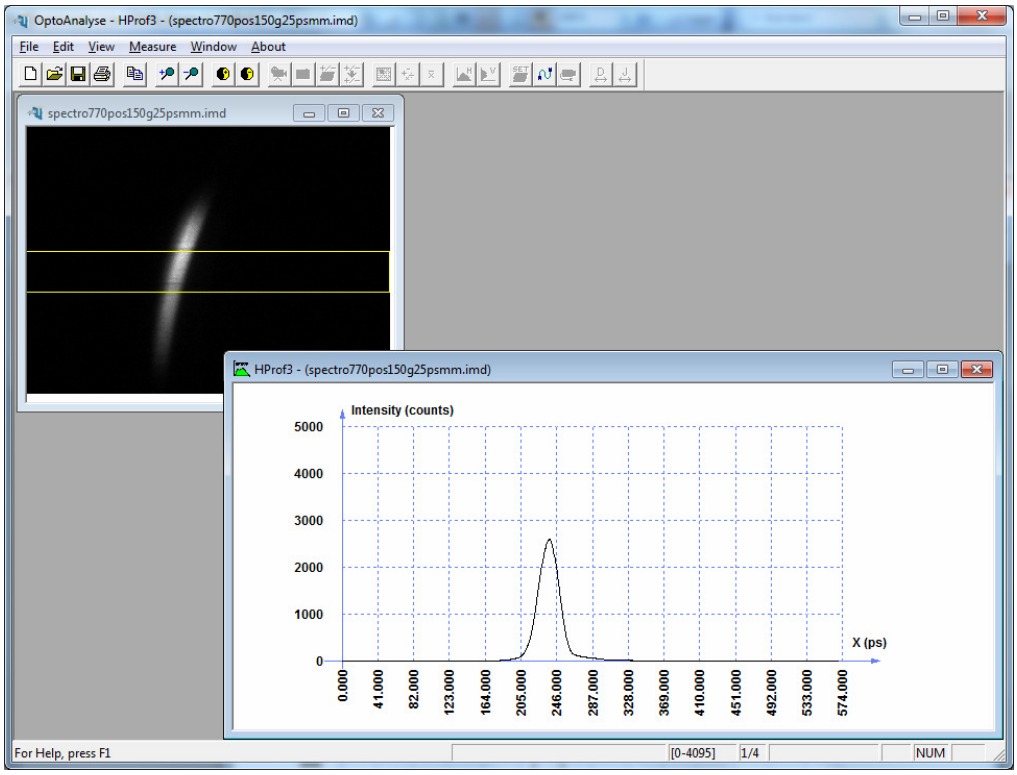

When the mouse cursor is moved on the profile surface, the status bar second field displays the intensity value of the profile at the cursor position. A range of interest can be defined.

Range of Interest

To create a range of interest:

- Position the mouse cursor on the left of the area to be selected.
- Press left button.
- Move the mouse cursor to the right, with left button always pressed.
- Release left button.

The range of interest is displayed by two blue cursors. Size and position could be changed using the mouse.

To change the position of the range of interest.:

- Position the mouse cursor on the left blue line. The cursor shape changes when correctly positioned.
- Press left button and move the cursor.

To change the size of the range of interest.:

- Position the mouse cursor on the right blue line. The cursor shape changes when correctly positioned.
- Press left button and move the cursor. To change the size symmetrically, press Shift at the same time.

Vertical Scaling

Vertical scale is modified using the **+** and **-** keys. The vertical offset is modified using the ↓ and ↑ keys.

Horizontal Scaling

The horizontal scale is shifted by pressing the → or ← keys. The **Page Down** keys zooms in and the **Page Up** key allows to zoom out.

File Menu

New

The **New** command creates a frame document and opens the corresponding Frame window. The window name is HProf (for a horizontal profile) or Vprof (for a vertical profile) follow by a number. This command doesn't create a histogram view.

Shortcut: Ctrl + N

Open

The **Open** command opens an existing document saved on the disk. This command enables to load frame, histogram or profile files. Files with the extension .PRH need to be selected if a horizontal profile has to be opened.

Shortcut: Ctrl + O

Close

The **Close** command closes the existing view.

Save

The **Save** command saves vertical profile in an ASCII file with an extension .PRV and horizontal profile in an ASCII file with an extension .PRH. These files could be read with EXCEL, MATHCAD or other software accepting ASCII file input.

A profile file is a succession of ASCII lines. A carriage return character terminates always a line. In each line, the coordinates of the point and the profile value is printed. A comma separates these values.

Shortcuts: Ctrl + S

Save As

The **Save As** saves the current document on the disk with a new name. The application opens the common WINDOWS dialog box to input the filename.

Print

The **Print** command opens the standard dialog box to print under WINDOWS.

Shortcuts: Ctrl + P

Print Preview

The **Print Preview** command opens a window which shows you the screen preview of the printing page.

Print Setup

The **Print Setup** opens the WINDOWS dialog box to setup the printer.

Exit

The **Exit** command closes the application.

Edit Menu

Copy like a Bitmap to the Clipboard

This copy command copies the view of the profile into the clipboard

Shortcuts: Ctrl + C

Copy like a Bitmap to the Clipboard

This copy command copies the view of the profile as ASCII file into the clipboard

Shortcuts: Ctrl + Shift + C

View Menu

Zoom In

This command allows to change the X-axis scale to enlarge the display. If a range of interest is defined the command scales the X-axis to display the entire range of interest. When the profile frame is zoomed, horizontal position of the view could be changed using the ← and → keys.

Shortcuts: Page Up

Zoom Out

This command allows to change the X-axis scale to zoom out. If no range of interest is defined, the entire profile is shown.

Shortcuts: Page Down

Linear Scale on Axis Y

The **Linear Scale on Axis Y** command displays the view of the profile with a linear scale.

Shortcuts: Ctrl + Shift + A

Logarithm Scale on Axis Y

The **Logarithm Scale on Axis Y** command displays the view of the profile with a logarithm scale.

Shortcuts: Ctrl + Shift +L

Drawing with Dots

The **Drawing with Dots** command displays the profile with a point for each value of the profile. This command deselects the Line command.

Shortcuts: Alt + D

Drawing with Lines

The **Drawing with Lines** command displays the profile with a line between two points of the profile. This command deselects the Dot command.

Shortcuts: Alt + L

White Background

The **White Background** command displays the profile with a white background. The profile is displayed with a black colour.

Shortcuts: Alt + W

Black Background

The **Black Background** command displays the profile with a black background. The profile is displayed with a white colour.

Shortcuts: Alt + B

Measure Menu

The measure menu allows to define different measurements applied to the profile. To obtain a measurement it has to be marked with a √. The results are displayed on top of the profile diagram as shown. The results are also available and can be saved if a sequence is acquired. The processing time to calculate the measurements might be considered for measurements where frame rate is an important parameter. To increase frame rate all measurements can be activated and removed individually.

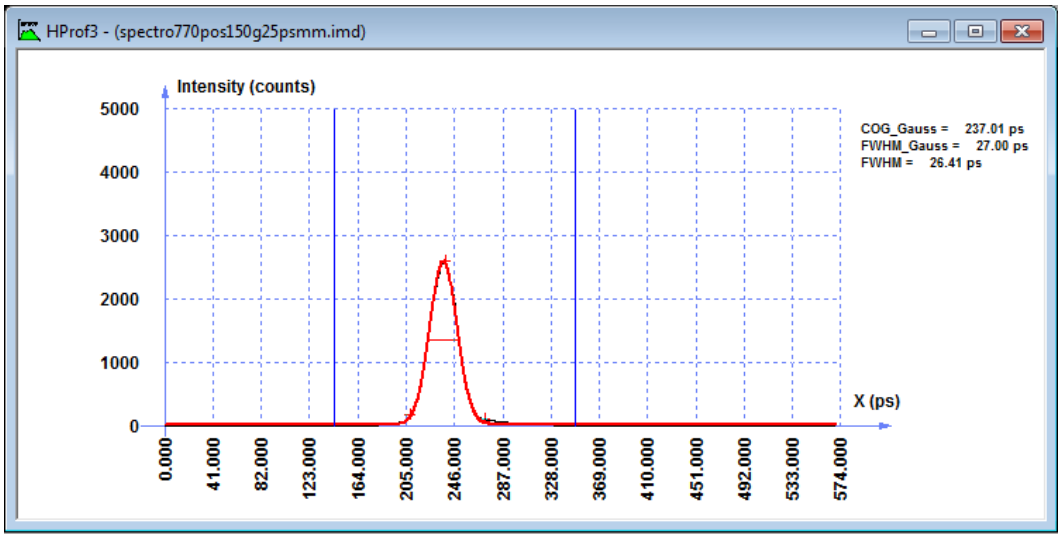

The measurements are applied to the entire profile unless no range of interest is defined. To limit the measurement to a particular part of the profile a range of interest can be defined.

FWHM

The **Full Width at Half Maximum** command enables the automatic calculation of the full width at half maximum value. To find the full width at half maximum, the system assumes that it must find a positive pulse on the profile. The application searches the position of the maximum on the profile and tries to find the position of the left and right minimums.

COG

This command calculates the **Centre of Gravity**. With P_x as profile descriptor the following function is applied.

$$COG = \frac{\sum_{x=0..i-1} x \cdot P_x}{\sum_{x=0..i-1} P_x}$$

Max

This command calculates the **Maximum** of the profile.

$$MAX = Maximum(P_x)$$

FWHM_Gauss

The profile is fitted with a Gaussian function. The function is displayed as red line on the profile. The **Full Width at Half Maximum** of the Gaussian function is calculated. In case the fitting was not possible, no result is displayed.

COG_Gauss

The **Centre of Gravity** of the Gaussian fitting function is calculated. In case the fitting was not possible, no result is displayed.

Max_Gauss

The profile is fitted with a Gaussian function. The **Maximum** intensity value of the Gaussian function is calculated. The measurement adds also the offset, if any, related to the dark counts or dark value. In case the fitting was not possible, no result is displayed.

Window Menu

Cascade

The command arranges all windows in a progression from upper left to lower right of working area.

Tile

This command resizes all windows to fit within the working area.

Arrange Icons

The command aligns icons on the working area.

Window list 1, 2, 3...

List of opened windows on the working area. Selection of a window in the list focuses this window.

About Menu

About Optoscope

The command displays the version of the application.

Annex A: Specifications

Main Function

The software is intending to be installed on a PC platform running under XP and connected to a readout camera used as streak camera readout unit and to the streak camera. The program uses a camera specific driver and eventually an interface board used as frame grabber. The streak camera is controlled via a serial RS-232 interface or a standard Ethernet interface. The software performance depends on the computer used.

Characteristics

PC Platform	WinXP
Streak camera control	SCMU → RS-232
	SC-xx → Ethernet 10/100 Mbps
Real time acquisition	Rate depends on the camera acquisition parameters @continuous
	Frame accumulation and subtraction
Photon counting	Determination of the centre of gravity of each photon impact. Stop condition same as frame accumulation. Maximum rate depends of the PC configuration
Drift correction	Available with synchroscan units. Ethernet communication and reference mark needed, in horizontal or vertical direction
Jitter correction	Reference mark needed. Horizontal and/or vertical direction
Distortion correction	Spatial distortion of optical or electro-optical elements can be corrected.
Repetitive accumulation	Generation of a ASCII report file with parameters for: acquisition date, time, name, max, min, mean value, sigma values, centre of gravity along horizontal and vertical axis, FWHM along horizontal and vertical axis
Display format	grey, gamma or pseudo-colour palette
Export frame	ASCII file, none-compressed, 8 bit format: TIFF, BMP
Processing	Digital filtering: mask size 3x3 to 15x15, uniformity correction, distortion correction, histogram, horizontal and vertical profile
Calibration	Along horizontal and vertical axis, linear, multi-linear law or linear law following the sweep unit installed

Photon Counting

The figure represents the maximum photon counting rate according the number of photon impacts detected in one frame.

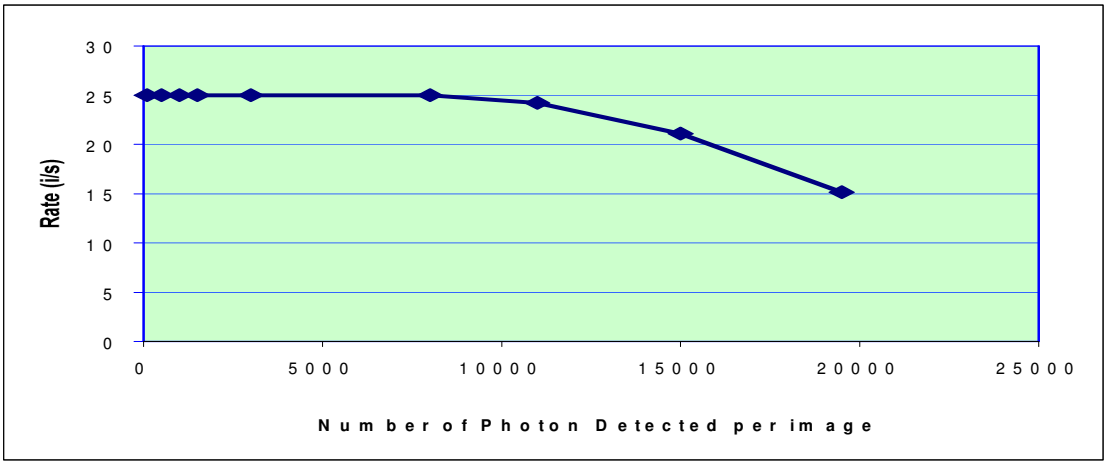

Annex B: Structure of Optoscope files

Frame file with extension .IMD (OptoAnalyse 3.0 and higher)

OptoAnalyse version 3.0 and higher is using the IMage Data (IMD) format to save the radiometric image information on a binary file with the following format.

- A header composed of three 16-bits values [IMD File Version] [W] [H]
- The header is immediately followed with H lines of W columns of 32-bits pixel value. Each pixel value is a 32-bits signed integer. The floating value Pfloat of each pixel is calculated from the 32-bits signed integer value Psi32 with the following formula: Pfloat : Psi32 / 1000

To open a .IMD file, a standard C++ source code would be:

```
FILE *file;
file = fopen("test.imd","rb");
if (file)
{
  unsigned short int VER,W,H;
  // read file version
  // read image width
  // read image height
  fread(&VER,sizeof(unsigned short int),1,file);
  fread(&W,sizeof(unsigned short int),1,file);
  fread(&H,sizeof(unsigned short int),1,file);
  m_s32data = new signed int[W*H];
  // retrieve the 32-bits signed int buffer
  fread(m_s32data,sizeof(signed int),W*H,file);
  fclose(file);
  // If you want to create and use a floating buffer
  with the floating pixel value,
  // proceed like this
  float *fdata = new float[W*H];
  …
  for (int k=0;k<H*W;k++)
  fdata[k] = m_s32data[k]/1000;
  …
  delete fdata;
  …
  delete m_s32data;
}
```

Image Information file with extension .IMI (from OptoAnalyse 3.0)

OptoAnalyse version 3.0 and higher saves an Image Information (.IMI) file to the same location as the .IMD file. The .IMI file is a standard text file that can be easily opened with any text editor. It contains all relevant setup parameters that had been used during the acquisition of the frame.

Frame file with extension IMG (up to OptoAnalyse 1.4)

This information could be used by programmers to read Optronis frame files. The programmer needs to have knowledge in C/C++ programming and Microsoft Foundation Classes. The IMG format is used to save 16 bits data of a frame.

First data in the file is the header containing the .IMG format version, the size of the offset pointer array and the offset pointer array itself.

The header contains:

C/C++ WINDOWS type	Data name	Comment
WORD	WfmtVer	.IMG format version
WORD	WAOffSz	size of offset pointer array
LONG	AlOff[]	data array of offset pointers

The offset is the number of bytes between the beginning of the file and the data. The offset pointer array AlOff[] is used to indicate the starting position of the data as follows:

Offset	Frame comment
AlOff [0]	Horizontal and vertical image size
AlOff [1]	comment
AlOff [2]	reserved
AlOff [3]	reserved
AlOff [4]	reserved
AlOff [5]	image intensity values in 16 bit integer format
AlOff [6]	reserved

The first pointer indicates the position of the horizontal and vertical size information of the image. Data pointed by AlOff[0] is:

C/C++ WINDOWS type	Data name	Comment
WORD	wImgWidth	frame width in pixel
WORD	wImgHeight	frame height in pixel

The second pointer indicates the position of the comment of the frame as entered with the *Frame Comment* command in the *Parameters* menu. Data pointed by AlOff[1] is:

C/C++ WINDOWS type	Data name	Comment
Cstring	strComment	comments of the frame

The pointer indicates the position of the beginning of binary image data. Data pointed by AlOff[5] is:

C/C++ WINDOWS type	Data name	Comment
WORD	wBinary[]	pixel array

Each pixel in the frame is a 16 bits data so the C/C++ WINDOWS type used is a WORD (unsigned 16 bits data). The software saves data line per line.

The pointers AlOff[2..4] and AlOff[6] are used for internal information storage. As the sizes of the corresponding data fields are not fix. Therefore the pointers should be used to find the required data instead of using fixed values that might be correct only for particular files.

Profile files with PRH and PRV extension

The profile file is an ASCII file used to save the data along a horizontal or vertical profile. The extension is PRH for a horizontal profile and PRV for a vertical profile. The array below shows the structure of the ASCII file.

Calibrated

Coordinate	**Value**	**Coordinates of the ROI**				**Terminator**
⇓	⇓	⇓				⇓
Position1,	Value1,	Left,	Top,	Right,	Bottom	CR/LF
Position2,	Value2					CR/LF
Position3,	Value3					CR/LF
.	.					.
.	.					.
PositionN,	ValueN					CR/LF

Each line contains the horizontal (PRH) or vertical (PRV) position and the corresponding value. The numbers are separated by a comma followed by a blank and the lines are terminated by a sequence of characters CR/LF (equivalent in C/C++ to the string « \r\n »). The first line additionally contains the pixel coordinates of the ROI used to calculate the profile.

The column named **Calibrated Coordinate** is the position on the horizontal axis (PRH files) or the position on the vertical axis (PRV files). If no axis calibration is used each number is an integer value of the pixel position. If the calibration is activated, floating point numbers with a point separating the integer and the decimal part are used.

The column named **Value** is the intensity value of the profile.
Up to version 1.46 of the software, a 16 bit integer value is calculated by adding the pixel intensity values. From version 3.00 a floating number is used. This number is also calculated by adding the pixel intensity values but additionally the result is divided by the vertical or horizontal size of the ROI respectively.

The **Coordinates of the ROI** added to the first line are integer values of the upper/left and lower/right pixel positions of the ROI used to create the profile.

Histogram file with HIS extension

The histogram file is ASCII file used to save the histogram information. The extension of the file is HIS. The array below shows the structure of the file

Luminosity Range		**Value**	**Coordinates of the ROI**				**Ter-minator**
⇓		⇓	⇓				⇓
Start1,	End1,	Value1,	Left,	Top,	Right,	Bottom	CR/LF
Start2,	End2,	Value2					CR/LF
Start3,	End3,	Value3					CR/LF
.	.						.
.	.						.
.	.						.
Start256,	End256,	Value256					CR/LF

Each line contains the luminosity range and the corresponding value. The numbers are separated by a comma followed by a blank and the lines are terminated by a sequence of characters CR/LF (equivalent in C/C++ to the string « \r\n »). The first line additionally contains the pixel coordinates of the ROI used to calculate the profile.

When a histogram is calculated, always 256 luminosity groups are used. If for example the intensity range 0..16383 is displayed during the histogram calculation, Start1=0, End1=63 and Value1 is the number of pixels with intensities between 0 and 63.

The two columns named **Luminosity range** is the range of luminosity used to obtain the value. The Start is the first luminosity level and the End is the last luminosity level used. Each Start and End is an integer number.

The column named **Value** is the number of pixel. Each Value is a long integer (OptoAnalyse version 1.46) or a signed integer (OptoAnalyse version 3.0 and higher). For example, if the displayed intensity range is 0 .. 255, the Value1 is the number of pixel with the value 0. The Value256 is the number of pixel with the value 255.

The **Coordinates of the ROI** added to the first line are integer values of the upper/left and lower/right pixel positions of the ROI used to create the profile.

Annex C: List of shortcuts used with the keyboard

Shortcuts for all sections

Ctrl + N	Creates a new document of frame type
Ctrl + O	Opens a document from disk for all types of document supported
Ctrl + S	Saves the current document on disk
Ctrl + P	Prints the current document
Ctrl + C	Copy the current document to the clipboard

Shortcuts for the frame section

Ctrl + D	Applies the current ROI to all other frame windows
Page Up	Zooms in
Page Down	Zooms out
Alt + M	Displays the frame with a linear gray palette
Alt + G	Displays the frame with a gamma corrected gray palette
Alt + C	Sets the pseudo color palette and displays the frame with it
+	Modifies the barrel shifter to see the lower levels of luminosity
-	Modifies the barrel shifter to see the higher levels of luminosity
Alt + R	Starts / stops the real-time display
Alt + S	Acquires one frame in memory
Alt + A	Acquires frame in accumulation or photon counting mode
Shift + F	Opens the digital filter manager dialog box
Shift + O	Processes arithmetic operation
Shift + M	Processes mean value and standard deviation in the frame ROI
Shift + U	Executes a uniformity correction using a previously saved frame
Shift + Q	Executes a distortion correction using the pre-defined distortion correction file
Ctrl + H	Builds a histogram frame
Shift + H	Builds a profile frame doing a projection along the horizontal axis
Shift + V	Builds a profile frame doing a projection along the vertical axis

Shift + I	Sets current frame comment
Alt + O	Loads the current calibration from the disk
Alt + T	Opens the X and Y scaling setup
Alt + N	Flag to apply the default calibration to new frame
Shift + A	Sets acquire parameters used in accumulation or photon counting
Shift + S	Sets sequence name and slice time between each acquisitions
Shift + T	Sets the threshold used in photon counting mode
Shift + N	Opens the timing controller setup
Alt + Shift + G	Opens the geometrical correction setup box
Shift + R	Selects the device used to readout the streak information
Shift + C	Remote controls of the camera
Shift + D	Activates drift correction
Shift + J	Activates jitter correction
Shift + E	Opens correction dialog box for drift/jitter parameter setup

Shortcuts for the profile section

Page Up	Displays the profile part delimited by the two cursors
Page Down	Displays all the profile
Ctrl + Shift + A	Displays the profile with a linear scale
Ctrl + Shift + L	Displays the profile with a logarithm scale
Alt + D	Displays the profile with separated points
Alt + L	Displays the profile with lines between each points
Alt + W	Sets the background color to white
Alt + B	Sets the background color to black

Annex D: Technical data

For each type of camera (SCRU-ST, SCRU-SE-A and ANIMA-PX) and in Continuous and Single-Shot modes, the maximum frame rate has been measured using the OptoAnalyse software.

Camera	Frame size	Exposure time	Acquisition mode	
			Continuous	Single-Shot
SCRU-ST	736 x 576	40 ms	25 fps	12.5 fps
SCRU-SE-A SVGA	1280 x 1024 (no binning)	20 ms	8.3 fps	5.5 fps
	640 x 512 (binning 2 x 2)	20 ms	14.3 fps	7.1 fps
ANIMA-PX	1280 x 1024 (no binning)	20 ms	6.9 fps	6.8 fps
	640 x 512 (binning 2 x 2)	20 ms	10.6 fps	10.4 fps

Minimum PC configuration :
Pentium 4 – 1.8GHz / 256 MB DDR SDRAM

In Single-Shot mode, if triggering frame-rate is greater than the maximum measured frame-rate, some frames are not taken into account during acquisition.

Annex E: Correction Techniques

Principal Considerations

The acquisition and processing algorithms used with this software allows to correct a certain number of streak camera and readout camera imperfections. The following description is based on this system model.

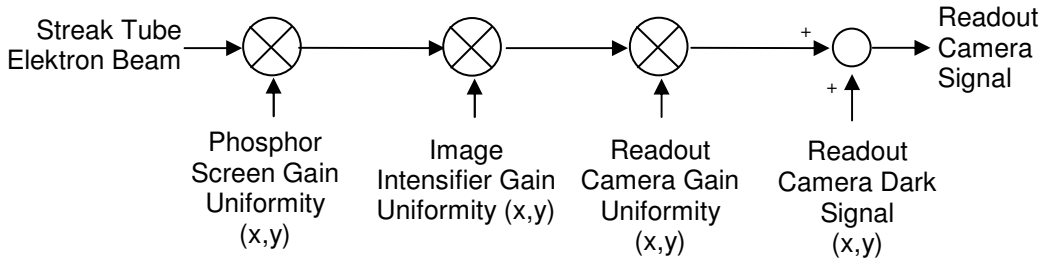

The conversion efficiency of the streak tube phosphor screen, the gain of the image intensifier (if installed) and also the sensitivity of the readout camera including the coupling between screen and sensor chip is ideally constant all over the active readout area. Practically it is a function of position and to a minor extend also of the gain adjustment of the image intensifier. The conversion efficiency of the streak tube phosphor screen and the image intensifier gain might be modified by small area defects like blemishes (small dark spots). Larger area defects are typically caused by MCP gain non-uniformity or coupling optics vignetting. The uniformity of streak tube phosphor screen, image intensifier and readout camera can be combined to one single uniformity process. The dark signal of the readout camera is added to the image from the streak camera. All defects typically have a fixed pattern character. Therefore the components should not be moved with respect to each other after the dark signal frames and uniformity frames are acquired. The display orientation as defined in the readout camera setup box must not be changed after the acquisition of dark signal frames or uniformity frames.

In order to use the correction algorithms effectively and to obtain best results, the correction frames need to be acquired in a specific way. To optimize the correction algorithm it might be necessary to adapt the acquisition procedure to specific operation conditions.

Acquisition of Dark Signal Frame

In order to allow a dark signal correction, the darks signal has to be acquired separately. For most systems, the dark signal should be acquired the following way:

1. Reduce the streak camera gain to minimum and switch of the image intensifier (if installed) by selecting a non active trigger source. Alternatively, the streak camera might be completely switched off.
2. Select the readout camera setup box and adjust the parameters similar to those to be used during image acquisition later. Typically no binning,

full sensor readout region, 40ms integration time and continuous readout mode should be selected.

3. Select the acquisition setup box and deactivate all corrections. Set accumulation to 100.

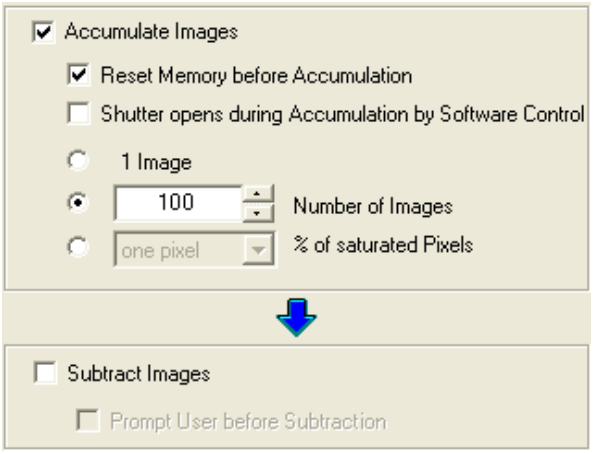

4. Start acquisition after the readout camera has been operated for at least 30 minutes.
5. The acquired frame needs to be divided by the number of frames accumulated.

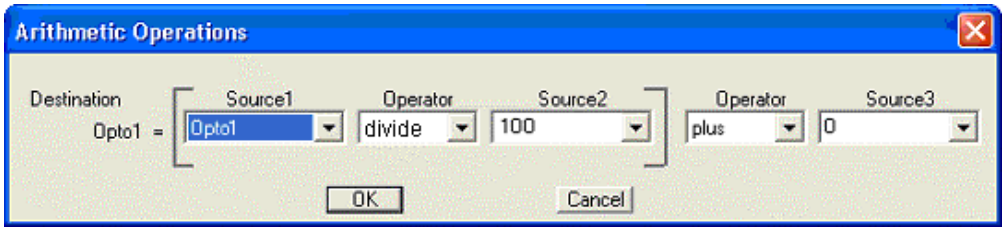

6. Save the frame on disk. If different setup parameters for the readout camera will be used during the system operation later, it is possible to repeat this procedure for different setups and to save different dark frames on disk.

Acquisition of Uniformity Frames

The acquisition of uniformity frames allows to correct the non-uniformity of the system. The way how the uniformity frames need to be acquired depends upon the parameters (intensifier gain, accumulation mode, correction algorithm) set for the system operation later. Manly the accumulation mode used later on needs to be know for correct uniformity frame acquisition. Typically the following description will give a useful help:

1. Operate the streak camera with one sweep unit. FSSU1 or STSU1 are best suited but also FTSU1 can be used. For FSSU1 select the fastest speed and provide the synchronization signal with the nominal frequency. For STSU1 10 µs/mm and for FTSU1 500 ps/mm should be selected. This units need to be triggered at about 1 kHz.
2. A variable and continuous light source is needed to illuminate the input slit homogeneously. The slit should be set to about 100 µm.

3. The image intensifier should operate in continuous mode. Intensifier gain should be set to about 50% to 75% its max. voltage. Other gain setting can be used if the streak camera is typically operated at this gain.
4. Select the readout camera setup box and adjust the parameters similar to those to be used during image acquisition later. Typically no binning, full sensor readout region and continuous readout mode should be selected. Integration time can be set to larger values in order to get a good signal to noise ratio during uniformity frame acquisition.
5. Close the fish-tail slide, activate the real-time mode of the readout camera and open the electro-magnetic shutter (if available). Now slowly open the fish-tail slide and adjust slit width and illumination in order to get a uniform image on the screen. The intensity should be significantly higher than the noise level but still far from readout camera saturation. Close the shutter during the following setup.
6. Set the acquisition mode without any uniformity correction activated but with the option to subtract images.

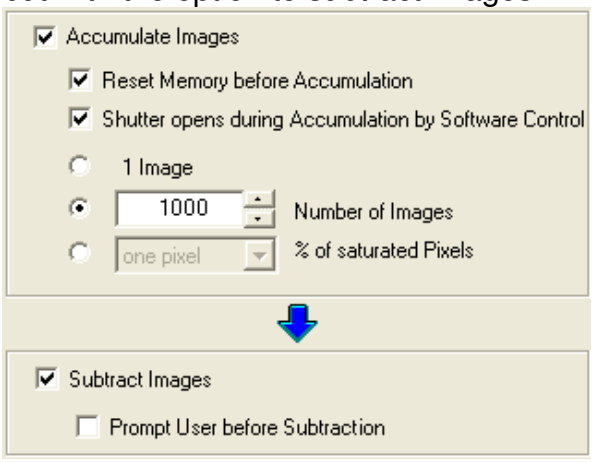

7. Start acquisition after the readout camera has been operated for at least 30 minutes. Verify during the accumulation that no saturation of the memory occurs. Reduce number of images is necessary.
8. Save the frame on disk. If different image intensifier gains will be used during the system operation later, it is possible to repeat this procedure for different setups and to save uniformity correction frames on disk.

Distortion Correction

Principle

Non perfect imagine characteristics of optical or eletro-optical components may be present causing objects to appear deformed on the image. The OptoAnalyse software allows to correct typical defects like barrel and cushion distortions introduced by input optics, streak tube or readout camera.

Figure below shows the readout image of a system with barrel distortion. Points 1 to 25 should appear aligned on straight lines instead on bended lines.

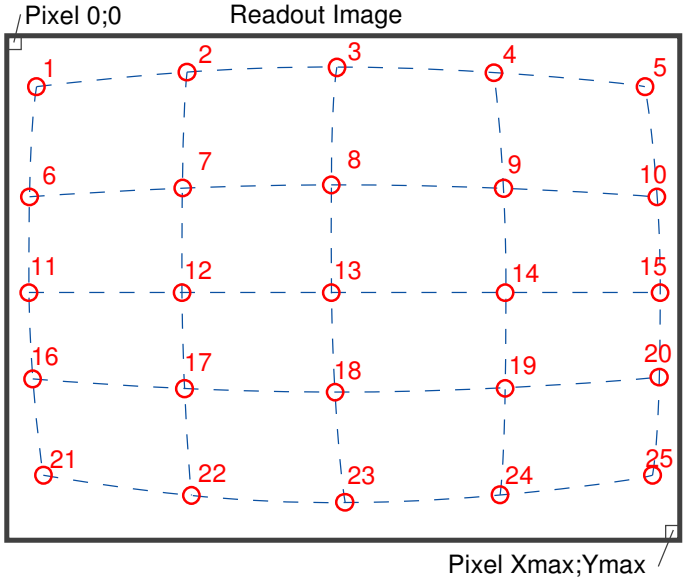

For each bended line a straight line is calculated to pass as close as possible the all relevant points. The image is deformed to move each point to its position on this straight line. The resulting image is shown below.

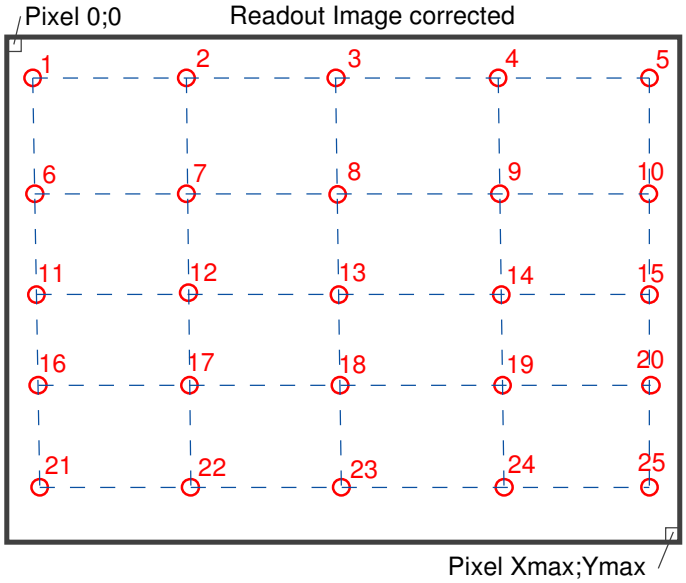

The distorted frame might be capture by the readout camera alone. In this case the defects of only the readout camera will be corrected. If the distorted frame is captured by using the streak tube, also the associated distortion effects of the streak tube are corrected.

In case distortion correction is used in combination with jitter correction the results will in principle not be correct. For practical work it will depend on the amount of jitter expressed in pixels compared to the total pixel count whether the distortion correction might still improve measurement quality.

To enable distortion correction, the distorted image is used and points on horizontal and vertical lines are defined. The more points are used the better the result. Typically 25 to 200 points should allow a precise correction. The points are defined and a matrix of points has to be available as distortion text file (.txt). The correction is not aligning the points on strictly parallel lines nor is the algorithm aligning the points on equally spaced lines. The image used for point definition has to be acquired with the same spatial resolution and image orientation as the images that need to be corrected.

The distortion correction can be initiated for each image individually by using the **Distortion Correction** command on the **Processing** menu. The distortion correction can be done automatically at the end of each acquisition by activating the corresponding correction on the **Acquisition Setup** menu.

Distortion Correction with different Display Orientation

The display orientation of the image acquired by the readout camera can be defined according to the Setup/Readout Camera. The image format used for image saving corresponds to the display format. In order to obtain the required distortion correction, the distorted image has to be acquired with the same display orientation as the images that need to be corrected later. So after the acquisition of the distorted image and the generation of the distortion text file, the display orientation must not be modified. In case where the distortion correction is correcting also the streak tube distortion also the mechanical installation of the readout camera on the streak unit must not be modified.

Distortion Text File

To allow the distortion correction a matrix of points need to be defined and saved on the distortion text file. This file might be generated manually by using a text editor. Pixel coordinates can be calculated with OptoAnalyse or any another method. An alternative and somewhat easier way is to use the graphical distortion grid editor available at SETUP/DISTORTION CORRECTION menu.

For both ways to generate the distortion text file, general guidelines should be considered. The point definition is based on an image showing the distortions that need to be corrected. The horizontal and vertical pixel positions of each point need to be determined. As shown above the points have to be aligned on lines. The line orientation should be horizontal or vertical. The lines do not need to be parallel nor equally spaced. The matrix of points should cover to whole image to avoid artefacts caused by extrapolation.

For manual distortion text file generation the list below shows the requirements of the distortion text file:

- The first line of the text file defines the total number of pixels (maximum pixel number Xmax + 1 and Ymax + 1) in horizontal and vertical direction. Both numbers are separated by a semicolon (;). Images that will be corrected have to have the same number of pixels.
- Each point is defined by its pixel coordinate. The coordinate can be integer or real. The first number defines the horizontal position, the second number defines the vertical position. The numbers are separated by a semicolon (;).
- The number of points has to be identical for every horizontal line.
- The number of points has to be identical for every vertical line.
- The number of horizontal lines has to be min. 5 and the number of vertical lines has to be at least 5.
- All points on a horizontal line are typed on one text line. The points are separated by a slash (/). The line ends with carriage return.
- The order as shown above has to be respected. The first point on the first line on the distortion image has to be defined first on the distortion text file.
- Additional space characters can be used.

The Text file below shows an example with an image with 1392 x 1024 pixel size having 5 horizontal lines and 5 points for each line.

```
1392;1024
50;27 / 393;10.5 / 804;5 / 1172.5;14 / 1348;23
44;338 / 394;328 / 813;325 / 1186;327 / 1364;330
45;565 / 397;564 / 818;562 / 1191;558 / 1369;556
53;840 / 403;845 / 820;844 / 1191;833 / 1368;826
55;990 / 405;997 / 820;998 / 1189;981 / 1367;973
```

Distortion Binary File

For the execution of the distortion correction the distortion binary file is needed. This file is calculated by the OptoAnalyse software.

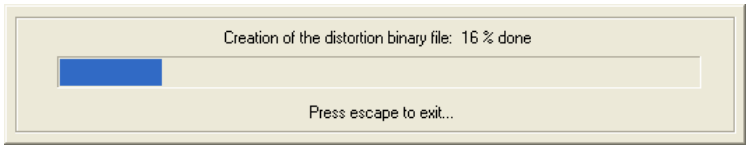

The distortion binary file is created when distortion correction is activated on the **Processing Menu** or when distortion correction is defined in the **Acquisition Setup**. The file is saved with the same file name as the distortion text file but with the extension .bin. Both files have to be saved in the same directory. In case no distortion binary file is available or in case the date and time code of the binary file is older than the text file, a new binary file is calculated.

Trouble Shooting

Program Start

After starting OptoControl the program tries to communicate with the streak camera. In case the communication is not possible the box below appears.

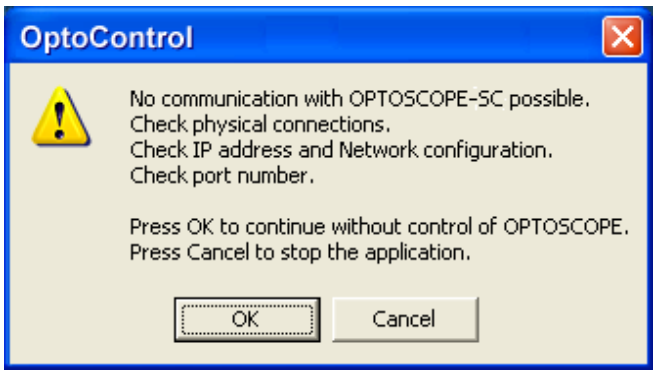

Make sure the streak camera is in Standby mode or On mode. Verify the correct RS-232 cable or network cable is used and plugged correctly. Hint: If a peer-to-peer connection between the streak camera and the PC is used, make sure to use a cross-over network cable.
Also verify whether the OptoAnalyse software had been installed in a multi camera configuration. In this case the INIT.INI file contains the serial number of the streak camera. INIT.INI file configuration and physically connected device have to fit.

IP and Mask of Streak Camera unknown

If no communication with the camera is possible verify the correct IP setting of the OptoControl Program. Set the IP and Mask according to the indications on the rear of the streak camera main unit.

IP Conflict

An IP conflict might appear in case the static IP of the streak camera is used by another device in the same network. Consult the network administrator to prevent other devices to use the static IP of the streak camera. Alternatively a peer-to-peer connection can be used to avoid any conflicts.

Password Unknown

If no communication with the camera is possible verify the correct IP setting of the OptoControl program. Set the IP and Mask according to the indications on the rear of the streak camera main unit.

Two Ethernet Interfaces on the PC

If more than one Ethernet interface is installed in the PC make sure to use different sub-networks as underlined below. Example:

IP1: 192.254.127.254

IP2: 192.254.128.12

Network Settings Reset

In case none of the hints above allowed to establish a communication with the SC-xx streak camera, the network parameters of the camera can be set to the factory settings. Please refer to the streak camera user manual for details.

Readout Camera not found

After program start the OptoAnalyse software tries to communicate with the readout camera. In case communication fails an error message is displayed.

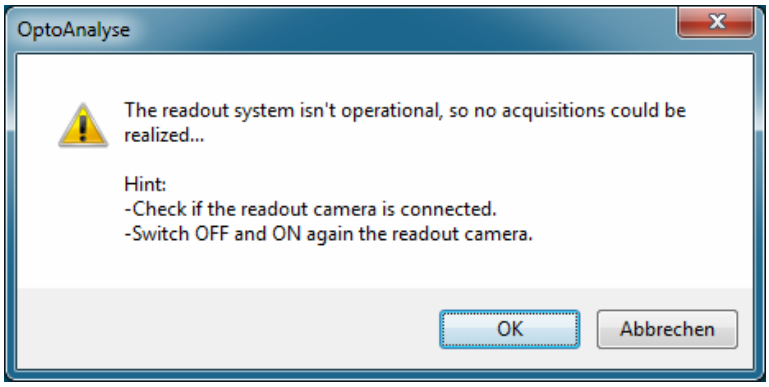
OptoAnalyse
The readout system isn't operational, so no acquisitions could be realized...
Hint:
-Check if the readout camera is connected.
-Switch OFF and ON again the readout camera.
OK
Abbrechen

Please verify:

1. Is there a physical link between the PC and the readout camera?
2. Is the readout camera powered up (except ANIMA-PX)?
3. Is the OptoAnalyse compilation consistent with the readout camera connected? See below for details.
4. Switch OFF and ON again the readout camera prior to start OptoAnalyse
5. Readout camera IP address for the SRU-BA model

Press *Ignore* if the OptoAnalyse software should be operated in stand alone mode for example for post measurement analysis.

Press *Abandon* if the software will be used for measurements. Connect the readout camera and make sure the camera is operating before the OptoAnalyse program is started again.

OptoAnalyse does not show readout images

The OptoAnalyse software is compiled according to a specific readout camera. Optronis makes sure to provide the right program compilation according to the actual customer configuration. To verify whether the program compilation is consistent with the readout camera, please use the *About OptoAnalyse* command in the *About* menu. Contact your distributor or Optronis for assistance.

SCRU-SE-A Readout Camera is not working

Hints when the LED on the camera is not green:

- LED is off: Camera is off. Verify power supply connections and switch on the camera.
- LED is red: No communication between frame-grabber and camera. Verify cable between camera and frame-grabber. The coaxial cables might be inverted or the PC might be switched off.
- LED is blinking red/green: SENSOR temperature is still too high. Wait until SENSOR operating temperature is reached.
- LED is blinking red: SENSOR temperature is still too high and coaxial cables are inverted.

No Realtime display and no Acquisition possible

In case the OptoAnalyse software had been started with the readout camera not connected or not switched on, the software needs to be closed and re-started after the readout camera is connected and operating.

In case the realtime display had been possible before, very probably the frame window used for the realtime display had been closed. Use *New* command of the *File* menu to get a new frame window allowing realtime display and image acquisition.

Configuration mismatch in multi camera configurations

If the OptoAnalyse software had been installed different times in order to control different streak camera systems error messages on program start might appear.

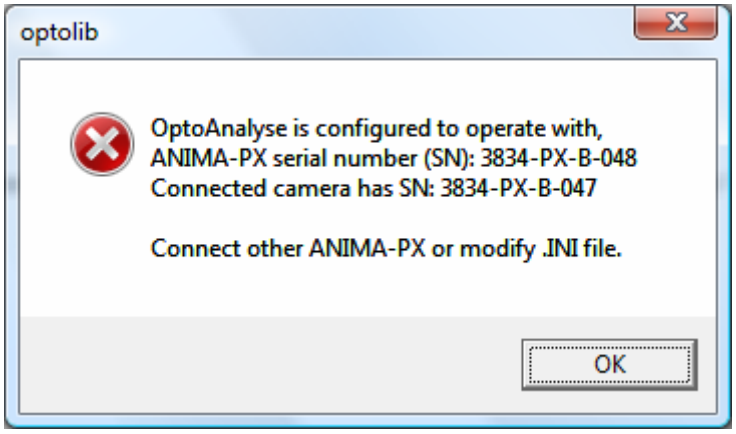
optolib
OptoAnalyse is configured to operate with,
ANIMA-PX serial number (SN): 3834-PX-B-048
Connected camera has SN: 3834-PX-B-047
Connect other ANIMA-PX or modify .INI file.
OK

Serial number inside the camera memory and serial number written in the INIT.INI file are not identical. It is likely that the correct ANIMA-PX readout camera is not connected.

Alternatively the configuration of the camera or software has to be modified. Use PX-Programmer to verify whether the correct number is programmed inside the camera memory. Eventually modify this number and make sure the same number is written on the INIT.INI file of this software installation.

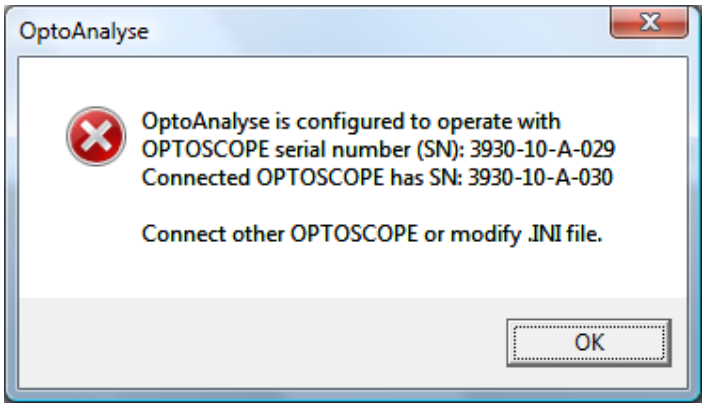
OptoAnalyse
OptoAnalyse is configured to operate with
OPTOSCOPE serial number (SN): 3930-10-A-029
Connected OPTOSCOPE has SN: 3930-10-A-030
Connect other OPTOSCOPE or modify .INI file.
OK

Streak camera serial number inside the main unit and serial number written in the INIT.INI file are not identical. Possibly, the wrong streak camera main unit is connected. Connect the right streak camera. Verify IP address of the camera and compare with the *Setup/Streak Camera Setup/Network Setup.*

Alternatively the configuration of the software has to be modified.

- Delete the serial number of the “OPTOSCOPE_SN” parameter on the INIT.INI file and start OptoAnaylse again. If only “OPTOSCOPE_SN = “ appears on the INIT.INI file the OptoAnalyse software will control any streak camera found. Make sure only one main unit is connected when starting the software.
- Verify the serial number displayed on the “Network Setup” box of the “Streak Camera Setup” menu. It has to be identical to the SN printed on the camera.
- Write the SN of the streak camera main unit in the INIT.INI file.

Remark: Not specifying the serial number of the streak camera or readout camera might simplify setup but might cause problems during system operation as correspondence between software and hardware is lost.

No Geometrical Correction is processed

The geometrical corrections are not executed although they are defined in the Setup/Geometrical Correction menu. Different reasons are possible.

- The correction already had been done.
- Missing information of sweep unit and selected sweep speed for the image to be corrected. This information is saved in the .IMI file except the steak camera had not been controlled by the OptoAnaylse software during the acquisition.
- Image format mismatch. The geometrical data are related to a particular image size in horizontal and vertical pixels. This changes if binning is activated or if the display orientation is changed in the Setup/Readout Camera menu.